


/ DEVICE RESET PROCEDURE

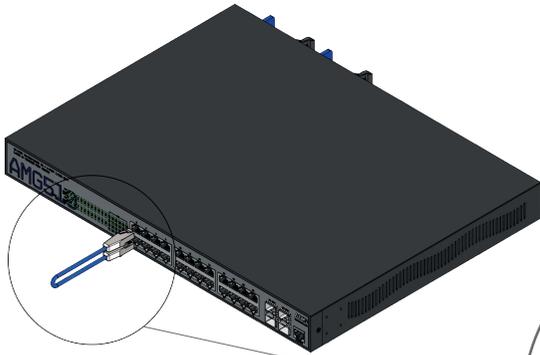

- ① Remove all connections from the RJ45 & SFP ports.
- ② Insert an Ethernet patch cable between ports 1 & 2 on the switch.

③ Power cycle the switch with the loop-back cable in place and the switch will reboot and apply the factory default configuration settings.

④ Remove the loop-back cable and re-connect the existing Ethernet and optical patch cables.

/ CONNECTING TO THE SWITCH



Web GUI


Default IP Address:	192.168.1.101
Username:	admin
Password:	admin

Console CLI

RJ45 to DB9 Cable	115200,8,N,1
-------------------	--------------

To access the full software user guide for this product please visit the product page using the QR code opposite or the direct link below:


amg-support.com/AMG510-24GAT-4XS-RP540

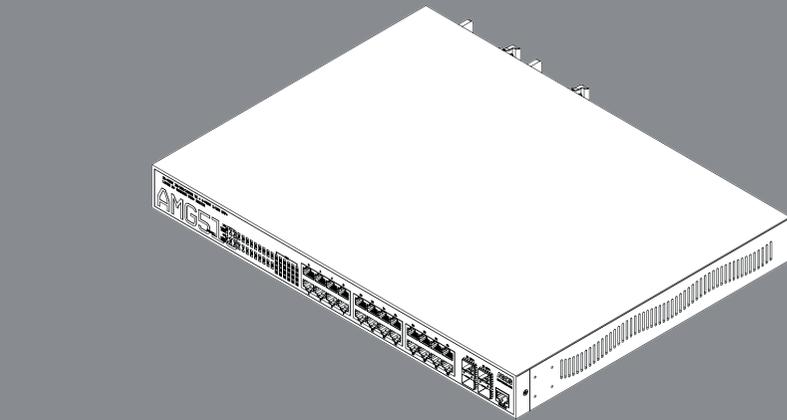

AMG510-24GAT-4XS-RP540 10Gb Layer 2+ Ethernet Switch

Installation Manual - Hardware


/ AMG510-24GAT-4XS-RP540 MODEL

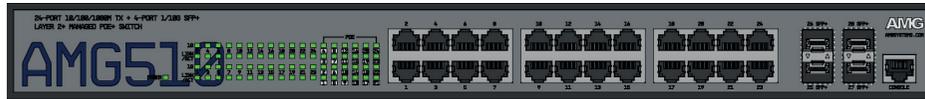


AMG510-24GAT-4XS-RP540

Model	Description
AMG510-24GAT-4XS-RP540	24 x 10/100/1000T(x) Ports With 30W PoE+ (540W Budget) + 4 x 1/2.5/10Gb SFP+ Ports, Dual Redundant Mains Power Supplies

/ RACK MOUNT INSTALLATION

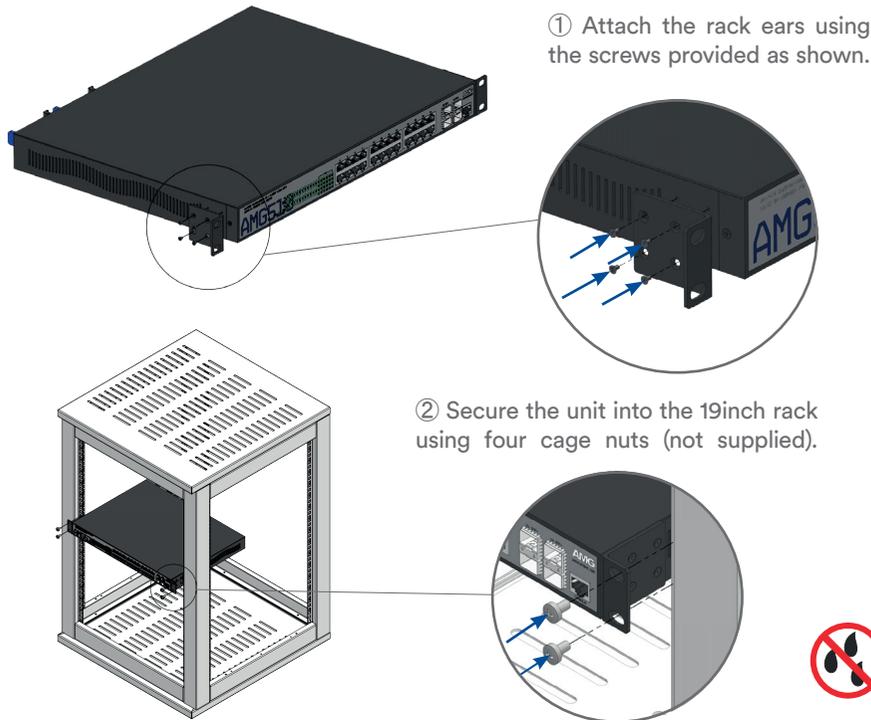


/ DESKTOP INSTALLATION

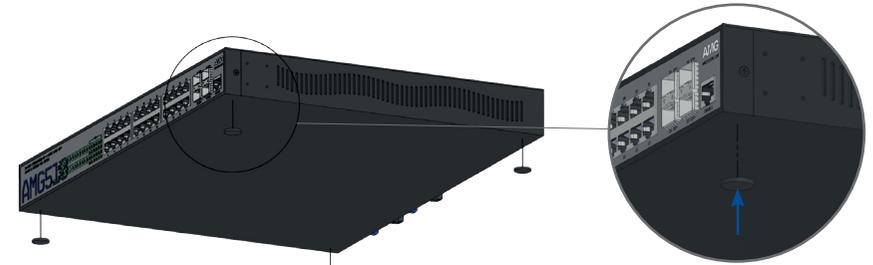

① Attach the rubber feet supplied as shown to prevent scratches.

/ PORTS & LED INDICATORS

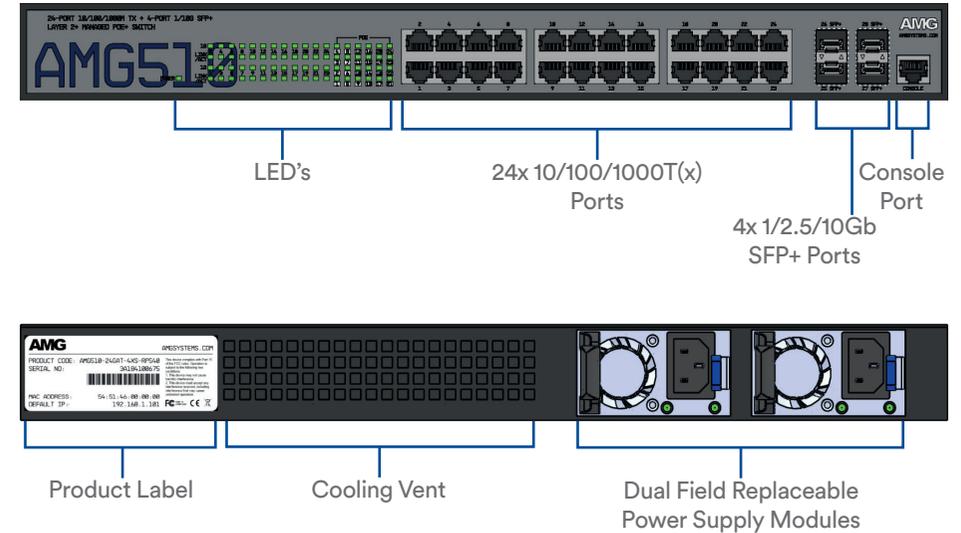

LED	Colour	Description
POWER	Yellow	Power On
LINK/ACT	Green	Link present (flashes with data traffic activity)
1G	Green	Port is connected at 1Gb speed
POE	Yellow	PoE is enabled on the port*

* If a PD is connected and the switch exceeds the maximum PoE budget the PoE LED will start blinking. In this case no power will be provided and the user must allocate power manually.