

# Serial Converter

## Quick Start Guide

V1.0.0



## 1 Installation

1.1 Loosen the screws of Hub 2.


1.2 Detach the panel of Hub 2 by pulling it down.

1.3 Application scenario.


The converter is used to convert Hub 2 RS-232 signals to RS-485 signals. It allows the Hub 2 to connect to the RS-485 bus expansion module.

 The Hub 2 must be turned off before wiring.

1.1

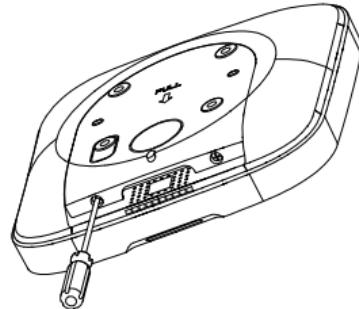

1.2

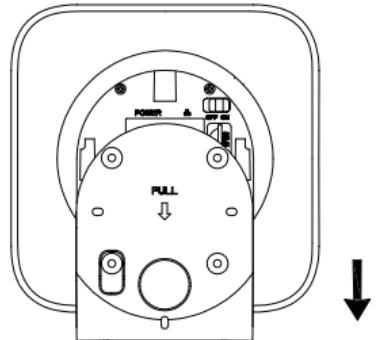

1.3

