 


Tool list

No installation tools are provided with the AP. Prepare tools yourself as required.

 


Torque screwdriver

Needle-nose pliers

Wire stripper

Rubber hammer



Drill

 
Hammer drill

Marker

Heat gun

Installation accessories

Installation accessories provided with the device:





Mounting bracket

M4 x 30 mm pan-head screw set

Screw anchor and screw


1

Device/mounting bracket dimensions

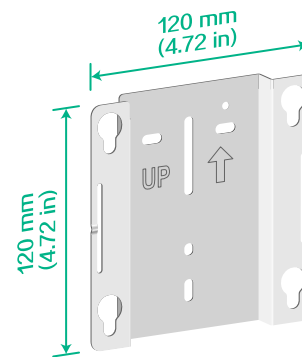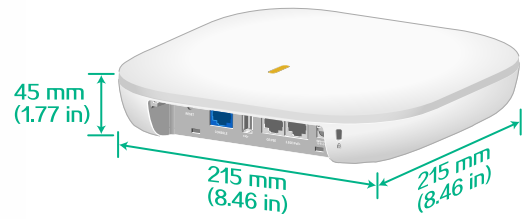


2


Mounting the device on a wall

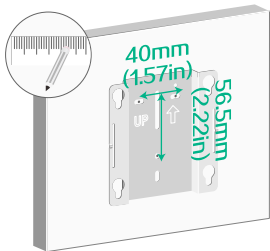

1 Mark installation hole locations on the wall.

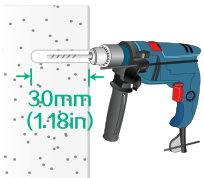


2 Drill holes with a diameter of 6mm (0.24 in) at the marked locations.

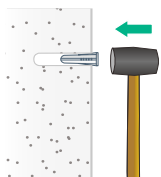


3 Hammer an expansion anchor into each hole.

3

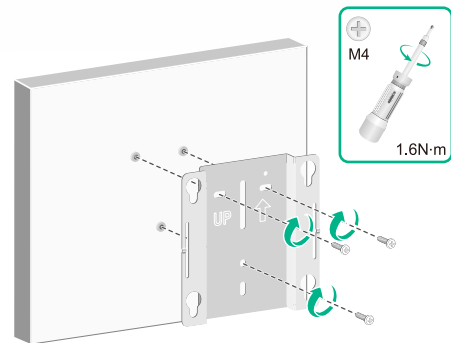


4 Use screws to attach the mounting bracket to the wall.

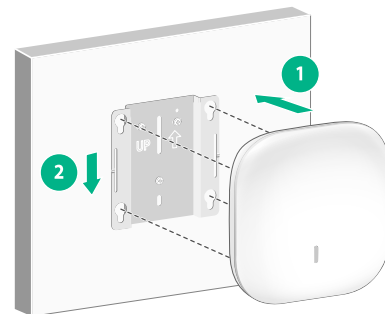


5 Align the projections at the device rear with the installation holes on the mounting bracket, and rest the device on the bracket. Then slide down the device until it clicks into place.

4

Mounting the device on the ceiling

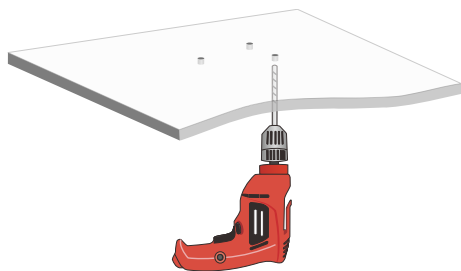


- 1 Remove the ceiling tile and mark installation holes. Drill three holes in the ceiling tile.

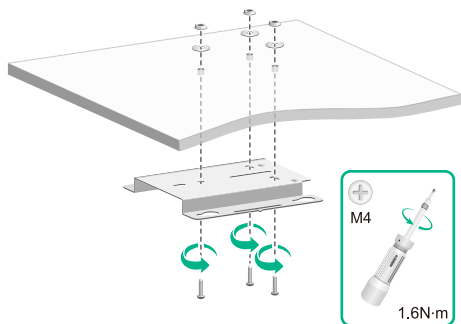

- 2 Use the supplied pan-head screws to attach the mounting bracket to the ceiling tile.

5

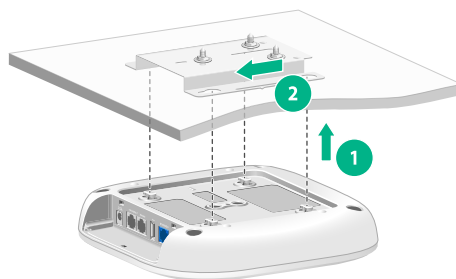

- 3 Align the projections at the device rear with the installation holes on the mounting bracket, and rest the device on the mounting bracket. Then slide the device horizontally until it clicks into place.


Connecting a power adapter

The AP is not provided with a power adapter. Order it yourself.


Power adapter specifications:

Item	Specification
Input	100–240V AC
Output	+48V~+55V DC ⊖—⊕—⊕
Output power	≥35W

6

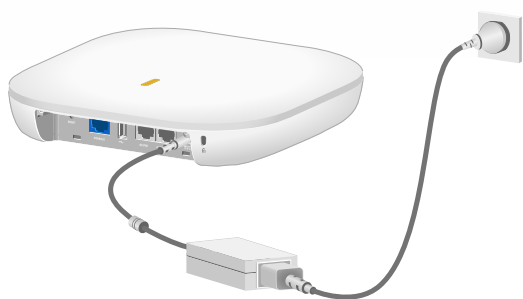

Connecting an Ethernet cable

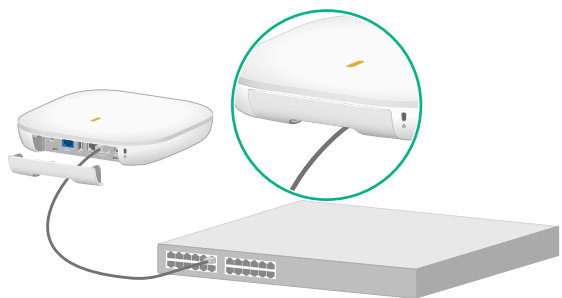

To power the AP through PoE, use an Ethernet cable to connect an Ethernet port on a PoE switch to the 25GE/PoE+ port on the AP. After you complete connecting cables to the AP, attach the cable cover securely to the AP.

7