


UHF WINDSHIELD TAG

installation sheet


19-05-2015 | v1.0

Step 1*

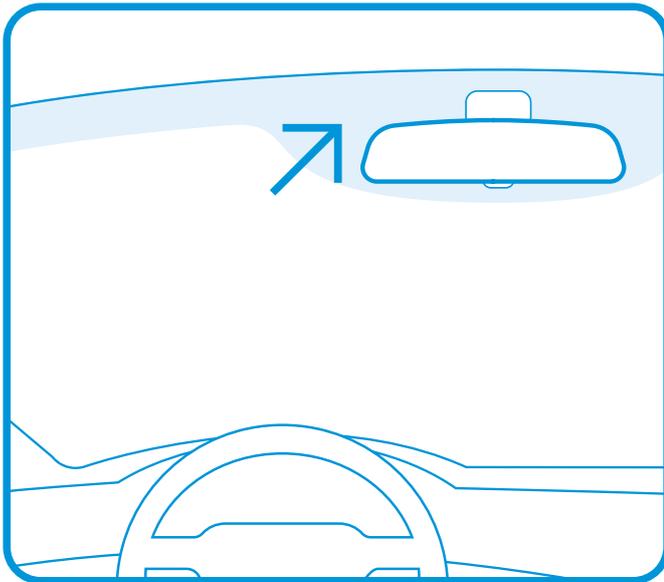


Determine the position of the Windshield Tag on the inside of the vehicle's window*.

Step 2

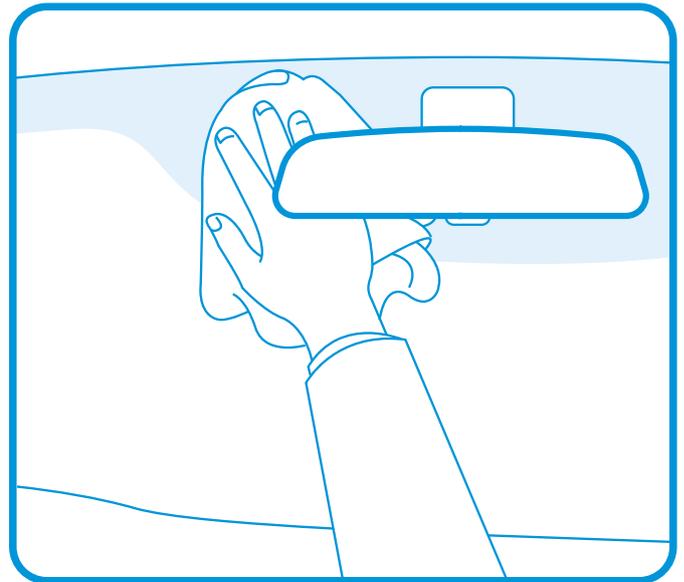


Clean the inside surface of the window. Make sure the window is completely oil and dirt free.

Step 3

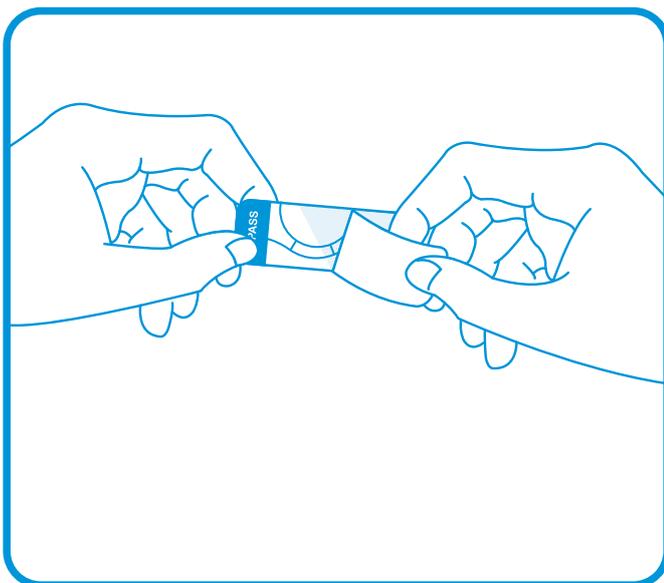


Remove the tag's protection layer. Avoid touching the adhesive side as much as possible.

Step 4

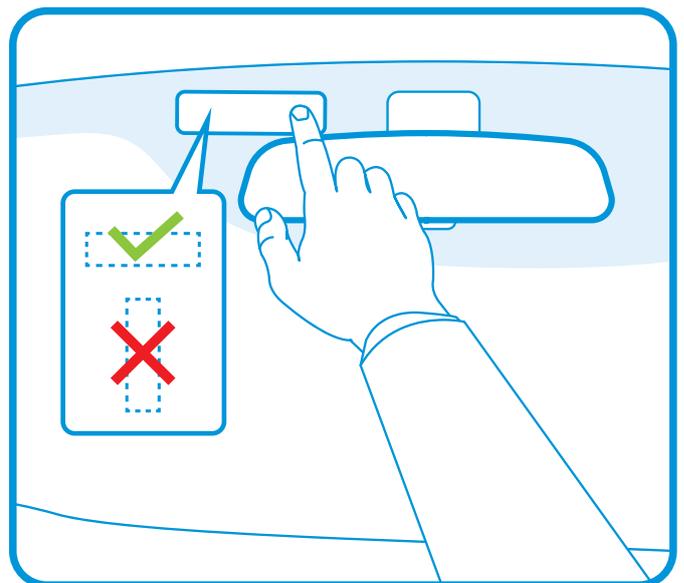

Ensure that the tag is positioned horizontally and in line of sight of the uPASS Reach reader.

Step 5

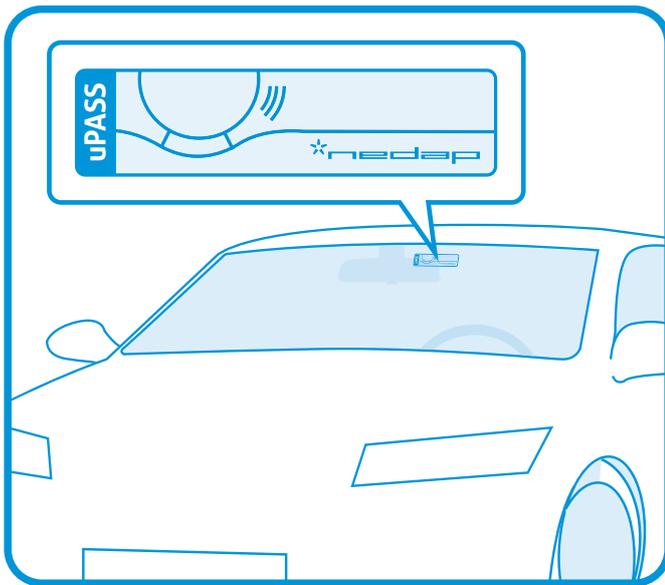

The UHF Windshield Tag has now been mounted correctly.

***Important note**

We advise to mount the tag on the same side as where the long-range reader has been positioned. In case of a metalized windshield, we advise to place the UHF Windshield Tag 2 inches from window top / 0-4 inches from the rear view mirror to ensure the performance of the UHF Windshield Tag. Usually, vehicles with metalized windshields (also called solar control coatings) have a non-metalized communication window behind and on either side of the rear view mirror of the vehicle. For more specific information, please contact your vehicle owner manual or contact your dealership. Compliance with these instructions is important and strongly recommended in order to ensure proper operation of the system.