

# **Cybersecurity Recommendations**

#### Mandatory actions to be taken towards cybersecurity

#### 1. Change Passwords and Use Strong Passwords:

The number one reason systems get "hacked" is due to having weak or default passwords. It is recommended to change default passwords immediately and choose a strong password whenever possible. A strong password should be made up of at least 8 characters and a combination of special characters, numbers, and upper and lower case letters.

#### 2. Update Firmware

As is standard procedure in the tech-industry, we recommend keeping NVR, DVR, and thermal imaging camera firmware up-to-date to ensure the system is current with the latest security patches and fixes.

#### "Nice to have" recommendations to improve your network security

#### 1. Change Passwords Regularly

Regularly change the credentials to your devices to help ensure that only authorized users are able to access the system.

#### 2. Change Default HTTP and TCP Ports:

• Change default HTTP and TCP ports for systems. These are the two ports used to communicate and to view video feeds remotely.

• These ports can be changed to any set of numbers between 1025-65535. Avoiding the default ports reduces the risk of outsiders being able to guess which ports you are using.

#### 3. Enable HTTPS/SSL:

Set up an SSL Certificate to enable HTTPS. This will encrypt all communication between your devices and recorder.

#### 4. Enable IP Filter:

Enabling your IP filter will prevent everyone, except those with specified IP addresses, from accessing the system.

#### 5. Change ONVIF Password:

On older IP Camera firmware, the ONVIF password does not change when you change the system's credentials. You will need to either update the camera's firmware to the latest revision or manually change the ONVIF password.

#### 6. Forward Only Ports You Need:

• Only forward the HTTP and TCP ports that you need to use. Do not forward a huge range of numbers to the device. Do not DMZ the device's IP address.

• You do not need to forward any ports for individual cameras if they are all connected to a recorder on site; just the NVR is needed.

#### 7. Disable Auto-Login on SmartPSS:

Those using SmartPSS to view their system and on a computer that is used by multiple people should disable auto-login. This adds a layer of security to prevent users without the appropriate credentials from accessing the system.

#### 8. Use a Different Username and Password for SmartPSS:

In the event that your social media, bank, email, etc. account is compromised, you would not want someone collecting those passwords and trying them out on your video surveillance system. Using a different username and password for your security system will make it more difficult for someone to guess their way into your system.

#### 9. Limit Features of Guest Accounts:

If your system is set up for multiple users, ensure that each user only has rights to features and functions they need to use to perform their job.

#### 10. UPnP:

• UPnP will automatically try to forward ports in your router or modem. Normally this would be a good thing. However, if your system automatically forwards the ports and you leave the credentials defaulted, you may end up with unwanted visitors.

• If you manually forwarded the HTTP and TCP ports in your router/modem, this feature should be turned off regardless. Disabling UPnP is recommended when the function is not used in real applications.

#### 11. SNMP:

Disable SNMP if you are not using it. If you are using SNMP, you should do so only temporarily, for tracing and testing purposes only.

#### 12. Multicast:

Multicast is used to share video streams between two recorders. Currently there are no known issues involving Multicast, but if you are not using this feature, deactivation can enhance your network security.

#### 13. Check the Log:

If you suspect that someone has gained unauthorized access to your system, you can check the system log. The system log will show you which IP addresses were used to login to your system and what was accessed.

#### 14. Physically Lock Down the Device:

Ideally, you want to prevent any unauthorized physical access to your system. The best way to achieve this is to install the recorder in a lockbox, locking server rack, or in a room that is behind a lock and key.

#### 15. Connect IP Cameras to the PoE Ports on the Back of an NVR:

Cameras connected to the PoE ports on the back of an NVR are isolated from the outside world and cannot be accessed directly. And the condition above is only for cameras with PoE ports.

#### 16. Isolate NVR and IP Camera Network

The network your NVR and IP camera resides on should not be the same network as your public computer network. This will prevent any visitors or unwanted guests from getting access to the same network the security system needs in order to function properly.

# **Regulatory Information**

## **FCC** Information



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### FCC conditions:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

#### FCC compliance:

This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the guide, may cause harmful interference to radio communication.

- For class A device, these limits are designed to provide reasonable protection against harmful interference in a commercial environment. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
- For class B device, these limits are designed to provide reasonable protection against harmful interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

# General

This user's manual (hereinafter referred to as "the Manual") introduces the characteristics, basic configurations, daily operation and maintenance of the thermal camera (hereinafter referred to be "the Device").

Thermal hybrid camera contains all the binocular and trinocular cameras.

#### Models

**TPC5** series

# Safety Instructions

The following categorized signal words with defined meaning might appear in the Manual:

Signal Words	Meaning
	Indicates a high potential hazard which, if not avoided, will result in
	death or serious injury.
	Indicates a medium or low potential hazard which, if not avoided,
	could result in slight or moderate injury.
	Indicates a potential risk which, if not avoided, could result in
	property damage, data loss, lower performance, or unpredictable
	result.
© <u> </u>	Provides methods to help you solve a problem or save you time.
	Provides additional information as the emphasis and supplement to
	the text.

#### **Revision History**

No.	Version	Revision Content	Release Time
1	V1.0.0	First release.	January 13, 2017
2	V1.0.1	"Cybersecurity Recommendations" added.	October 18, 2017
3	V1.0.2	<ul> <li>Content about device initialization added.</li> <li>Interface screenshots updated.</li> <li>Description of reserved spots' input and output added.</li> <li>Content about safety management added.</li> </ul>	February 1, 2017

No.	Version	Revision Content	Release Time
		<ul> <li>Function of safety management modified.</li> </ul>	
4	V1.0.3	Parameters of camera modified.	July 15, 2018
		• Screenshots of interfaces updated.	
		GDPR requirements added.	

## **Privacy Protection Notice**

As the device user or data controller, you might collect personal data of others such as face, fingerprints, car plate number, Email address, phone number, GPS and so on. You need to be in compliance with the local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures include but not limited to: providing clear and visible identification to inform data subject the existence of surveillance area and providing related contact.

## About the Manual

- The Manual is for reference only. If there is inconsistency between the Manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the Manual.
- The Manual would be updated according to the latest laws and regulations of related regions. For detailed information, see the paper manual, CD-ROM, QR code or our official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.
- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the Manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, please refer to our final explanation.
- Upgrade the reader software or try other mainstream reader software if the Manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the Manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurred when using the device.
- If there is any uncertainty or controversy, please refer to our final explanation.

# **Table of Contents**

Cybersecurity Recommendations	I
Regulatory Information	III
Foreword	IV
1 Product Introduction	1
1.1 Overview	1
1.2 Features	1
1.3 Functions	2
2 Basic Settings	7
2.1 Device Initialization	7
2.2 Modifying IP Address	
2.2.1 Modifying One IP Address	
2.2.2 Modifying Several IP Addresses	9
2.3 Logging in Web Interface	
2.4 Resetting Password	11
3 Daily Operation	
3.1 Live	
3.1.1 Introduction to Live Interface	
3.1.2 Function Bar	14
3.1.3 Window Adjustment	15
3.1.4 More Functions	
3.2 PTZ	
3.2.1 Bullet Camera	
3.2.2 Dome Camera	23
3.3 Playback	
3.3.1 Video Playback	
3.3.2 Picture Playback	41
3.4 Reports	43
3.5 Alarm	
3.5.1 Introduction to Alarm Types	
3.5.2 Subscribing Alarm Information	45
4 Setting	47
4.1 Configuring Camera	
4.1.1 Configuring Lens	
4.1.2 Configuring Video Parameters	
4.1.3 Configuring Audio Parameters	
4.2 Configuring Network	
4.2.1 Configuring TCP/IP	70
4.2.2 Configuring Port	72
4.2.3 Configuring PPPoE	75
4.2.4 Configuring DDNS	75
4.2.5 Configuring SMTP	76

	4.2.6 Configuring UPnP	78
	4.2.7 Configuring SNMP	78
	4.2.8 Configuring Bonjour	81
	4.2.9 Configuring Multicast	81
	4.2.10 Configuring Auto Registration	82
	4.2.11 Configuring 802.1X	82
	4.2.12 Configuring QoS	83
	4.3 Peripheral	84
	4.3.1 Configuring IR Light	84
	4.3.2 Configuring Wiper	84
	4.3.3 Configuring Fan	85
	4.3.4 Configuring Heater	85
	4.4 Smart Thermal	86
	4.4.1 Configuring Smart Plan	86
	4.4.2 Configuring IVS	86
	4.4.3 Configuring Fire Warning	99
	4.4.4 Configuring Hot Trace	101
	4.4.5 Configuring Pic in Pic	104
	4.4.6 Configuring Link Schedule	
	4.5 Event	105
	4.5.1 Configuring Video Detection	
	4.5.2 Configuring Audio Detection	
	4.5.3 Configuring Temperature Alarm	
	4.5.4 Configuring Alarm	
	4.5.5 Configuring Abnormality	
	4.6 Temperature Measuring Settings	
	4.6.1 Configuring Rules	
	4.6.2 Configuring Global Setup	
	4.6.3 Exporting Heat Map	
	4.7 Storage Management	
	4.7.1 Configuring Schedule	
	4.7.2 Device Storage	
	4.7.3 Configuring Record Control Parameters	
	4.8 System Management	
	4.8.1 General Settings	
	4.8.2 User Management	
	4.8.3 Adding ONVIF User	
5 9	4.8.4 Safety Management	
13	ystem Maintenance	
	5.2 Auto Maintenance	
	5.2.1 Rebooting Device	
	5.2.2 Deleting Old Files	
	5.2 Deleting Old Files	
	5.3.1 Importing and Exporting	
	5.3.2 Default Settings	
	5.4 Upgrading Firmware	

5.5 Version Information	155
5.6 System Log	156
5.6.1 Searching System Logs	156
5.6.2 Remote View	157
5.7 Online User	158
Additional Accessing Methods	159
6.1 Accessing through NVR	159
6.2 Accessing through SmartPSS	160




# 1.1 Overview

Thermal Hybrid Camera is based on requirements such as temperature measurement, fire prevention, safety protection and night vision. This product can help you view videos, videotape an object, test temperature, warn the potential fire, track a cold/hot spot and analyze a special behavior. This product can be used in energy industry, transportation, building, power system, public security, government, enterprises, and other fields (such as science, education, culture and health). You can use the product alone or combine the product with other storage devices to provide solutions for safety/intelligence city, production safety, safety protection of residential buildings and public area safety.

# **1.2 Features**

- Safe and stable.
   With a full embedded system, this Device can implement all-day monitoring in a stable way.
- A long detection distance.
   Wide monitoring range and long detection distance. Used for surveillance of wide range and long distance.
- Strong detection ability.
   With night vision ability, this Device can clearly distinguish different objects in the dark and can tell camouflage and hidden objects.
- Strong anti-interference ability.
   This Device can get rid of interference of light intensity under backlight or strong light environment.
- Adaptive capacity to complex environment.
   Applicable to such environment as smoke, smog, rain, snow, and dust which will block your eyes and is very confusing in colors.

This product can be used in various scenarios and the "small application scenarios" is taken as an example here for detailed description. See Figure 1-1.

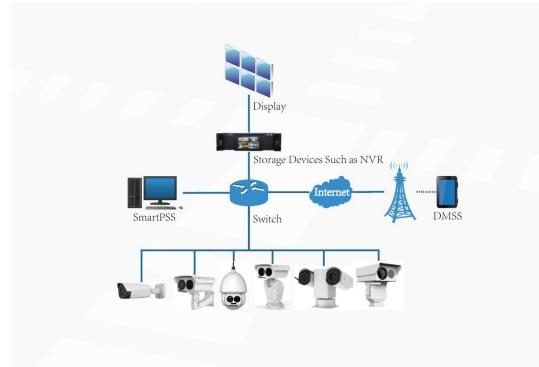

# **1.3 Functions**

Live

Table 1-1 Function description
--------------------------------

Function	Description
Real-time	You can view both the visible images and thermal images.
preview	You can use thermal images to identify an object, and then use visible
preview	images to view more details of the object.
	For those cameras with PTZ, you can use the PTZ to operate the
	cameras to enlarge the surveillance range and identify details of an
	object.
PTZ operation	• You can set a bullet camera's PTZ functions such as preset, tour,
	pattern, assistant and wiper.
	• You can set a speed dome's PTZ functions such as preset, tour,
	pattern, horizontal rotation, PTZ speed, free action, boot action
	and timing task.
Voice intercom	For cameras with voice intercom function, you can talk indoors with a
voice intercom	person near the outdoor monitor to facilitate problem solution.
Snapshot	When previewing, you can snapshot an abnormal image for further
Shapshot	check and handling.
Local recording	When previewing, you can record abnormal images for further check
Local recording	and handling.
Real-time	For cameras with temperature measuring, you can check the real-time
reports	temperature data of your monitoring area.

Function	Description
Real-time spot temperature measurement	For cameras with temperature measuring, you can check the real-time temperature data of any spot in your monitoring area.
Laser ranging	For cameras with laser ranging, you can measure the distance between the camera and the object in the middle of the image.
Additional functions	<ul> <li>Switch video bit stream or streaming protocol.</li> <li>The visible image will be adjusted to the relevant location when you zoom in or out the thermal image.</li> <li>Mark information you need in the surveillance image.</li> <li>Check whether there is any alarm output.</li> <li>Magnify part of the surveillance image. Or, scroll the mouse to zoom the whole surveillance image.</li> <li>You can help the camera focus manually on the web interface.</li> <li>Set a smart rule. When the rule is broken and an alarm is triggered, you can track the target manually.</li> <li>Adjust display effect of the surveillance images.</li> <li>Boot up or shut down the intelligent rule display.</li> </ul>

# Playback

#### Table 1-2 Description of playback function

Function	Description
Videotaping	When playing back a video, you can record the key information of the
manually	previous video for further check and handling.
Planned	After you get a recording plan, the system will record automatically
recording	After you set a recording plan, the system will record automatically.
Video playback	Play back a previous video to find some valuable video
and download	fragments.
	• Download the valuable video fragments for further judgment.
Picture playback	Play back pictures you have snapshot to find something valuable.
Relay activation	When there is an alarm, the system will videotape automatically.

# Report

You need to follow certain rules such as time sequence to check history data of temperature saved in the device Micro SD card.

# Alarm

- Set prompting mode (sound, for example) based on the alarm type.
- View alarm information.

## Account Management

#### Table 1-3 Function description

Function
----------

Management of	Add, modify or delete an account group.
user group	Manage user permissions based on user groups.
User	Add, modify or delete a user account.
Management	Set the user permissions.
Change	Change week' edmin neceward
password	Change users' admin password.

# External Device Management

You can manage your camera's external devices such as heater, fill light and wiper.

# Intelligent Thermal Imaging

Function	Description
	<ul> <li>Both visible channel and thermal channel have intelligent behavior analysis, including tripwire, area intrusion, abandoned object and missing object.</li> <li>When there is an alarm, you can implement following operations</li> </ul>
Intelligent Behavior Analysis	<ul> <li>at the same time such as linkage video recording, alarm output, email delivery, PTZ operation and screenshots.</li> <li>Supports addition of detection area and exclusion area. You can also filter disturbances and shadows, save the target objects you need, and lower false alarms caused by ripple on the water surface.</li> </ul>
	<ul> <li>For thermal channel, you can set the parameter of misinformation caused by waving water to reduce the misinformation.</li> <li>You can set the tracking mode in the linked tracking function.</li> </ul>
Fire warning	<ul> <li>Both visible channel and thermal channel have fire warning.</li> <li>When there is an alarm, you can implement following operations at the same time such as linkage video recording, alarm output, email delivery, PTZ operation and screenshots.</li> </ul>
Cold/hot spot tracking	<ul> <li>Only thermal channel can implement the cold/hot spot tracking operation.</li> <li>Supports real-time display of surveillance scenario's cold spots and hot spots according to different colors.</li> <li>When there is an alarm, you can implement following operations at the same time such as linkage video recording, alarm output, email delivery, PTZ operation and screenshots.</li> </ul>
Picture in picture	<ul> <li>Only visible channel can implement the picture in picture operation.</li> <li>You can put the thermal image into the visible image.</li> </ul>

Table 1-4 Function description

# Event

Table 1-5 Function description

Function
----------

Function	Description
Video detection	<ul> <li>You can implement operation of motion detection and video masking detection.</li> <li>When there is an alarm, you can implement following operations at the same time such as linkage video recording, alarm output, email delivery, PTZ operation and screenshots.</li> </ul>
Audio detection	<ul> <li>Supports detection of input exception and mutation of acoustic intensity.</li> <li>When there is an alarm, you can implement following operations at the same time such as linkage video recording, alarm output, email delivery, PTZ operation and screenshots.</li> </ul>
Temperature alarm	<ul> <li>When temperature satisfies the alarm conditions of temperature testing rules, an alarm is triggered.</li> <li>When there is an alarm, you can implement following operations at the same time such as linkage video recording, alarm output, email delivery, PTZ operation and screenshots.</li> </ul>
Alarm settings	<ul> <li>The alarm is triggered when there is an alarm from external device.</li> <li>When there is an alarm, you can implement following operations at the same time such as linkage video recording, alarm output, email delivery, PTZ operation and screenshots.</li> </ul>
Abnormality	<ul> <li>Supports detection of SD card or network abnormality and illegal access.</li> <li>When there is SD card abnormality or illegal access, you can implement following operations at the same time such as linkage video alarm output, and email delivery.</li> <li>When there is an alarm of network abnormality, you can implement following operations at the same time such as linkage video recording, and alarm output.</li> </ul>

# Temperature Measuring Settings

This function is available on select model.

# Table 1-6 Function description

Function	Description	
	Supports measuring spot, line, polygon and ellipse's average	
Tomporaturo	temperature, maximum temperature and minimum temperature.	
Temperature	Supports outputting alarm based on different conditions.	
measuring rules	• Supports setting different alarm output conditions to different objects	
	that need to be measured.	
	• Supports temperature contrast of different objects that needs to be	
Tomo orothuro	measured.	
Temperature	Supports outputting alarm based on different conditions.	
contrast	Supports setting different alarm output conditions to different	
	temperature contrast rules.	
Heat man	Supports outputting real-time heat map information. Then, you can do the	
Heat map	further analysis through the heat map tools.	

Function	Description
Additional	Supports enabling or closing temperature testing rules.
functions	Supports enabling or closing isotherm.
Tunctions	Supports enabling or closing color code articles.

# Basic Settings

# 2.1 Device Initialization

When using the Device for the first time or after the Device is restored to factory settings, you need to initialize the Device. To initialize the Device, you can log in the web client or use the ConfigTool. Web client is taken as an example for detailed description.



- The Device cannot be used if not initialized.
- To secure your admin account, please keep the password properly and change it regularly.
- Device initialization can be implemented only when the device IP address (192.168.1.108 by default) and the PC IP address are in the same network segment.
- Step 1 Open browser, enter camera default IP address in the address bar, and then press

Enter.

The default IP is 192.168.1.108.

After logging in the device, the Device Initialization interface is displayed. See Figure 2-1.

Device Initialization	
Username	admin
Password	
	The minimum pass phrase length is 8 characters
	Weak Middle Strong
Confirm Password	
	Use a password that has 8 to 32 characters, it can be a combination of letter(s),
	number(s) and symbol(s) with at least two kinds of them.(please do not use
	special symbols like '";:&)
Email Address	To reset password, please input properly or update in time.
	to reset password, prease input propeny of update in time.
	Save
	Gave

Figure 2-1 Device initialization

Step 1 Set the login password of admin user and reserve your phone number.

 $\square$ 

- The phone number you have reserved is used for password reset. And this
  function is set by default. When you forget the password, you need to scan the
  QR code to reset the password. And the phone number you have reserved will be
  used to receive the safety code. Then, by the safety code, you can reset the
  password of admin user.
- If you do not set a number for reservation or you need to change the reserved number, you can follow the path Setting > System Management > User

Management > User Management > User to implement the settings. See "2.4 Resetting Password" for more details.

Step 2 Click Save to complete initialization.

After you have initialized the Device, if the **Online Upgrading** is displayed, please operate according to the interface prompts.

# 2.2 Modifying IP Address

Default IP address of all devices is 192.168.1.108. When you use the Device for the first time or there is change of the network, modify IP address of your device according to network planning. You can modify one or several IP addresses through ConfigTool. You can also log in the web client to modify IP addresses.

# 2.2.1 Modifying One IP Address

When there are only a few devices or the login passwords of devices are different, you can modify only one IP address at one time. Logging in WEB client to modify IP addresses is taken as an example for detailed description.

Step 1 Log in web interface from the IE browser.

- - The default IP is 192.168.1.108. •
  - The default user is admin. The password is the one that was configured during initial settings.

#### Step 2 Select Setting > Network > TCP/IP.

The TCP/IP interface is displayed. See Figure 2-2

	Figure 2-2 TCP/IP interface	
TCP/IP	Easy4ip	
Host Name	Camera	
Ethernet Card	Wire(DEFAULT)	
Mode	Static O DHCP	
MAC Address	e0 . 50 . 8b . 28 . 0e . 45	
IP Version	IPv4	
IP Address	192 . 168 . 102 . 122	
Subnet Mask	255. 255. 0. 0	
Default Gateway	192. 168. 0. 1	
Preferred DNS	8.8.8.8	
Alternate DNS	8.8.4.4	

Step 3 Configure relevant information of IP address and then click Save.

Default

Refresh

Save

Enable ARP/Ping to set IP address service

# 2.2.2 Modifying Several IP Addresses

When there are several devices or the login passwords of devices are the same, you can modify several IP address at the same time through the ConfigTool.

## Preparation

- You have obtained the installation package of ConfigTool. To obtain the installation package, you can consult technical support staffs.
- You have achieved network communication between PC (which is with ConfigTool) and the Device.

## Procedure



The **Modify IP** interface is displayed.

Step 2 Click Search Settings.

The dialog box named by "settings" is displayed.

 Step 3
 Set the network segment of the Device, admin and password. Then click OK.

 After the search, the system displays devices that have been searched.

Default user name and password are both admin.

<u>Step 4</u> Select devices whose IP address needs to be modified and click the icon indicating that you can modify several IP addresses at one time.

The dialog box of **Modify IP Address** is displayed. See Figure 2-3.

Figure 2-3 Modifying IP address

Modify IP Address						
Mode	۲	Static	C	DHCP		
Start IP			•		Same IP	
Subnet Mask			•			
Gateway			ē.			
Selected number of device	s: 1	4				OK

<u>Step 5</u> Select the mode of IP address based on the actuality.

- DHCP mode: When there is a DHCP server in the network, set the **Mode** as **DHCP** and the Device obtains IP addresses from the DHCP server automatically.
- Manual mode: Set Mode as Static and enter Starting IP, Subnet Mask and Gateway. Then, IP addresses of devices are incrementally modified from the start IP address.

 $\square$ 

Select the check box of **The Same IP** and set the IP addresses of the Devices you have picked up as the same one.

<u>Step 6</u> Click **OK** to finish configuration.

# 2.3 Logging in Web Interface

After you have modified the IP addresses, you can log in the WEB interface of the Device through a browser to operate, configure and maintain the Device.

# **Background Information**

To log in the Device in a smooth way, you need to make sure that the PC connected to the Device satisfies the following requirements. See Table 2-1.

PC items	Recommended configuration	
Operation system	≥ Windows 7	
CPU	≥ Intel core i3	
Graphics card	≥ Intel HD Graphics	
Storage	≥2GB	
Display	≥ 1024×768 Resolution	
Browser	Internet Explorer 9/10/11	

Table 2-1 Recommended PC configuration

## Procedure

<u>Step 1</u> Open browser, enter IP address in the address bar, and then press **Enter**. The **login** interface is displayed. See Figure 2-4.

/ed. See Figure 2-4

Figure 2-4 Login

Thermal	Came	ra	
Username:	admin		
Password:	Login	Cancel	Forgot password?
			<u>_</u>

Step 2 Enter username and password, and click Login.

After the successful login, the **Live** interface is displayed. See Figure 2-5.

- The default user is admin. The password is the one that was configured during initial settings.
- It will prompt you to install plug-in for the first system login. Please download and install plug-in according to the prompt.

Functions of different devices might vary, and the actual product shall prevail.
 Figure 2-5 Live Interface



 $\square$ 

Click Log out on the upper right corner to exit the interface.

# 2.4 Resetting Password

If you forget the password, you can use the reserved E-mail address to achieve password resetting.

Step 1 Open IE browser and type the camera's IP address. Then press Enter.

The Thermal Camera interface is displayed. See Figure 2-6.

Figure 2-6 Logging in the Device

Thermal (	Camera	
Username:	admin	]
Password:	Login Cancel	Forgot password?

#### Step 2 Click Forgot Password?

The Reset the password (1/2) interface is displayed. See Figure 2-7.

YAZ00019
Image: Second
The security code will be delivered to 1***@qq.com

#### Figure 2-7 Reset the password(1/2)

Step 3 Reset the password.

Scan the QR code, and the security code will be sent to the email address you have already fulfilled. Type the security code then.



- Reset the password in time when you receive the security code, because the security code will be invalid within 24 hours.
- If you get security codes twice but do not use them, when you get the security code for the third time, the system will prompt failure. To solve this problem, you need to restore your device to default settings or wait 24 hours to get a new one.

#### Step 4 Click Next.

The Reset the password (2/2) interface is displayed. See Figure 2-8.

Figure 2-8 Resetting the password(2/2)

Username	admin	
Password		
	Weak Middle Strong	
	Use a password that has 8 to 32 characters, it	
	can be a combination of letter(s), number(s) and	
	symbol(s) with at least two kinds of them.	
	(please do not use special symbols like ** ; : & )	
Confirm Password		

<u>Step 5</u> Fill in a new password and confirm it.

The password is made up of characters for 8–32 digits and the password must contain two of the three forms (number, letter, and the common characters. ""、""、";"、";"、"?、"&"are not included.) You should obey the prompt of the password's security level and set a password with high security level.

<u>Step 6</u> Click **Save** to finish password resetting. The login interface is displayed.

# **3** Daily Operation

# 3.1 Live

On the Live interface, you can do operations to the real-time surveillance images such as viewing, taking snapshots and recording videos.

 $\square$ 

- Functions of different devices might vary, and the actual product shall prevail.
- Image channel with a box around it is the one that has been chosen. All your operation is valid only to this channel.
- Double-click an image channel and the image channel is displayed in a full video display area. Double-click the image channel again and the channel will be displayed in a full screen. Then, right-click the full-screen image and the image returns to its previous state.

# **3.1.1 Introduction to Live Interface**

Click the **Live** tab, and the **Live** interface is displayed. See Figure 3-1. In the live interface, there are five function bars. See Table 3-1.



Figure 3-1 The live interface

Table 3-1 Description of function bar

No.	Name	Description	
1 Svotom monu	Click each function tab in the system menu to go to the		
1	1 System menu	corresponding interface.	

No.	Name	Description	
2	Encode bar	<ul> <li>Select bit stream type and streaming protocol when previewing a video.</li> <li>Main Stream: It has large bit stream value and image with high resolution, but also requires large bandwidth. This option is normally used for storage and surveillance.</li> <li>Sub Stream: It has small bit stream value and smooth image, and requires little bandwidth. This option is normally used to replace main stream when bandwidth is not enough.</li> <li>Streaming protocol: A network transmission protocol, supports TCP, UDP and Multicast.</li> </ul>	
3	Live view	For functions and operations of live view bar, see "3.1.2 Function	
	function bar	Bar."	
4	PTZ control	For details of PTZ control, see "3.2 PTZ."	
Adjustment Supports		Supports adjusting clarity of video images, displaying intelligent rules,	
5	bar of video	zooming with focusing at the same time, checking real-time reports.	
	window	See "3.1.3 Window Adjustment" for details.	

# 3.1.2 Function Bar

See Figure 3-2 and Table 3-2 for more details.

 $\square$ 

Functions of different devices might vary, and the actual product shall prevail.

Figure 3-2 Live view function



Table 3-2 Live view function description

No.	Name	Description	
1	Regional Click this icon, and click or draw a box on the video image.		
1	focus camera will implement auto focus.		
2	Mark pen	Click is to mark a target on the video image and the default pen color is red. Click is to switch the pen color from red, green and blue.	
3	Relay-out	Shows alarm output state. Click the icon to force enable or force disable alarm output. Alarm output state description: Red: Alarm output. Grey: Alarm over.	
4	Fixed Focus	Click this icon. Then the visible image adjusts its values of zoom and focus in accordance with values of the thermal image.	

No.	Name	Description		
5 Zoom in		<ul> <li>You can zoom in video image with two operations:</li> <li>Click the icon to enlarge part of visible light or thermal images.</li> </ul>		
		<ul><li>Right-click to resume.</li><li>Click the icon to zoom a video image by scrolling the mouse.</li></ul>		
6 Snapshot		Click the icon to capture a live image and save it under the path you have set.		
		Storage Path."		
7	Single-lens video	Select visible image or thermal image. Then click this icon to start video recording.		
	recording	To check or modify the storage path, see "4.7.2.1 Configuring Storage Path."		
	Double-lens	If you want to record both visible image and thermal image at the		
8 video same time, click this icon. And, when you play the recording both visible image and thermal image will be played		same time, click this icon. And, when you play the videos, videos of both visible image and thermal image will be played.		
9	Easy focus	<ul> <li>Only thermal image supports easy focus.</li> <li>Click this icon. Then you can see the two parameters of AF Peak and AF Max.</li> <li>AF Peak: The live image clarity value.</li> <li>AF Max: The best image clarity value.</li> <li>The closer AF Peak is to AF Max, the better the focusing effect. Easy focus will be disabled after five minutes.</li> </ul>		
9	Audio	Click the icon to enable or disable audio output.		
10	Voice intercom	Click this icon to enable or disable the intercom function. Please open stereo remix after enable the voice intercom function.		
11	Help	Click to open help document.		

# 3.1.3 Window Adjustment

# 

Functions of different devices might vary, and the actual product shall prevail. Figure 3-3 Window adjustment (dome camera and PTZ camera)

🖆 🕂 PTZ 🎟 📶

Figure 3-4 Window adjustment (bullet camera)

🖆 🕂 🔁 🖽 📶

# 3.1.3.1 Image Adjustment

Adjust brightness, contrast, hue and saturation of video images on your web.

 $\square$ 

For detailed operations, see "4.1.1 Configuring Lens."

Click **Click**, and the **Image Adjustment** interface is displayed at the right side of live interface.

See Figure 3-5.

Figure 3-5 Image adjustment interface

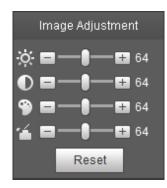


Table 3-3 Image adjustment configuration

lcon	Function	Description	
		Adjusts the overall image brightness, change the value	
ò.	Brightness	when the image is too bright or too dark. The bright and	
		dark areas will have equal changes.	
Contrast		Change the value when the image brightness is proper	
	Contrast	but contrast is not enough.	
9	Hue	Makes the color deeper or lighter. The default value is	
		made by the light sensor and is recommended.	
•4	Saturation	Adjusts color depth. This value doesn't change the	
	Saturation	overall image brightness.	
Reset	Reset	Click the icon to reset brightness, contrast, hue and	
Reset		saturation to their default values.	

# 3.1.3.2 Display of Smart Rules

You can control whether rules information is displayed on surveillance images. It is set by default that this function is in opening state.

Click to select **Enable**, and then select **Enable** to display smart rules and detection box; select **Disable** to stop.

# 3.1.3.3 Zoom and Focus

 $\square$ 

Zooming and focusing functions are only available on motorized vari-focal devices.

Adjust focal length of your lens to zoom in or out surveillance images; adjust optical afterfocus of your lens to improve clarity level of video images.

Click E, and the zooming and focusing interface is displayed at the right side of live

interface.

- Select the visible channel and you can zoom, focus and change the aperture.
- Select the thermal channel and you can zoom and focus.

Parameters	Description	
Variable focal length	Click or , and adjust the optical back focal length of thermal tunnel to make images more clear.	
Auto focus	Auto focus.	

#### Table 3-4 Zoom and focus description

# 3.1.3.4 Optical Axis Calibration

Used only for calibrating the device lens when the Device is being debugged in the factory. You do not need to operate this function.

# 3.1.3.5 Real-time Reports

Within the set time, record the average temperature of the presets, lines and area that you have selected.

 $\square$ 

Only Devices with temperature-measuring function support this function, and the actual product shall prevail.

## Preparation

You have set the temperature measuring rules. For detailed operation, see "4.6.1.1 Configuring Temperature Measuring Rules."

## Procedure

Click and the real-time reports interface is displayed. Select the temperature-measuring

program and set the time circle. Then the real-time temperature change is displayed. See Figure 3-6.




# 3.1.4 More Functions


# 3.1.4.1 Real-time Spot Temperature Measuring

#### $\square$

Only devices with temperature-measuring function support this function, and the actual product shall prevail.

Move the pointer to any position of the video image and click. Then the real-time temperature of this spot is displayed. See Figure 3-7.



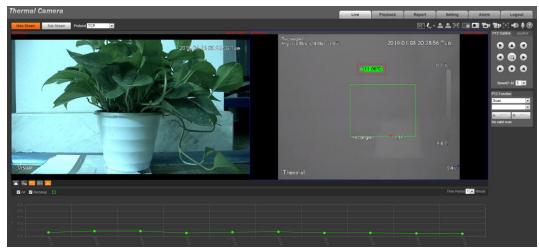

# 3.1.4.2 Laser Ranging

Ш

- Only device with laser ranging can implement this operation and the actual interface shall prevail.
- Laser ranging does not perform well to those objects (such as glass and marble) with strong reflection ability. During laser ranging, select those objects with rough surface as your target.



Mind the distance during laser ranging. Less than 50 m will result in a damaged laser.

Click Start Ranging, and the camera starts to measure the distance from itself to the object in the middle of the image (as indicated with the red cross sign).

# 3.2 PTZ

# 3.2.1 Bullet Camera



PTZ setting of bullet camera is used for controlling external PTZ device. Connect the Device to external PTZ through RS-485 port before using this function.

# **3.2.1.1 Configuring Protocol**

If you want to control the external PTZ by your bullet camera, you need to set the PTZ protocol first and then connect PTZ to your camera.

#### <u>Step 1</u> Select Setting > System Management > PTZ Setting.

The **PTZ Settings** interface is displayed. See Figure 3-8.

Figure 3-8 PTZ settings				
PTZ Settings				
Protocol	PELCOD	•		
Address	1			
Baud Rate	9600	•		
Data Bit	8	•		
Stop Bit	1	•		
Parity	None	•		
	Default	Refresh	Save	



Parameter	Description	
Protocol	Matches with the PTZ protocol.	
Address		
The entered address must be the same with the address configured		
	PTZ; otherwise the PTZ cannot be controlled from the bullet camera.	
Baud rate	Configure device baud rate.	
Data bit	The default is "8".	
Stop bit	The default is "1".	
Parity	The default is "none".	

<u>Step 3</u> Click **Save** to finish configuration.


# **3.2.1.2 Configuring PTZ Functions**

 $\square$ 

- The protocol setting has been completed. For detailed operations about protocol setting, see "3.2.1.1 Configuring Protocol".
- For images representing the effect of external PTZ, you need to preview on the preview images of the external PTZ, not on the preview image of the bullet camera.
- The following functions are available only when your bullet camera is connected to the external PTZ.

#### 3.2.1.2.1 Configuring Scan

The camera scans on the horizontal direction between the left and right borders. <u>Step 1</u> Click the **PTZ** tab and select **Scan** in the PTZ function setting list.

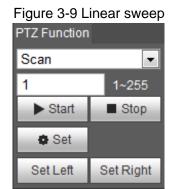

<u>Step 2</u> Type the scan number and set the left and right border.

- 1) Through the direction button, move the camera to the left border that you want and click **Set Left**.
- 2) Through the direction button, move the camera to the right border that you want and click **Set Right**.

Step 3 Click Start to start scan; click Stop to end it.

#### 3.2.1.2.2 Configuring Presets

By configuring presets, the camera can store parameters such as PTZ's horizontal angle, inclination angle, and the lens focal length under the current situation to the Device. If you need those parameters later, you can quickly adopt them and adjust the PTZ and camera to those locations.

<u>Step 1</u> Click the **PTZ** tab and select **Preset** in the **PTZ Function** setting list.

Figure 3-10 Preset			
PTZ Function			
Preset	•		
1	1 1~255		
Q (	Q Go to		
Set Preset			
+ Add - Del			

- <u>Step 2</u> Through the direction button, move the camera to the surveillance direction that you need.
- Step 3 In the preset box, type the preset number.  $\square$

Range of the preset number is limited by the PTZ protocol.

- Step 4 Click Add to add a preset.
- <u>Step 5</u> Enter a preset number and click **Go to**. The camera turns to the corresponding position.

#### 3.2.1.2.3 Configuring Tour

By configuring tour, you can put the presets to the auto tour to make the camera move back and forward quickly and automatically according to the presets.

#### Preparation

You have set several presets.

#### Procedure

- <u>Step 1</u> Click the **PTZ** tab and select **Tour** in the **PTZ Function** setting list.
- Step 2 In the tour typing box, type the tour number.

Range of the preset number is limited by the PTZ protocol.

- <u>Step 3</u> In the preset typing box, type the preset number.
- Step 4 Click Add Preset to add a preset in the tour.

Repeat step 3 to step 4 to add several presets in the tour.

 $\square$ 

Type a preset number and click **Delete Preset** to delete preset it in the tour group.

Step 5 Type a tour number. Click Start to start touring; click Stop to end it.

#### 3.2.1.2.4 Configuring Pattern

By configuring pattern, you can record continuously your operation to the PTZ and record the moving pattern of the camera's lens. The Device will make the location where the recording begins as the beginning point, and move back and forward automatically following the preset movement pattern.

<u>Step 1</u> Click the **PTZ** tab and select **Pattern** in the **PTZ Function** setting list.

In the pattern typing box, type a pattern number.

Range of the pattern number is limited by the PTZ protocol.

- Step 2 Click Start Rec.
- <u>Step 3</u> By operating the PTZ control panel, you can control the camera's surveillance direction, zoom images or change the focal length.
- <u>Step 4</u> Click **Stop Rec** to complete setting of the pattern.
- <u>Step 5</u> Select a pattern number. Click **Start** to start pattern; click **Stop** to end it.

#### 3.2.1.2.5 Turing on Wiper

<u>Step 1</u> Click the **PTZ** tab and select **Wiper** in the **PTZ Function** setting list. See Figure 3-11.

PTZ Function		
Wiper 💌		
Enable Disable		

Figure 3-11 Wiper

Step 2 Click Enable to enable the wiper; click Disable to disable it.

## 3.2.1.3 Operating PTZ

 $\square$ 

- The corresponding protocol setting and function setting have been completed. See "3.2.1.1 Configuring Protocol" and "3.2.1.2 Configuring PTZ Functions" for more details.
- For images representing the effect of external PTZ, you need to preview on the preview images of the external PTZ, not on the preview image of the bullet camera.

Click the **PTZ** tab and the PTZ control panel is displayed on the right side of the PTZ interface. See Figure 3-12.

Figure 3-12 PTZ control panel

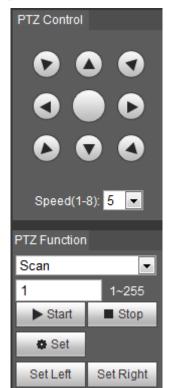


Table 3-6 Parameter description

No.	Function	Description
1	Direction button	Eight directions are contained: up, down, left, right, upper left,
		upper right, lower left, and lower right.

2	Speed	Controls the movement speed. The bigger the value is, the faster the movement will be. With this function, you can also change the speed of adjusting the PTZ direction, zooming, changing the focal length and adjusting the aperture.
3	Zoom, focus and iris	Click and the zoom, focus and iris' value becomes bigger; click and the zoom, focus and iris' value becomes smaller.
4	PTZ function	For detailed operations of PTZ, see "3.2.1.2 Configuring PTZ Functions."

# 3.2.1.4 Configuring Preset Backup

You can export presets you have set to back them up. When you need those presets, you can import them to your device and restore them.



If you want to export or import presets, you have to obey the following steps.

<u>Step 1</u> Select **Setting > PTZ > Preset Backup**.

The **Preset Backup** interface is displayed.

Figure 3-13 Preset backup

ort
0

Step 2 Export or import presets.

- Click **Export** to export presets for backup.
- Click Import to import presets you have already backed up

# 3.2.2 Dome Camera

# 3.2.2.1 Configuring Protocol

For external devices (such as network keyboard, NVR), if you want to use them to control the dome camera or its PTZ, you need to set the protocol to connect the external devices to the dome camera or its PTZ first.

#### <u>Step 1</u> Select **Setting > PTZ > Protocol**.

The Network PTZ interface is displayed. See Figure 3-14.

	Figure 3-14 Network PTZ setting	
Network PTZ		
Protocol	DH-SD1 V	
	Default Refresh Save	

<u>Step 2</u> Select the protocol that is matched with the camera.

Step 3 Click Save to finish configuration.

# **3.2.2.2 Configuring PTZ Functions**

Select **Setting > PTZ > Function** and the **Function** interface is displayed.

It's set by default that the thermal image is displayed. In the thermal image, you can click

to switch the image to visible image. And, in the visible image, you can click 🛄 to switch the image to thermal image.


#### 3.2.2.2.1 Configuring Preset

By configuring presets, the camera can store parameters such as PTZ's horizontal angle, inclination angle, and the lens focal length under the current situation to the Device. If you need those parameters later, you can quickly adopt them and adjust the PTZ and camera to those locations.

#### <u>Step 1</u> Select **Setting > PTZ > Function**.

The **Preset** interface is displayed. See Figure 3-15. Figure 3-15 The preset interface

	<ul> <li>Preset</li> <li>Tour</li> <li>Scan</li> <li>Pattern</li> <li>Pan</li> <li>PTZ Speed</li> <li>Idle Motion</li> <li>PowerUp</li> <li>Time Task</li> <li>PTZ Restart</li> <li>Default</li> </ul>	Number	Preset Title	Save	Delete
$\begin{array}{c c} & & & \\ \hline \\ \hline$					



1) Click Add to add a new preset.

- 2) Operate the PTZ control panel to move the camera lens to a specific direction you need.
- 3) Double-click the preset's Number to modify it. Some presets are already endowed with fixed and special functions by this camera producer. See Table 3-7. If you want to use those functions, you can set these presets' No. to be the Number.

Table 3-7	Function	description	of the very	/ presets
		accomption		, prodoto

Preset No.	Description
04	Enable this preset. Then the camera will automatically turn off the fill
21	light under color image and turn it on under black/white image.
67	Enable this preset and the laser current will be increased.
68	Enable this preset and the laser current will be decreased.
69	Enable this preset and the camera will automatically switch the image
	from color mode to black/white mode under low lighting condition.

4) Double-click the preset's **Preset Title** to modify it. Then click  $\square$  to finish

configuration.

Click 🤤 to delete a preset that is wrongly configured or that is not needed

```
anymore.
```

• Click **Delete** to delete all the presets you have added.

#### 3.2.2.2.2 Configuring Tour

By configuring tour, you can put the presets to the auto tour group to make the camera move back and forward quickly and automatically according to the presets.

#### Preparation

You have set several presets.

#### Procedure

<u>Step 1</u> Select **Setting > PTZ > Function > Tour**.

The Tour interface is displayed. See Figure 3-16.

Figure 3-16 The tour interface

100.1(cbox 1020.1 1080	Preset	Tour No.	Tour Name	Delete
	▶ Tour			
	▶ Scan			
	▶ Pattern			
	▶ Pan			
	PTZ Speed			
	► Idle Motion			
	PowerUp			
	Time Task	▶ Start	+ Add	
	PTZ Restart			
	Default	Number	Preset Duration	n Speed Delete
Speed 5 V				
		+ Add	🖿 Save 🕏	Refresh

Step 2 Configure tour.

Eunstian

- 1) Click **Add** to add a tour.
- Click Add to add a preset.
   Click repeatedly to add several presets.
- 3) Double-click to select a preset. And double-click to configure the lasting time.
- 4) Double-click the touring name that you have added to modify it. Click **Save** to finish configuration.

Ш

Click 🤤 to delete a tour or a preset.

<u>Step 3</u> Select a tour and click **Start** to start camera tour. Click **Stop** to stop the tour.

#### 3.2.2.2.3 Configuring Scan

You can configure an arc and horizontal area for your camera PTZ's rotation. Then by giving your PTZ a fixed rotation speed, you can get your camera scan from left to right (and from right to left) at a fixed speed.

#### <u>Step 1</u> Select **Setting > PTZ > Function > Scan**.

The Scan interface is displayed. See Figure 3-17.

Figure 3-17 The scan interface



Step 2 Configure scan.

- 1) Select a **Scan No.** and set its **Speed**.
- Click Setup.
   Buttons of Set Left Limit and Set Right Limit are displayed.
- Operate the PTZ control panel and move the camera to a left border you want and click Set Left Limit; move the camera to a right border you want and click Set Right Limit.
- <u>Step 3</u> Select a **Scan No.** and click **Start** to start scan. Click **Stop** to stop the scan.

#### 3.2.2.2.4 Configuring Pattern

The function of "pattern" can record continuously the user's manual operation to the PTZ and record the moving tracking of the camera's lens. The camera will make the location where the recording begins as the beginning point, and move back and forward automatically following the preset movement pattern.

#### <u>Step 1</u> Select **Setting > PTZ > Function > Pattern**.

The **Pattern** interface is displayed. See Figure 3-18.

Figure 3-18 The pattern interface

Step 2 Configure pattern.

- 1) Select a **Pattern No**.
- 2) Click Setup.

Buttons of Start Rec and Stop Rec are displayed.

- 3) Click Start Rec.
- 4) Operate the PTZ control panel and adjust you camera's direction, zoom and focus.
- 5) Click **Stop Rec** to finish configuration.
- <u>Step 3</u> Select a **Pattern No**. and click **Start** to start pattern. Click **Stop** to stop the pattern.

### 3.2.2.2.5 Configuring Pan

Eurotion

You can enable this function and get your camera PTZ rotate horizontally for 360° at a fixed speed all the time.

### <u>Step 1</u> Select **Setting > PTZ > Function > Pan**.

The **Pan** interface is displayed. See Figure 3-19.

Figure 3-19 The pan interface

4009Khrs 1920 - 1080	▶ Preset	Number	Name	Speed	Interval Time	Save	Delete
	▶ Tour	2 <sup>2</sup> -					
	▶ Scan						
	<ul> <li>Pattern</li> </ul>						
	▶ Pan						
	PTZ Speed						
	► Idle Motion						
	▶ PowerUp						
Wited	▶ Time Task						
	<ul> <li>PTZ Restart</li> </ul>	► Start +	Add 🞜	Refresh			
	<ul> <li>Default</li> </ul>						
Speed 5 V							

<u>Step 2</u> Set a **Pan Speed**. Click **Start** to start pan. Click **Stop** to stop the pan.


### 3.2.2.2.6 Configuring PTZ Speed


PTZ speed is determined by two factors—firstly and basically, the speed level (low, middle and high, marked by ① in Figure 3-20); secondly, the control panel's speed value (1, 2, 3...8 marked by ② in Figure 3-20). If you select **Low** as the **PTZ Speed** ①, then according to the maximum **Low** value, the **Speed**② will be divided into 8 parts, and it's the same for you to select **Middle** or **High** as the **PTZ Speed** ①.

### <u>Step 1</u> Select Setting > PTZ > Function > PTZ Speed.

The PTZ Speed interface is displayed. See Figure 3-20.

Figure 3-20 PTZ speed

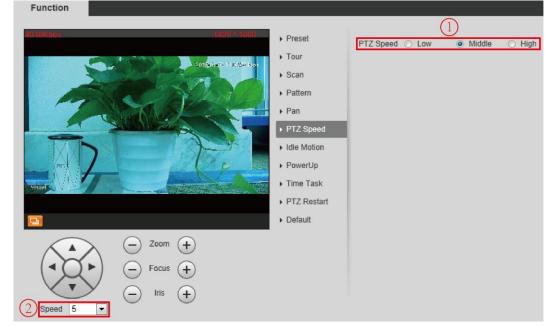



### 3.2.2.7 Configuring Idle Motion

Enable this function. And when there is a time period when PTZ does not receive any instructions, motions you have already set will be implemented.

### Preparation

You have configured preset, tour, scan and pattern before configuring idle motion.

### Procedure

```
<u>Step 1</u> Select Setting > PTZ > Function > Idle Motion.
The Idle Motion interface is displayed. See Figure 3-21.
```

Figure 3-21 The idle motion interface

Function			
	<ul> <li>Preset</li> <li>Tour</li> <li>Scan</li> <li>Pattern</li> <li>Pan</li> <li>PTZ Speed</li> <li>Idle Motion</li> <li>PowerUp</li> <li>Time Task</li> <li>PTZ Restart</li> <li>Default</li> </ul>	Enable Idle Motion Idle Time	Preset O Tour Scan Pattern Pan 10 minute(s) (1~60) Refresh Save

### <u>Step 2</u> Configure idle motion.

- 1) Select the **Enable** check box to enable this function.
- 2) Select an idle motion and set idle time.
  - $\square$

After you have set a value of idle time, when the time when you do not operate the PTZ is longer than that value, the idle motion will be implemented immediately.

3) Click **Save** to finish configuration.

### 3.2.2.2.8 Configuring Power Up

If you want the PTZ to implement certain actions after the camera is powered, configure this function.

### <u>Step 1</u> Select **Setting > PTZ > Function > Power Up**.

The **Power Up** interface is displayed. See Figure 3-22.

Figure 3-22 Power up

Function			
4071Rbos 1920* 1080	<ul> <li>Preset</li> </ul>	Enable	V
AND SHOW I LOUIS NOT	▶ Tour	PowerUp	🔿 Preset 🔘 Tour
	▶ Scan		🔿 Scan 🔿 Pattern
	<ul> <li>Pattern</li> </ul>		🔘 Pan 🔘 Auto
	▶ Pan		Refresh Save
	PTZ Speed		
	► Idle Motion		
	▶ PowerUp		
Water	Time Task		
	<ul> <li>PTZ Restart</li> </ul>		
	Default		
- Zoom + - Focus + - Iris +			
Speed 5			

- Step 2 Select the Enable check box.
- <u>Step 3</u> Select the **Power Up** actions.

### 

Select **Auto** and the PTZ will continue to implement the action before the power is off. <u>Step 4</u> Click **Save** to finish configuration.

### 3.2.2.9 Configuring Time Task

You can configure a time task and let camera implement certain actions within the period you have set.

### Preparation

You have configured preset, tour, scan and pattern before configuring time task.

### Procedure

### <u>Step 1</u> Select Setting > PTZ > Function > Time Task.

The **Time Task** interface is displayed. See Figure 3-23.

Figure 3-23 The time task interface

A BARRANG -	1920* 1080 ► Preset	Enable	
	<ul> <li>Scan</li> <li>Pattern</li> <li>Pan</li> <li>PTZ Speed</li> <li>Idle Motion</li> <li>PowerUp</li> <li>Time Task</li> <li>PTZ Restart</li> </ul>	AutoHome Period setting	Clear All Clear All Preset Tour Scan Pattern Pan 30 Sec. (5-3600)
Speed 5 V	$\odot$		_

Step 2 Configure time task.

- 1) Select the **Enable** check box to enable this function.
- 2) Select a Time Task Num.
- 3) Select a **Time Task Action** from **Preset**, **Tour**, **Scan** and **Pattern**.

When you set **Preset** as **Time Task Action**, the **Action Number** selection box is displayed. You can select the action number based on your needs.

4) In the **Auto Home** selection box, set the time for the camera to return to its previous condition.

Auto home time: Time for your camera to return to its previous condition and continue the time task when the time task is interrupted by human operation.

- 5) Click **Period Setting** to set the detailed period for a time task.
- 6) Click **Save** to finish configuration.
- Step 3 (Optional) Copy a time task.


Copy task information you have configured to other tasks.

- 1) Select a Time Task Num you have already configured.
- 2) In Copy To Task No., select a task number to be configured.
- 3) Click **Copy**.
- 4) Click **Save** to finish task copy.

### 3.2.2.2.10 Restarting PTZ Manually

### <u>Step 1</u> Select Setting > PTZ > Function > PTZ Restart.

The **PTZ Restart** interface is displayed. See Figure 3-24.





Step 2 Click PTZ Restart. PTZ restarts.

### 3.2.2.2.11 Restoring PTZ to the Default Settings



The operations below will delete all the PTZ settings you have configured. Please be cautious. <u>Step 1</u> Select **Setting > PTZ > Function > Default**.

The **Default** interface is displayed. See Figure 3-25.



### Step 2 Click Default.

All your PTZ settings are restored to the default ones.

## 3.2.2.3 Operating PTZ

 $\square$ 

The corresponding protocol settings and function settings have been completed.

Daily Operation 34



Figure 3-26 PTZ control panel

Table 3-8 Parameter description
---------------------------------

No.	Function	Description
1 Direction button		Eight directions are contained: up, down, left, right, upper left,
1	Direction button	upper right, lower left, and lower right.
		Controls the movement speed. The bigger the value is, the faster
		the movement will be.
2	Speed	With this function, you can also change the speed of adjusting
		the PTZ direction, zooming, changing the focal length and
		adjusting the aperture.
	3 Zoom, focus and iris	Click et and the zoom, focus and iris' value becomes
3		bigger; click e and the zoom, focus and iris' value becomes
		smaller.
4	PTZ function	For detailed operations of PTZ, see "3.2.1.2 Configuring PTZ
4		Functions."

## 3.2.2.4 Configuring Preset Backup

You can export presets you have set to back them up. When you need those presets, you can import them to your device and restore them.



If you want to export or import presets, you have to obey the following steps.

### <u>Step 1</u> Select **Setting > PTZ > Preset Backup**.

The Preset Backup interface is displayed.

Figure 3-27 Preset backup

Preset Backup	
Backup Path	
Import	Export

<u>Step 2</u> Export or import presets.

- Click **Export** to export presets for backup.
- Click Import to import presets you have already backed up

## 3.3 Playback


Playback of both videos and pictures is supported.

 $\square$ 

Functions of different devices might vary, and the actual product shall prevail.

Click the **Playback** tab, and the **Playback** interface is displayed. See Figure 3-28.

Figure 3-28 Playback

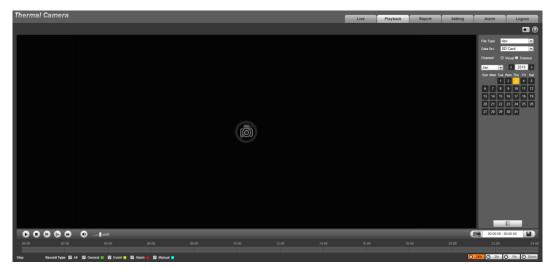

## 3.3.1 Video Playback

### 3.3.1.1 Interface Layout

Select **dav** in the **File Type** list, and the video playback interface is displayed. See Figure 3-29. On the **Playback** interface, there are seven function bars. See Table 3-9.

Figure 3-29 Video playback



Table 3-9 Function bar description

No.	Functions	Description
1	Playback control bar	For detailed information about control buttons, see "3.3.1.2 Operate Control Bar."
2	Volume adjustment	<ul> <li>Controls playback volume.</li> <li>muted.</li> <li>muted, and the volume can be adjusted.</li> </ul>
3	Record type	Record type includes <b>All</b> , <b>General</b> , <b>Event</b> , <b>Alarm</b> , and <b>Manual</b> . You can select according to your actual needs.
4	Time bar	<ul> <li>Displays the record type and the time period.</li> <li>Click any point in the colored area, and the playback starts from this moment.</li> <li>Each color represents a certain video type, and the corresponding relationship is indicated in the record type selection area.</li> </ul>
5	Time bar unit	There are four formats: 24hr, 22hr. 11hr, and 30min. Take 24hr for an example, the whole time bar has 24 hours.
6	Video clip	Clip and save certain video section. For detailed operations, see "3.3.1.4 Clipping Recorded Video."
7	Playback file list	You can select file type, data source and record date.
8	Snapshot	Click the icon to capture a live image and save it under the path you have set.

## 3.3.1.2 Operate Control Bar

See Table 3-10 for details.

Table 3-10 Playback control bar

lcons	Functions	Description
0	Play	Click this icon to play video.
0	Stop	Click this icon to stop playback.
	Play by Frame	Click this icon to play the next frame.
	Slow playback	Click this icon to slow down the playback.
	Fast playback	Click this icon to speed up the playback.

### 3.3.1.3 Playing Back Videos

There are differences in operation of video playback according to the differences of data sources. Data come from SD card or your local storage.

### 3.3.1.3.1 Playing Back Videos in SD Card

<u>Step 1</u> Select record type in the Data Src bar. See Figure 3-30.


Figure 3-30 Selecting record type

Record Type 📝 All 🛛 General 🔲 🗹 Event 📃 🗹 Alarm 📕 🗹 Manual 📒

<u>Step 2</u> In the **File Type** box, select .dav, and in the **Data Src** box, select **SD Card**. See Figure 3-31.

File type contains dav and jpg. "Dav" represents video playback and "jpg" represents picture playback.

Figure 3-31 Setting files playback

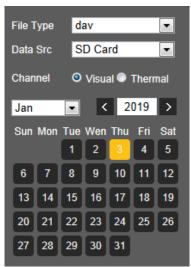

<u>Step 3</u> Those dates with blue color indicate there are recorded videos in those days. Select a date with recorded video inside and its time bar is displayed.

Each color on the time bar represents a certain record type. See the matching relationship in Figure 3-30.

- Step 4 Play video.
  - Click in the playback control bar.
     The system plays the recorded video of the selected date (in time order).
  - Click any point in the colored area of the time bar. See Figure 3-32.
     The playback starts from that point.



• Click III, and the video files of the selected date will be listed. Double-click a file in the list. See Figure 3-33. The system plays the video and displays file size, start time and end time.

For detailed operations, see Table 3-11.

Figure 3-33 List of playback files



Table 3-11 Picture Playback file more operations

Operation	Description
Search	Enter start time and end time, and then click <b>Q</b> to find out all the video files

Operation	Description		
	between the entered start time and end time.		
	Select dav or mp4 in the Download Format. Then click 💽.		
Download	The file will be downloaded to the set storage path. For detailed operations		
Download	of setting the storage path, see "4.1.2.5 Configuring Storage Path."		
	Downloading and playing video at the same time is not supported.		
Back	Click to go back to the calendar interface.		

### 3.3.1.3.2 Playing Back Local Videos

- <u>Step 1</u> In the **Data Src** box, select video type. See Figure 3-30.
- <u>Step 2</u> Select dav in File Type, and Local in Data Src.
  - List of playback files is displayed. See Figure 3-34.

Figure 3-34 List of playback files (2)



Step 3 Double-click a file and the file is displayed.

## 3.3.1.4 Clipping Recorded Videos

You can clip a part of recorded video and save it under the path you have set. See Figure 3-35. Figure 3-35 Video clipping



Step 1 In Video Format, select dav or mp4.

Step 2 Click on the time bar to select the start time, and then click to start.

<u>Step 3</u> Click again on the time bar to select the end time, and then click to finish.

Step 4 Click

The system prompts that you cannot play back and download a recorded video at the same time.

Step 5 Click Save.

The system stops playback and save the edited file under the storage path you have set. For detailed operations of setting the storage path, see "4.1.2.5 Configuring Storage Path".

## **3.3.2 Picture Playback**

The following content is about the introduction of the interface function bar and how to play back pictures.

### 3.3.2.1 Interface Layout

Select "jpg" in "file type" list, and the **Picture Playback** interface is displayed. See Figure 3-36. Figure 3-36 Image playback

Table 3-12 Image playback

No.	Function	Description	
1	Control button for playing pictures	<ul> <li>Includes the following two types:</li> <li>When this icon displays, the picture playback is paused or not started. Click this icon to start picture playback.</li> <li>When this icon displays, the picture playback is ongoing. Click this icon to stop picture playback.</li> <li>The two states above can be switched.</li> </ul>	

No.	Function	Description
2	Snapshot type selection	There are three types including <b>General</b> , <b>Event</b> and <b>Alarm</b> , and you can select one of them according to actual needs.
3	Playback file list	You can select file type and snapshot data.

## 3.3.2.2 Picture Playback

You can check and play a snapshot image based on your own needs.

<u>Step 1</u> Select a snapshot type in the selection bar of snapshot type. See Figure 3-37.

Figure 3-37 Snapshot type selection



<u>Step 2</u> Select **jpg** in **File Type**. See Figure 3-38.

File type contains dav and jpg. "Dav" represents video playback and "jpg" represents image playback.

File T	уре	jp	g			-
Data	Src	S	SD Card			-
Jun		•	<	2	018	>
Sun	Mon	Tue	Wen	Thu	Fri	Sat
					1	2
3	4	5	6	7	8	9
10	11	12	13	14	15	16
17	18	19	20	21	22	23
24	25	26	27	28	29	30

- <u>Step 3</u> Those dates with blue color indicate there are snapshot images in those days. Select a date with snapshot images inside.
- Step 4 Play images.
  - Click 💽 in the play control bar and the system plays the snapshots you have selected (in time order).
  - Click which represents the file list, pictures which you have selected would be displayed. Double-click a file in the list. See Figure 3-39. The file is displayed.

For detailed operations, see Table 3-13.

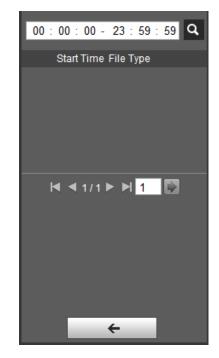


Figure 3-39 List of playback files

Table 3-13 Picture Playback file more operations

Operation	Description
Search	Enter starting time and ending time, and click Finds out all the picture files between the entered starting time and ending time.
Download	Click  , and the file is downloaded to local host.
	The download operation might vary with different browsers, and the actual interface shall prevail.
Back	Click to go back to the calendar interface.

## 3.4 Reports

You can follow certain rules such as time sequence, and check history data of temperature saved in the device Micro SD card.

## Preparation

- You have set the temperature measuring rules (spots, lines and area included). For detailed operations, see "4.6.1.1 Configuring Temperature Measuring Rules".
- You have inserted a SD card to the Device.

 $\square$ 

Some devices do not support this function. The actual product shall prevail.


### Procedure


### Step 1 Click the Report tab.


The **Report** interface is displayed. See Figure 3-40.

Figure 3-40 Report

Search		
search		
Start Time	2018-06-14	
	10 : 01 : 54	
End Time	2018-06-15	
	10 : 01 : 54	
Time Period	10 minute(s)	
Туре	🔽 Spot 📃 Line 📰 Area	
	Search	





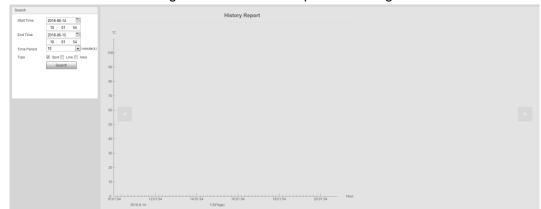

## 3.5 Alarm

You can select alarm type as needed, when the selected alarms are triggered, the system would record detailed alarm information at the right side of the interface.

 $\square$ 

Function of different devices might vary, and the actual product shall prevail.

## 3.5.1 Introduction to Alarm Types

For alarm types and conditions that trigger an alarm, see Table 3-14.

Alarm Type	Description	Condition
Motion	The alarm is triggered	You have enabled motion detection. For
detection	when moving objects	detailed operations, see "4.5.1 Configuring
delection	are detected.	Video Detection."
	The alarm is triggered	You have enabled detection to lack of SD card
	when the free space in	storage space. For detailed operations, see
Disk full	the SD card is lower	"4.5.5.1 Configuring SD Card Abnormality
	than the set percentage.	Parameters."

Table 3-14 Alarm type description

Alarm Type	Description	Condition		
	The alarm is triggered	You have enabled detection to SD card storage		
Disk error	when there is SD card	space. For detailed operations, see "4.5.5.1		
	error or abnormality.	Configuring SD Card Abnormality Parameters."		
External	The alarm is triggered	There is an alarm input port and the external		
External alarm	when there is alarm	alarm is enabled. For detailed operations, see		
alann	from external device.	"4.5.4 Configuring Alarm."		
	The alarm is triggered			
Illegal	when the login	You have enabled detection to illegal access.		
access	password has been	For detailed operations, see "4.5.5.3		
access	wrongly entered for	Configuring Illegal Access."		
	more than the set times.			
Audio	Alarm is triggered when	You have enabled detection to audio errors. For		
detection	there are audio input	detailed operations, see "4.5.2 Configuring		
detection	errors.	Audio Detection."		
	Alarm is triggered when	You have enabled detection to general		
IVS	the set smart plans are	behaviors. For detailed operations, see "4.4.2		
	triggered.	Configuring ."		
	Alarm is triggered when	You have enabled fire alarm. For detailed		
Fire warning	fire is detected.	operation, see "4.4.3 Configuring Fire		
		Warning."		
	When temperature			
Temperature	satisfies alarm	You have enabled temperature alarm. For		
alarm	conditions stipulated by	detailed operations, see "4.5.3 Configuring		
alam	temperature testing	Temperature Alarm."		
	rules, alarm is triggered.			
	When temperature			
Temperature	difference satisfies	You have enabled temperature comparison		
difference	alarm condition you	alarm. For detailed operations, see "4.5.3		
alarm	have set, alarm is	Configuring Temperature Alarm."		
	triggered.			
	When temperature of a			
Hot spot	hot spot satisfies alarm			
alarm	condition you have set,	You have enabled hot/cold spot tracing. For		
	alarm is triggered.	detailed operations, see "4.4.4 Configuring Hot		
	When temperature of a	Trace."		
Cold spot	cold spot satisfies alarm			
alarm	condition you have set,			
	alarm is triggered.			

## **3.5.2 Subscribing Alarm Information**

You can enable alarm prompts and define alarm sound according to your preference.

Step 1 Click the Alarm tab.

The Alarm interface is displayed. See Figure 3-42.

Alarm Type		No.	Time	Alarm Type	Alarm Information
Motion Detection	🗇 Disk Full				
Disk Error	<ul> <li>Video Tamper</li> </ul>				
External Alarm	<ul> <li>Illegal Access</li> </ul>				
Audio Detection	in NS				
Eire Warning	Eurning Warning				
Temperature Alarm	Temperature Different				
Hot Spot Warning	Cold Spot Warning				
Operation					
Prompt					
Alarm Tone					
📃 Play Alarm Tone					
Tone Path	Browse				

Step 2 Select an alarm type.

- <u>Step 3</u> Select **Prompt**, and the system prompts and records alarm information as needed.
  - If you are not in the **Alarm** interface when alarm events you have subscribed are

triggered, there will be a 🛄 displayed on the Alarm tab and the alarm

information will be recorded. Click the Alarm tab, and the sign disappears.

- If you are at the "Alarm" interface when the selected alarm is triggered, there will be detailed alarm information displayed at the right side of the interface.
- <u>Step 4</u> Select the check box of **Play Alarm Tone**, and select audio file.

System would play the audio file you have selected, when alarm events you have subscribed are triggered.

 $\square$ 

Click Remove all to remove all the alarm information.



 $\square$ 

- Click **Default**, and the Device is restored to default configuration.
- Click Refresh to view the latest configuration.

## 4.1 Configuring Camera

Configure camera's components such as lens, video and audio to ensure proper surveillance.

Functions of different devices might vary, and the actual product shall prevail.

## 4.1.1 Configuring Lens

## 4.1.1.1 Configuring Visible Image


### 4.1.1.1.1 Configuring Picture Parameters

You can configure the picture parameters including brightness, contrast, saturation, Chroma CNT, sharpness CNT and gamma.

### <u>Step 1</u> Click the **Picture** tab.

The Picture interface is displayed. See Figure 4-1.

Figure 4-1 The picture interface

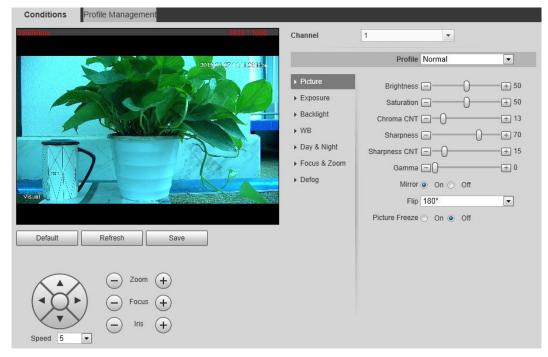

<u>Step 2</u> Configure picture parameters. See Table 4-1 for details.


Table 4-1 Description of picture parameters

Parameter	Description			
Style	Select display style of the video image, including Soft, Standard and Vivid.			
Brightness	Changes the value to adjust the picture brightness. The bigger the value is,			
Dirgininess	the brighter the picture will be.			
Contrast	Changes the contrast of the picture. The bigger the value is, the more the			
Contrast	contrast will be between bright and dark areas.			
Saturation	Makes the color deeper or lighter. The bigger the value is, the deeper the			
Caturation	color will be. Saturation value doesn't change image brightness.			
Chroma CNT	Reduces the image color and prevents it from being too strong. The bigger			
	the value, the better the effect.			
	Changes the sharpness of picture edges. The bigger the value is, the			
Sharpness	clearer the picture edges will be, and if the value is set too big, picture			
	noises are more likely to appear.			
Sharpness	The bigger the value, the stronger the sharpness CNT.			
CNT				
Gamma	Changes the picture brightness and improves the picture dynamic range in			
	a non-linear way. The bigger the value is, the brighter the picture will be.			
Flip	In the <b>Flip</b> list, select <b>180°</b> and the video image will be turned upside down.			
	Select <b>0</b> ° and the video image returns to its primary condition.			
	Select the <b>On</b> check box to enable this function.			
EIS	Corrects the device shaking with difference comparison algorithm and			
	improves the image clarity, effectively solves the picture shaking problem.			

### 4.1.1.1.2 Configuring Exposure

### Step 1 Click the **Exposure** tab.

The **Exposure** interface is displayed. See Figure 4-2. Figure 4-2 The exposure interface

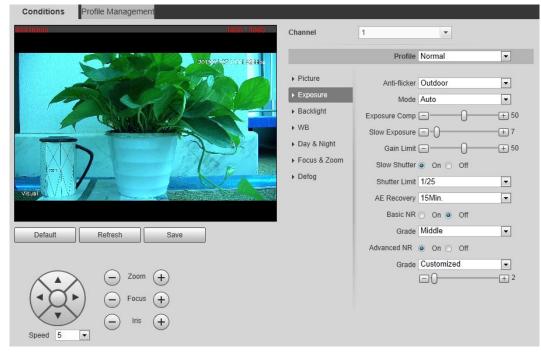

<u>Step 2</u> Configure exposure parameters. See Table 4-2 for details.

 $\square$ 

# Parameters and its description in Table 4-2 are based on the condition that you have selected **Standard** as **Profile**.

Parameter	Description	
Mode	<ul> <li>Auto: Adjusts the image brightness according to the actual condition automatically.</li> <li>Shutter priority: When the exposure range is normal, the system prefers the configured shutter range when auto adjusting according to the ambient lighting condition. If the image brightness is not enough and the shutter value has reached upper or lower limit, the system adjusts gain value automatically to ensure the image at ideal brightness.</li> <li>Iris priority: The iris value is set to a fixed value, and the device adjusts shutter value then. If the image brightness is not enough and the shutter value the image at ideal brightness.</li> <li>Manual: Configure gain and shutter value manually to adjust image brightness.</li> </ul>	
Anti-flicker	<ul> <li>50Hz: When the current is 50Hz, the system adjusts the exposure according to ambient light automatically to ensure there is no stripe appears.</li> <li>60Hz: When the current is 60Hz, the system adjusts the exposure according to ambient light automatically to ensure there is no stripe appears.</li> <li>Outdoor: You can select any exposure mode as needed.</li> </ul>	
Iris	Select <b>Manual</b> or <b>Aperture Priority</b> as the <b>Mode</b> . Then you can configure the iris parameter.	
Exposure	Select Manual, Aperture Priority or Shutter Priority as the Mode. Then	
Comp	you can configure the exposure compensation parameter.	
AE (Auto Exposure) Recovery	Set a recovery time. After you adjust the shutter manually, the exposure mode will be restored to the default one after the time you have set.	
Recovery	In the selection box of <b>AE Recovery</b> , you can select <b>Off</b> to turn off AE	
	recovery. Set Manual or Shutter Priority as the Mode. Then you can configure the	
Shutter	parameter.	
	Adjust the camera's shutter value.	
2D NR	Select the <b>On</b> check box to enable this function. Aiming at single-frame image, 2D NR averages the pixel points (points that are with image noise) with other common pixel points to decrease the image noise and achieve an acceptable and good image display effect. The higher the grade, the better the noise suppression effect.	
3D NR	Select the <b>On</b> check box to enable this function. Aiming at multiple-frame image, 3D NR handles information between two frames to reduce the image noise. The higher the grade, the better the noise suppression effect.	

### Table 4-2 Description of exposure parameters

### 4.1.1.1.3 Configuring Backlight


Backlight mode is divided into **BLC**, **HLC** and **WDR**. You can select one from the three options above at one time.

- When in BLC mode, the camera gets clearer image of the dark areas on the target when shooting against light.
- When in WDR mode, the camera constrains over bright areas and compensates dark areas to improve the image clarity.
- When in HLS mode, the camera dims strong light, and it is applicable to the exit of toll station or parking lot. This mode works well for taking pictures of human face or car plate detail under extreme low ambient light.

### Step 1 Click the **Backlight** tab.

The **Backlight** interface is displayed. See Figure 4-3.

Figure 4-3 The backlight interface

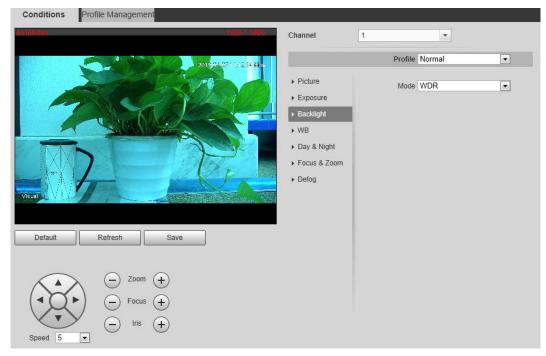

<u>Step 2</u> Configure backlight parameters. See Table 4-3 for details.

 $\square$ 

\_\_\_\_

- - - -

There might be a few seconds of video loss when the device is switching to WDR mode from other modes.

Table 4-3 Backlight mode description
--------------------------------------

Backlight Mode	Description
BLC	The system adjusts exposure according to ambient lighting condition
BLC	automatically to ensure the clarity of the darkest area.
WDR	The system dims bright areas and compensates dark areas to ensure the
	clarity of all the area.
HLS	The system constrains bright areas and reduces halo size to dim the overall
псо	brightness.

### 4.1.1.1.4 Configuring White Balance

With the white balance technology, you can make a white object displaying itself clearly on the video image under all kinds of environment.

### Step 1 Click the WB tab.




Figure 4-4 The WB interface

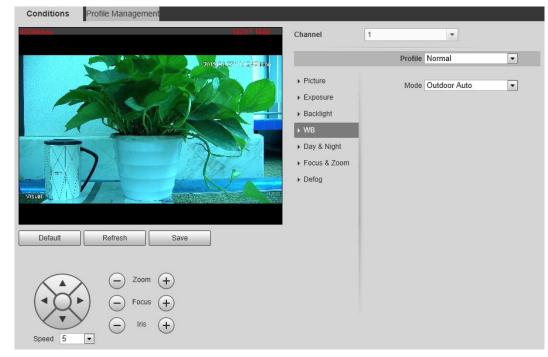


Table 4-4 WB	mode	description
--------------	------	-------------

WB Mode	Description
Auto	The system compensates WB according to light condition to ensure color
Auto	precision.
Outdoor	The system auto compensates WB to most outdoor environments with
Outdoor	natural or artificial light to ensure color precision.
Manual	Configure red and blue gain manually; the system auto compensates WB
wanuai	according to color temperature.
Natural	The system auto compensates WB to environments without artificial light to
naturai	ensure color precision.
Street Lomp	The camera will implement white balance to ensure precision and clarity of
Street Lamp	the video image.

### 4.1.1.1.5 Configuring Day & Night


You can configure this function to accomplish the switch of image display between color mode and black/white mode.

Step 1 Click the Day & Night tab.

The Day & Night interface is displayed. See Figure 4-5.

Figure 4-5 The day & night interface

Image: State of the state	Conditions Profile Management	1920 - 1980 Ch	nannel	1 •	
			Picture Exposure Backlight WB Day & Night Focus & Zoom	Profile Normal	



#### Table 4-5 Day & night mode description


Parameter	Description
Туре	Select Type from Electrical and ICR.
	You can select device display mode from <b>Color</b> , <b>Auto</b> and <b>B/W</b> .
	Day & night configuration is independent from profile management
Mode	configuration.
mode	<ul> <li>Color: The system displays color image.</li> </ul>
	<ul> <li>Auto: The system switches between color and black-and-white display</li> </ul>
	according to the actual condition.
	• B/W: The system displays black-and-white image.
	Select Auto as the Mode. Then You can configure this parameter.
Sensitivity	You can configure camera sensitivity in switching between color and
	black-and-white mode.


### 4.1.1.1.6 Configuring Focus & Zoom

<u>Step 1</u> Click the Focus & Zoom tab.

The Focus & Zoom interface is displayed. See Figure 4-6.

Figure 4-6 The focus & zoom interface

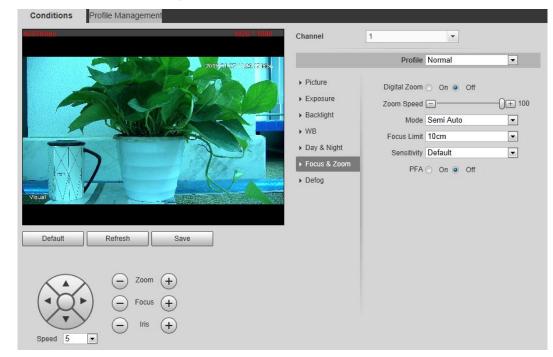




Parameter	Description			
	Select the <b>On</b> check box to enable it.         You can use the digital zoom to continue the zooming operation even if the optical zoom is at the maximum value.         Dom Speed       The larger the value, the faster the zooming operation.         The camera's focusing mode.       • Auto: Once there is any movement or change of an object on the video image and the image turns blurry, the camera will focus again automatically.         ode       • Semi Auto: A user needs to prepare some conditions for the camera to focus automatically. This is called "Semi Auto." Pressing the focusing button, implementing the zooming operation, enabling preset or three-dimensional positioning, and PTZ's rotation will all make the camera focus again automatically.         • Manual: You need to click image or imag			
ParameterDigital ZoomZoom SpeedModeFocus LimitSensitivity	You can use the digital zoom to continue the zooming operation even if the			
Select the <b>On</b> check box to enable it.         Digital Zoom         Select the <b>On</b> check box to enable it.         You can use the digital zoom to continue the zooming operation even optical zoom is at the maximum value.         Zoom Speed       The larger the value, the faster the zooming operation.         The camera's focusing mode.       • Auto: Once there is any movement or change of an object on the image and the image turns blurry, the camera will focus again automatically.         Mode       • Semi Auto: A user needs to prepare some conditions for the camera focus automatically. This is called "Semi Auto." Pressing the focus button, implementing the zooming operation, enabling preset or three-dimensional positioning, and PTZ's rotation will all make the camera focus again automatically.         • Manual: You need to click image or the focusing distance is the focusing operation.         Focus Limit       The camera's minimum focusing distance. If the focusing distance is to small, it might get the camera focus on its dome.         Select from <b>High</b> , <b>Default</b> and <b>Low</b> . When you select <b>High</b> , it will be only and the select for the				
Zoom Speed	The larger the value, the faster the zooming operation.			
	The camera's focusing mode.			
	Auto: Once there is any movement or change of an object on the video			
	image and the image turns blurry, the camera will focus again			
	automatically.			
	• Semi Auto: A user needs to prepare some conditions for the camera to			
Mode	focus automatically. This is called "Semi Auto." Pressing the focusing			
Wode	button, implementing the zooming operation, enabling preset or			
	three-dimensional positioning, and PTZ's rotation will all make the			
	camera focus again automatically.			
	• Manual: You need to click 🕞 or 🕂 on the camera's web to achieve			
	the focusing operation.			
Ecoup Limit	The camera's minimum focusing distance. If the focusing distance is too			
	small, it might get the camera focus on its dome.			
Sonsitivity	Select from High, Default and Low. When you select High, it will be easier			
Sensitivity	for the camera to focus.			
	Select the check box of <b>On</b> to enable the infrared correction.			
PFA	Then when you implement the zooming or focusing operation under low			
	lighting condition, the camera will turn on the infrared light to aid you.			
Lens Init	Click Lens Init to initialize the lens. The system will clear the zooming and			
	focusing data you have set.			

### 4.1.1.1.7 Configuring Defog

The image quality will be compromised in foggy or hazy environment, and defog can be used then to improve image clarity.

### Step 1 Click the Defog tab.

The **Defog** interface is displayed. See Figure 4-7. Figure 4-7 The defog interface

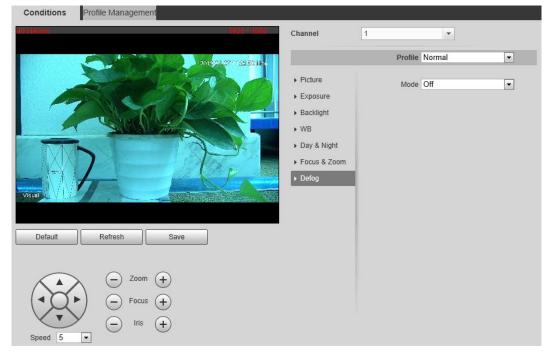

<u>Step 2</u> Configure the defogging settings. See Table 4-7.

Table 4-7	Defogging	settings	description
-----------	-----------	----------	-------------

Defogging Settings	Description
Auto	The system adjusts image clarity according to the actual condition.
Manual	Adjust image clarity manually.
Off	Defogging function disabled.

### 4.1.1.1.8 Restoring Lens to the Default Settings

After you have modified lens parameters as mentioned above in 4.1.1.1, if you find situations such as unclear images and abnormal colors, you can restore those parameters to the default settings—you just need to click the **Default** button and click **Save** to finish configuration. See Figure 4-8.

Figure 4-8 Restoring lens to the default settings

Conditions Profile Management				
4850Kinos	1829 - 1080	Channel	1	
	2018 21.07 11: 1.08 200		Profile Normal	•
Vauel Default Refresh Save		<ul> <li>Picture</li> <li>Exposure</li> <li>Backlight</li> <li>WB</li> <li>Day &amp; Night</li> <li>Focus &amp; Zoom</li> <li>Defog</li> </ul>	Brightness - O Saturation - O Chroma CNT - O Sharpness - O Sharpness CNT - O Gamma - O Mirror • On • Off Flip 180° Picture Freeze • On • Off	+ 50 + 50 + 13 + 70 + 15 + 0
$\begin{array}{c c} & & & & \\ \hline \bullet & \\ \hline \bullet & \\ \hline \end{array} \begin{array}{c} \hline \bullet & \\ \hline \bullet & \\ \hline \bullet & \\ \hline \hline$				

## 4.1.1.2 Configuring Thermal Image

 $\square$ 

To find and configure thermal image, you need to select **Setting> Camera > Conditions > Conditions** first, and in the **Channel** box, select **2**. See the following steps for details.

Configure a specific scenario where you use the camera, including indoor scenario, outdoor scenario, and adaptive scenario. You can choose a scenario you need, and configure and check the scenario.

<u>Step 1</u> Select Setting> Camera > Conditions > Conditions.

The **Conditions** interface is displayed.

<u>Step 2</u> In the **Channel** box, select **2**.

The thermal image interface is displayed. See Figure 4-9.

 $\square$ 

The thermal image interface might vary with different cameras, and the actual product shall prevail.

-	ent			
e angle1 21.2 Min:13.0 Max:49.5 °C	1280 * 1024 2019-01-09 15 40 09 Wed	Channel	2	
		Profile	Normal	
	67.5 C			
		Colorization	White Hot	
		Advanced		
		Basic Settings		
		Brightness		
	Contraction of the local division of the loc	Contrast	□	
Redeng	(e) 1200 12	Sharpness	□	
all all		Detail Enhancemer	nt 🖃 — 64	
- K V		Histogram Equaliza	at — — — — — — — — — — — — — — — — — —	
_	JATAC C	EZoom	□)	
hic High Dynamic	Auto (1)	ROI Type	Full Screen	
Refresh	Save	Mirror	On Off	
		Flip	0° 💌	
		Picture Freeze	On  Off	
		Image Enhancemen	it	
		Basic NR(Noise	e Re + 50	
		Advanced NR(F	Front 50	
		Advanced NR (	Rear 0 + 0	
		Agc Settings		
		Gain Mode	=)+ 1	
		Agc Plateau	=)+ 0	
		Gain Mode	Low Temperature      High Temperature	
		FFC Settings		
		FFC Mode	Auto	
		FFC Period		

### Figure 4-9 The thermal image interface



Classification	Parameter	Description					
	Profile	Common model, day and night can be selected. You can set the relevant parameter of thermal image after you configure files.					
Profile	Scene (marked by ① in Figure 4-9)	<ul> <li>Select the duplicate frame and set the frequently used video parameter as the user-defined scene. Or, you can select the default scene and set the display of the thermal image.</li> <li>Low Dynamic: Thermal images will be displayed based on the configuration of low dynamic scene.</li> <li>High Dynamic: Thermal images will be displayed based on the configuration of high dynamic scene.</li> <li>Auto: Thermal images will be displayed based on the configuration of high dynamic scene.</li> </ul>					

Classification	Parameter	Description					
		Add color to the thermal imagery image and use color to					
		indicate the temperature. "White glow" is the default					
		color.					
		• White glow: Lighter when the temperature is higher					
		in gray image.					
		• Black glow: Lighter when the temperature is lower in					
		gray image.					
		• Fusion: Color is concentrated on the range of purple-					
		red-yellow. More purple when the temperature is					
		lower and more yellow when the temperature is					
		higher.					
		• Rainbow: Color is concentrated on the range of blue-					
		green-red-yellow. Bluer when the temperature is					
		lower and more yellow when the temperature is					
		higher.					
		Golden autumn: Color is concentrated on the range					
		of red- yellow. Redder when the temperature is lower					
		and more yellow when the temperature is higher.					
		Midday: Color is concentrated on the range of blue-					
		green-red-yellow. Bluer when the temperature is					
		lower and more yellow when the temperature is					
		higher.					
Basic Settings	Colorization	Iron oxide red: Its color range is similar to that of					
		Midday, but its brightness is lower than Midday.					
		• Amber: It's mainly represented as brown. Brighter					
		when the temperature is higher.					
		Boulder: Color is concentrated on the range of					
		purple - red- yellow-green- blue. More purple when					
		the temperature is lower and bluer when the					
		temperature is higher.					
		<ul> <li>The setting sun: Color is concentrated on the range of blue- red- yellow. Bluer when the temperature is</li> </ul>					
		lower and more yellow when the temperature is					
		higher.					
		<ul> <li>Ice and fire: In color image, high temperature objects</li> </ul>					
		show red and low temperature objects show blue.					
		Ice and fire is usually used to give a warning.					
		<ul> <li>Oil painting: Color is concentrated on the range of</li> </ul>					
		purple-blue-green- yellow-red. More purple when the					
		temperature is lower and redder when the					
		temperature is higher.					
		<ul> <li>Pomegranate: It's mainly represented as wine red.</li> </ul>					
		Brighter when the temperature is higher.					
		<ul> <li>Green jade: It's mainly represented as aquamarine.</li> </ul>					
		Brighter when the temperature is higher.					

Classification	Parameter	Description
		Change the overall image brightness through linear
	Brightness	mode. The bigger the value is, the brighter the image will
		be, and the smaller the darker.
		Change the sharpness of image edges. The larger the
	Sharpness	value, the more obvious the image edge.
		Do not make the value too large to prevent image noise.
	EZoom	Enlarge the thermal image according to the zoom time
		you have set.
		Select the district of strengthening video quality. The
		brightness and clarity of the chosen district will be higher.
		District consists of 25% central point, 50% central point,
	ROI Type	75% central point, full screen, bottom part, middle part,
	itter rype	above part and user-defined part.
		When you set <b>ROI Type</b> to <b>Custom</b> , you need to press
		and drag the left mouse button. Then, add the "ROI Type"
		box.
	Mirror	Open the mirror image and the monitor image will reverse
		from left to right.
	Picture Freeze	When you are using the preset, the preset image that has
		been used will be directly represented. The image during
		the movement of PTZ will not be displayed.
		Average the pixel of single frame image with other pixels
		to reduce the image noise.
	Basic NR (Noise	Select the copy frame, open the basic noise reduction
	Reduction)	and configure the class of basic noise reduction. The
		higher the class, the better the noise reduction, but the
	Auto Osia	image will be less clear.
	Auto Gain	The larger the gain value, the more unstable the image.
Gain settings	Balanced Gain	The larger the district, the bigger the contrast.
	Gain Model	Low-temperature mode and high-temperature mode are contained.
		Method of correcting the shutter.
	FFC Mode	<ul> <li>Auto: According to the switch period that you have</li> <li>appliqueed, the shutter will be corrected regularly.</li> </ul>
		<ul> <li>configured, the shutter will be corrected regularly.</li> <li>Manual: Correct the shutter by yourself.</li> </ul>
FFC Settings		You can configure this parameter only when <b>FFC Mode</b>
i i o oettiings	FFC Period	is set to be <b>Auto</b> .
		Adjust time gap of correcting the shutter automatically.
		Click <b>Do FFC</b> to trigger the shutter correcting for this
	Do FFC	time.
		unio.

<u>Step 4</u> Click **Save** to finish configuration.

Click Reset and the lens properties are restored to the primary state.

## 4.1.1.3 Configuring Profile Management

When configuring the profile management, you can select from **Normal**, **Full Time** and **Schedule** based on your own needs.

- <u>Step 1</u> Select Setting > Camera > Conditions > Conditions > Profile Management. The Profile Management interface is displayed.
- <u>Step 2</u> Profile management configuration:
  - When Profile Management is set as Normal, the surveillance system works under normal configuration.

Figure 4-10 Common setting						
Conditions Pro	Conditions Profile Management					
Channel	1					
Profile Management	Normal O Full Time O Schedule					
	Default Refresh Save					

 When Profile Management is set as Full Time, you can select Day or Night as Always Enable, and the surveillance system works under Always Enable.

Figure	4-11	Full	time	setting

Conditions Pro	ofile Management
Channel	1 💌
Profile Management	Normal  Full Time  Schedule
Always Enable	Day
	Default Refresh Save

 When Profile Management is set as Schedule, you can drag the slide block to set certain time as Day or Night. For example, set 8:00–5:00 PM as day, and 0:00– 8:00 and 18:00–24:00 as night. System works under corresponding configuration in different time.

Figure 4-12 Switching based on time	è
-------------------------------------	---

Conditions P	rofile Manager	nent					
Channel	1	•					
Profile Managemen	t 🔘 Normal 🔘	Full Time ()	Schedule				
Period setting							
	0:00	4:00	8:00	12:00	16:00	20:00	24:00
	📒 Day 💼	Night					
	Default	Refr	esh	Save			

<u>Step 3</u> Click **Save** to finish configuration.

## 4.1.2 Configuring Video Parameters

### 4.1.2.1 Configuring Video Streaming

Configure video stream parameters, including stream type, encode mode, resolution, frame rate, bit stream control, bit stream, I frame interval, SVC, and watermark.

### <u>Step 1</u> Select Setting > Camera > Video > Video.

The **Video** interface is displayed. See Figure 4-13.

The default bit stream value of different devices might vary, and the actual product shall prevail.

			1 19	juio 4	,			
Video S	Snapshot Ov	erlay	ROI	Path				
Channel	1	*						
Main Stream						Sub Stream		
						Enable		
Encode Mode	H.264H	•				Encode Mode	H.264H	•
Resolution	1920*1080(1080P)	•				Resolution	352*288(CIF)	•
Frame Rate(FPS)	25	•				Frame Rate(FPS)	15	•
Bit Rate Type	CBR	-				Bit Rate Type	CBR	•
Reference Bit Rate	1024-8192Kb/S					Reference Bit Rate	32-640Kb/S	
Bit Rate	4096	▼ (Kb/S)				Bit Rate	192	<ul> <li>(Kb/S)</li> </ul>
I Frame Interval	50	(25~150)				I Frame Interval	30	(15~150)
SVC	1(off)	•				SVC	1(off)	•
✓ Watermark Settings								
Watermark Character	DigitalCCTV							
	Default	Refresh	Save					

Figure 4-13 Video



Parameter	Description					
Enable	Select the option box to enable sub stream (enabled by default).					
Lilable	Enabling sub stream 1 and sub stream 2 at the same time are supported.					
	Encode mode of video.					
	H.264: Main profile encode mode.					
Encode	H.264H: High profile encode mode.					
Mode	H.264B: Baseline profile encode mode.					
Mode	• MJPEG: Under this mode, the higher streaming value is required to					
	ensure the clarity of images. And, we suggest that you should use the					
	maximum streaming value we have offered.					
Resolution	The resolution of the video The max resolution of different devices might					
Resolution	vary, and the actual product shall prevail.					
Frame	The number of frame in one second of video The higher the FPS is, the					
Rate (FPS)	clearer and smoother the video will be.					
	You can select bit rate type:					
	• Fixed: the bit rate changes little and keeps close to the set bit rate					
	value.					
Bit rate	Changeable: the bit rate changes as monitoring scene changes.					
	Bit rate type can only be set as <b>Fixed</b> when <b>Encode Mode</b> is set as					
	MJPEG.					
	This parameter can be configured only when the bit rate type is set as					
Image	"Changeable."					
quality	Image quality can be classified as the six levels of "the best", "the better",					
	"good", "bad", "the worse", "the worst."					

#### Table 4-9 Parameter description

Parameter	Description
Reference bit rate value	According to resolution and frame rate you have set, we have offered you a reference bit rate value, which is also the best value you can adopt.
Bit rate	This parameter can be configured only when the bit rate type is set as <b>Fixed</b> . If you select the bit rate value according to "reference bit rate value", the
	streaming changes little and keeps close to the bit rate value you have selected. Select <b>Customized</b> and you can configure bit rate value manually.
Maximum bit rate	This parameter can be configured only when bit rate type is set as <b>Changeable</b> . You can select the max value of the bit rate according to the reference bit rate value, and the bit rate changes with monitoring scenes, but the max bit rate keeps close to the value you set.
l Frame Interval	The number of P frame between two I frames, and the I Frame Interval range changes as FPS. It is recommended to set I Frame Interval twice as big as FPS.
SVC	Scaled video coding, able to encode a high quality video bit stream that contains one or more subset bit streams. The default value is 1, which means no layered coding.
Watermark Settings	Select the check box to enable watermark. Then you can check if the video has been tampered by verifying the watermark.
Watermark character	The default character is Digital CCTV.

<u>Step 3</u> Click **Save** to finish configuration.

## 4.1.2.2 Configuring Image Streaming

Configure parameters of image streaming which cover snapshot type/interval, image size/quality.

### <u>Step 1</u> Select Setting > Camera > Video > Snapshot.

The **Snapshot** interface is displayed. See Figure 4-14.

### Figure 4-14 Snapshot

Video	Snapshot	Overlay	ROI	Path
Channel	1	•		
Snapshot Type	General	•		
Image Size	1080P (1920*1080)			
Quality	5	•		
Interval	1S	•		
	Default	Refresh	Save	

Step 2 Configure snapshot streaming. See Table 4-10.

Parameter	Description		
Snapshot type	You can select General or Event.		
	General means the system takes snapshot as scheduled		
	• Event means snapshot functions when video\audio detection,		
	event or alarm is triggered.		
Image Size	The same resolution with main stream.		
Quality	Snapshot quality. The bigger the value, the better the snapshot		
	quality.		
Snapshot interval	Snapshot frequency.		
	Select <b>Customized</b> to manually configure snapshot frequency.		
Heat map in jpeg	Select the check box and snapshots of thermal images will carry the		
	temperature-measuring information.		

Table 4-10 Parameter description

<u>Step 3</u> Click **Save** to finish configuration.

## 4.1.2.3 Configuring Video Overlay

Configure Overlay which covers Privacy Masking, Channel Title, Time Title, Geography location, Font, and Picture Overlay.

### 4.1.2.3.1 Configuring Privacy Masking

You can enable this function if you need to cover certain area in the video image.

### $\square$

This function is available only for bullet cameras.


<u>Step 1</u> Select Setting > Camera > Video > Overlay.

The Overlay interface is displayed.

Step 2 Click Privacy Masking.

The **Privacy Masking** interface is displayed. See Figure 4-15.

Figure 4-15 Privacy masking interface

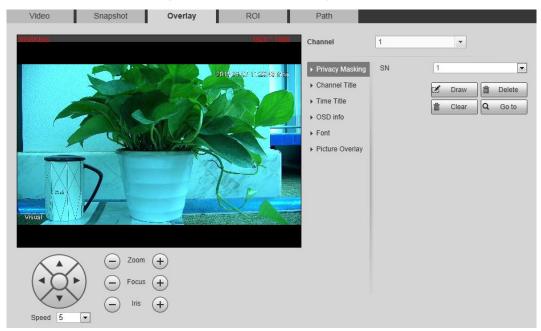

- Step 3 Select **Enable**, and then drag the block to the area that you need to cover.
  - You can draw four area boxes at most.
  - Click **Remove All** to delete all the area boxes; you can also just select one box, and click **Delete** or right-click to delete it.

<u>Step 4</u> Click **Save** to finish configuration.

### 4.1.2.3.2 Configuring Channel Title

You can enable this function if you need to display Channel title in the video image.

<u>Step 1</u> Select **Setting > Camera > video > Overlay**.

The **Overlay** interface is displayed.

Step 2 Click Channel Title.

The Channel Title interface is displayed. See Figure 4-16.



Step 3 Select **Enable** and enter channel title, and then the title displays in the video image.

You can drag the "Channel Title" box in the video image with your mouse to adjust the box's location.

<u>Step 4</u> Click **Save** to finish configuration.

### 4.1.2.3.3 Configuring Time Title

You can enable this function if you need to display time on the video image.

<u>Step 1</u> Select Setting > Camera > Video > Overlay.

The **Overlay** interface is displayed.

Step 2 Click Time Title.

The Time Title interface is displayed. See Figure 4-17.

Figure 4-17 Time title



<u>Step 3</u> Select the **Enable** check box, and the time displays in the video image.

Step 4 Click **Week Display**, and then the week information displays in the video image.

You can drag the "Time Title" box in the video image with your mouse to adjust the box's location.

<u>Step 5</u> Click **Save** to finish configuration.

#### 4.1.2.3.4 Configuring OSD Info

Enable this function if you want to display words on the video image.

- Text Overlay and Picture Overlay can't work at the same time.
- This function is available on select models and the actual interface shall prevail.
- <u>Step 1</u> Select Setting > Camera > Video > Overlay.

The **Overlay** interface is displayed.

Step 2 Click OSD Info.

The OSD Info interface is displayed. See Figure 4-18.

Figure 4-18 OSD Info

Video	Snapshot	Overlay	ROI	Path			
4017Khos			1920 - 1080	Channel	1		
	5.	201	<b>Şələ</b> r tiszər kon	▶ Privacy Masking	Preset	Enable	O Disable
		A Stor		Channel Title     Time Title	Coordinates	○ Enable	Oisable
		TI		OSD info     Font	Zoom	O Enable	Oisable
				Picture Overlay	North	○ Enable	Disable
					Pattern	Enable	🔘 Disable
Visual	the				Text Overlay	C Enable	Oisable
VISUAL					Input Text:		
Default	Refresh	Save		-			
					Text Align		
					Right		•

<u>Step 3</u> Select the **Enable** check box of **Text Overlay**, and enter text based on your own needs. Then, select the text align method, and the **OSD Info** box is displayed on the video image.

 $\square$ 

You can drag the **OSD Info** box on the video image with your mouse to adjust the box's location.

<u>Step 4</u> Click **Save** to finish configuration.

#### 4.1.2.3.5 Configuring Font

You can adjust size and color of the font in the video images based on your own needs.

<u>Step 1</u> Select **Setting > Camera > video > Overlay**.

The **Overlay** interface is displayed.

<u>Step 2</u> Click the **Font** tab.

The **Font** interface is displayed. See Figure 4-19.

Figure 4-19 Font setting



Step 3 Select color and size of the font based on your own needs.

<u>Step 4</u> Click **Save** to finish configuration.

#### 4.1.2.3.6 Configuring Picture Overlay

You can enable this function if you need to display picture information in the video image.

Geography location and Picture overlay can't work at the same time.

<u>Step 1</u> Select Setting > Camera > video > Overlay.

The **Overlay** interface is displayed.

Step 2 Click the **Picture Overlay** tab.

The Picture Overlay interface is displayed. See Figure 4-20.

Figure 4-20 Picture overlay interface



Step 3 Select the Enable check box.

You will be informed that OSD information is to be closed. Click Save.

<u>Step 4</u> Click **Upload Picture**, and select a picture. The picture is displayed in video images.

You can drag the "Picture Overlay" box in the video image with your mouse to adjust the box's location.

<u>Step 5</u> Click **Save** to finish configuration.

### 4.1.2.4 Configuring ROI

Select ROI in the image, and then the selected image would display with configured quality. <u>Step 1</u> Select **Setting > Camera > Video > ROI**.

The ROI interface is displayed. See Figure 4-21.

Figure 4-21 ROI interface

Video	Snapshot	Overlay	ROI	Path		
39448568			1920 * 108	Channel	1	•
Visual	Rest of the second seco			Enable     Image Quality		
Remove All	Delete (C	Or Rightclick )				
Default	Refresh	Save				

- <u>Step 2</u> Select the **Enable** check box.
- <u>Step 3</u> Hold the left mouse button to draw a ROI area on video images. You can also configure the ROI's display quality.

 $\square$ 

- You can draw at most four ROI areas.
- Click **Remove All** to delete all the area boxes; you can also just select one box, and click **Delete** or right-click to delete it.

<u>Step 4</u> Click **Save** to finish configuration.

### 4.1.2.5 Configuring Storage Path

Configure storage paths covering Live Snapshot, Live Record, Playback Snapshot,

Playback Download, Video Clips, and Heat Map.

<u>Step 1</u> Select **Setting > Camera > Video > Path**.

The **Path** interface is displayed. See Figure 4-22.

Figure 4-22 Storage path interface

Video	Snapshot	Overlay	RO	1	Path	
Live Snapshot	C:\Users				Browse	
Live Record	C:\Users				Browse	
Playback Snapshot	C:\Users				Browse	
Playback Download	C:\Users				Browse	
Video Clips	C:\Users				Browse	
Heat Map	C:\Users				Browse	
	Default	Save				

<u>Step 2</u> Click **Browse**, and configure storage paths of live snapshot, live record, playback snapshot, playback download, video clips, and heat map. See Table 4-11 for detailed description.

Table 4-11 Storage path description

Path	Description
Live Snapshot	Live snapshot refers to the snapshot of live interface.
	C:\Users\admin\WebDownload\LiveSnapshot is the default path.
Live Record	Live record refers to the recorded video of live interface.
LIVE RECOID	C:\Users\admin\WebDownload\LiveSnapshot is the default path.
Playback	Playback snapshot refers to the snapshot of playback interface.
Snapshot	C:\Users\admin\WebDownload\LiveSnapshot is the default path.
	Playback download refers to the downloaded video of playback
Playback	interface.
Download	C:\Users\admin\WebDownload\LiveSnapshot is the default path.
	Video clips refer to the clipped video of playback interface.
Video Clips	C:\Users\admin\WebDownload\LiveSnapshot is the default path.
Heat Man	Heat map comes from the location <b>Setting &gt; Temperature</b> .
Heat Map	C:\Users\admin\WebDownload\LiveSnapshot is the default path.
$\square$	

Ш

Administrator in the default path is the user account.

<u>Step 3</u> Click **Save** to finish configuration.

# 4.1.3 Configuring Audio Parameters

Configure audio parameters covering **Encode Mode**, **Sampling Frequency**, **Audio in Type**, and **Noise Filter**.

Functions of different devices might vary and the actual product shall prevail.

<u>Step 1</u> Select **Setting > Camera > Audio**.

The Audio interface is displayed. See Figure 4-23.

Encode		
Main Stream		
Enable		
Encode Mode	G.711A	•
Sampling Frequency	16000	•
Sub Stream		
Enable		
Encode Mode	G.711A	•
Sampling Frequency	16000	•
Attribute		
Audioln Type	Lineln	•
Noise Filter	Enable	•
Microphone Volume		
Speaker Volume		() <u>+</u> 100

<u>Step 2</u> Configure Audio parameters. For detailed description, see Table 4-12.

Table 4-12 Parameters

Parameters	Description				
	Audio can be enabled only when video is enabled.				
	Enable Main Stream or Sub Stream, and the network stream is				
Enable	composed of both audio and video streams. If you do not select				
	Main Stream or Sub Stream, then only video images are				
	transmitted.				
	You can select audio encode mode. G.711A, G.711Mu, and AAC are				
Encode Mode	included.				
	The configured audio encode mode applies to audio and intercom.				
Sampling	Audio's sampling frequency. 8K and 16K are included.				
Frequency					
	Two audio types are selectable.				
Audio in Type	Linein: External audio input source is required.				
	• <b>Mic</b> : External audio input source is not required.				
Noise Filter	Enable this function, and the system auto filters ambient Noise.				
NA:	Adjusts microphone volume.				
Microphone					
Volume	This function is not available for all devices.				

Figure 4-23 Audio

Parameters	Description
Speaker Volume	Adjusts speaker volume.
	This function is not available for all devices.

<u>Step 3</u> Click **Save** to finish configuration.

# 4.2 Configuring Network

# 4.2.1 Configuring TCP/IP

You need to configure the camera's IP address and DNS server to connect the camera with other devices in the network.

### Preparation

You have connected the camera to network.

### Procedure

#### <u>Step 1</u> Select Setting > Network > TCP/IP.

The **TCP/IP** interface is displayed. See Figure 4-24.

TCP/IP	
Host Name	TPCDome
Ethernet Card	Wire(Default)
Mode	Static O DHCP
MAC Address	20 . 18 . 06 . 30 . 13 . 55
IP Version	IPv4
IP Address	192 . 168 . 102 . 122
Subnet Mask	255.255.0.0
Default Gateway	192.168.0.1
Preferred DNS	223.5.5.5
Alternate DNS	223.6.6.6
Enable ARP/Ping to s	et IP address service
	Default Refresh Save

<u>Step 2</u> Configure TCP/IP parameters. See Table 4-13 for details.

Table 4-13 TCP/IP parameters

Parameter	Description
Host Name	Enter host name, 15 characters at most.
Ethernet Card	Wire (Default) is set by default.

Figure 4-24 TCP/IP interface

Parameter	Description				
	• Static: You need to manually configure IP Address, Subnet				
	Mask and Default Gateway.				
Mode	• DHCP: Obtains IP address automatically. With DHCP enabled, IP				
Mode	Address, Subnet Mask and Default Gateway cannot be				
	configured. You can check the current IP	address whether the			
	DHCP takes effect or not.				
MAC Address	Host's MAC address, cannot be modified.				
IP Version	Select IPv4 or IPv6.				
	You can type IP address and subnet mask according to your own				
IP Address	needs.				
	All the IPv6 addresses will be validated, so ensure IP address and				
	subnet mask are in the same network segment, which means the				
Subnet Mask	front parts of the IP address and the default gateway are the same				
	one.				
	Configure as needed, the default gateway				
Default Gateway	must be in the same network segment with	There is no default			
	the IP address.	gateway for IPv6.			
Preferred DNS	IP address of the preferred DNS.	Enter 128 digits in			
	· · · · · · · · · · · · · · · · · · ·	preferred DNS and			
Alternate DNS IP address of the alternate DNS. alternate D					

Parameter	Description
	<ul> <li>Select the check box, get the device MAC address, and then you can modify and configure the device IP address with ARP/ping command. This is enabled by default. During reboot, you will have no more than two minutes to configure the device IP address with a ping packet which has certain length. The server will be turned off in 2 minutes, or it will be turned off immediately after IP address configuration. If this is not enabled, the IP address cannot be configured with ping packet.</li> <li>A demonstration of configuring IP address with ARP/Ping.</li> <li>1. To obtain a free IP address, you need to ensure that the Device and your PC are in the same LAN.</li> <li>2. Get MAC address from the device label.</li> <li>3. Open command editor on your PC and enter the following command.</li> </ul>
Enable ARP/Ping to set IP address service.	Windows syntax+ <sup>3</sup> arp -s <ip address=""> <mac> +<sup>3</sup>         ping -l 480 -t <ip address=""> +<sup>3</sup>         Windows example+<sup>3</sup>         arp -s 192.168.0.125 11-40-8c-18-10-11+<sup>3</sup>         ping -l 480 -t 192.168.0.125+<sup>3</sup></ip></mac></ip>
	UNIX/Linux/Mac syntax+?         arp -s <ip address=""> <mac> +?         ping -s 480 <ip address=""> +?         UNIX/Linux/Mac example+?         arp -s 192.168.0.125 11-40-8c-18-10-11+?         ping -s 480 192.168.0.125+?</ip></mac></ip>
	<ol> <li>Reboot through power or network.</li> <li>Check your PC command line. If there is information such as "Reply from 192.168.0.125", you have done configuration successfully. Turn it off then.</li> <li>Enter http://(IP address) in the browser address bar to log in.</li> </ol>

<u>Step 3</u> Click **Save** to finish configuration.

# 4.2.2 Configuring Port

# 4.2.2.1 Configuring Port Parameters

You can configure the maximum port number and each port value.

#### <u>Step 1</u> Select **Setting > Network > Port > Port**.

The **Port** interface is displayed. See Figure 4-25.

Figure 4-25 Port

Port		ONVIF				
				-		
Max Connecti	on	10		(1~20)		
TCP Port		37777		(1025~65	534)	
UDP Port		37778		(1025~65	534)	
HTTP Port		80				
RTSP Port		554				
HTTPS						
HTTPS Port		443				
		Default	Re	efresh	Save	

<u>Step 2</u> Configure parameters. See Table 4-14 for details.

 $\square$ 

- Configuration of **Max Connection** takes effect immediately and others after reboot.
- 0–1024, 37780, 37880, 1900, 3800, 5000, 5050, 9999, 37776, 39999 and 42323 are occupied for specific uses.
- It is not recommended to use the default value of other port during port configuration.

Table 4-14 Port parameter description
---------------------------------------

Parameters	Description
Мах	The maximum number of users (web client, platform client or mobile
Connection	phone client) that can connect to the device simultaneously, the value is
	10 by default.
TCP Port	Port of transmission control protocol. The value is 37777 by default.
UDP Port	User datagram protocol port, the value is 37778 by default.
	HTTP communication port. The default value is 80. If you have modified
HTTP Port	the default value, when logging in through a browser, you need to add the
	latest port number to the end of IP address.

Parameters	Description					
RTSP Port	<ul> <li>554 is the default port number. If you play live view through Apple's QuickTime or VLC, the following format is available. This function is also available for Blackberry.</li> <li>When the URL format requiring RTSP, you need to specify channel number and bit stream type in the URL, and also user name and password if needed.</li> <li>When playing live view with Blackberry smart phone, you need to turn off the audio, and then set the code mode to H.264B and resolution to CIF.</li> <li>URL format example: rtsp://username:password@ip:port/cam/realmonitor?channel=1&amp;subtype =0</li> <li>Username: admin, for example.</li> <li>password</li> <li>IP: your device IP.</li> <li>Port: leave it if the value is 554 by default.</li> <li>Channel 1: Channel number, starts from 1. For example, if you are using channel 2, then the channel=2.</li> <li>Subtype refers to Bit stream type; 0 means main stream (Subtype=0) and 1 means sub stream (Subtype=1).</li> <li>So, if you require the sub stream of channel 2 from a certain device, then the URL should be: rtsp://admin:admin@10.12.4.84:554/cam/realmonitor?channel=2&amp;subtype=1</li> </ul>					
Enable HTTPS	HTTPS: Control of communication service. After selecting the check box, you can log in the Device through https://ip:port. When there is a default port, you can log in through https://ip.					
HTTPS Port HTTPS communication port whose value can be selected from 1025– 65534 and 443 is the default value.						

<u>Step 3</u> Click **Save** to finish configuration.

## 4.2.2.2 Configuring ONVIF Verification When Logging

With ONVIF port standard, network video products (video recording device and other recording devices included) of different manufacturers can be connected to each other.

 $\square$ 

- ONVIF is enabled by default.
- When logging in through ONVIF, the default names of both "username" and "password" are admin and the default port value is 80.
- <u>Step 1</u> Select **Setting > Network > Port > ONVIF**.

The **ONVIF** interface is displayed. See Figure 4-26.

Figure 4-26 ONVIF

Port	ONVIF
Authentication	On Off
	Default Refresh Save

<u>Step 2</u> Select the **On** check box in **Authentication** bar <u>Step 3</u> Click **Save** to finish configuration.

# 4.2.3 Configuring PPPoE

Point-to-Point Protocol over Ethernet, it is one of the protocols that device uses to connect to the internet. Get the PPPoE user name and password from the Internet Service Provider, and then, set up network connection through PPPoE, the device will acquire a WAN dynamic IP address.

 $\square$ 

- Disable UPnP while using PPPoE to avoid possible influence.
- After making PPPoE connection, the device IP address can not be modified through web interface.

<u>Step 1</u> Select **Setting > Network > PPPoE**.

The **PPPoE** interface is displayed. See Figure 4-27.

Figure 4-27 PPPoE

PPPoE	
Enable	
Username	none
Password	
	Default Refresh Save

- Step 2 Select the Enable check box, and type user name and password.
- Step 3 Click Save to finish configuration.

The successful prompt displays, and then the real-time WAN IP address is displayed. You can visit device through this IP address.

# 4.2.4 Configuring DDNS

When device's IP address is frequently changed, you can enable DDNS to dynamically update the relation between domain name and IP address (both of which are in the DNS server). By this, you can log in the device through a domain name.

### Preparation

Before making any changes, check if your device supports the DNS server.

• If Quick DDNS is the DDNS' type, you do not need to register a new domain name.

• If Quick DDNS is not the DDNS' type, you need to log in the domain name of website registration provided by DDNS service provider.

Ш

Register and log in the DDNS website, and then you can view the information of all the connected devices in your account.

### Procedure

#### <u>Step 1</u> Select Setting > Network > DDNS.

The **DDNS** interface is displayed. See Figure 4-28.

Figure 4-28 DDNS setting interface

DDNS	
🗸 Туре	NO-IP DDNS • After enabling DDNS function, third-party server may collect your device info.
Address	dynupdate.no-ip.com
Domain Name	none
Username	none
Password	••••
Interval	10 Min.(1~500)
	Default Refresh Save

<u>Step 2</u> Select **Type** and configure as needed.

Table 4-15 DDNS parameters

Parameter	Description				
Туре	See the name and web site of DDNS service provides below:				
туре	<ul> <li>"members.dyndns.org" is the IP address of Dyndns DDNS.</li> </ul>				
Address	"dynupdate.no-ip.com" is the IP address of NO-IP DDNS.				
Address	• "members.3322.org" is the IP address of CN99 DDNS.				
Domain name	The domain name you registered on the DDNS website.				
User name	Enter the user name and password you got from DDNS service provide.				
Password	You need to register an account (with user name and password) on the				
Password	DDNS service provides' website.				
Lindoto pariod	The update cycle of the connection between your device and the server. 10				
Update period	minutes are set by default.				

<u>Step 3</u> Click **Save** to finish configuration.

Open your browser, and type the domain name into address bar. Press **Enter**. If a web interface is displayed, the configuration is finished successfully.

# 4.2.5 Configuring SMTP

Configure **SMTP (Email)**. When alarm, video detection, abnormal event and intelligent are triggered, SMTP alarms will be transmitted to the specific Emails you have configured. <u>Step 1</u> Select **Setting > Network > SMTP (Email)**.

The SMTP (Email) interface is displayed. See Figure 4-29.

SMTP(Email)	
SMTP Server	none
Port	25
Anonymity	
Username	anonymity
Password	••••
Sender	none
Authentication	TLS
Title	Message IV Attachment
Mail Receiver	+
Health Mail	Update Period 60 Sec.(1~3600)
	Test
	Default Refresh Save

Figure 4-29 SMTP (Email)

Step 2 Configure your SMTP server.

Step 3 For SMTP (Email)'s other parameters to be configured, see Table 4-16.

Table 4-16 SMTP (	Email)	parameter description
-------------------	--------	-----------------------

Parameters	Description				
Anonymity	Enable Anonymity, and senders' identities will not be displayed in Emails				
Anonymity	transmitted to others.				
Sender	Sender's email address				
Encryption type	Select Authentication type from None, SSL and TLS. TLS is set by default.				
Attachment	Select the check box to support attachment in the email.				
Title	You can enter no more than 63 characters in Chinese, English, and Arabic				
Title	numerals.				
Receiver Receiver's mail address. Supports 3 addresses at most.					
	Time intervals of sending alarm Emails. "0" means there is no interval. Set a				
	time interval (normally >0s) as you want and when alarm, video detection,				
Interval	or event is triggered, Emails will not be transmitted all the time but be				
Interval	transmitted in the time interval you have set. This function is aimed at				
	easing the pressure that is put on the Email server when there are quite a				
	lot of abnormal events.				
	The system sends test mail to check if the connection is successfully set up.				
Health Mail	Select Health Mail to configure Update Period. E-mail testing results will				
	be transmitted in time intervals you have set.				
Test	Test the email sending and receiving function. If the configuration is correct,				
Test	you would receive test email. Save email configuration before running rest.				

<u>Step 4</u> Click **Save** to finish configuration.

# 4.2.6 Configuring UPnP

Configure UPnP protocols to establish the reflection relation between intranet and external network. A user can access IP address of external network to visit devices in the intranet.

### Preparation

- Ensure UPnP network service has been installed to your PC.
- Log in the router, and configure WAN IP address to set up internet connection.
- Enable UPnP in the router.
- Connect your device to the LAN port of the router.
- Set IP address of your router as that of your device, or select DHCP to obtain IP address automatically.

### Procedure

#### <u>Step 1</u> Select **Setting > Network > UPnP**.

The **UPnP** interface is displayed. See Figure 4-30.

#### Figure 4-30 UPnP

rt Mapping List						
	Service Name	Protocol	Internal Port	External Port	Status	Modify
V	HTTP	WebService:TCP	80	8080	Mapping Failed	1
1	TCP	PrivService:TCP	37777	37777	Mapping Failed	1
V	UDP	PrivService:UDP	37778	37778	Mapping Failed	1
1	RTSP	RTSPService:TCP	554	554	Mapping Failed	1

#### Step 2 Select the Enable check box.

<u>Step 3</u> Select mode, and service name in the port mapping list.

UPnP can be classified as custom mode and default mode.

- Under custom mode, you can change external ports.
- Under default mode, you do not need to change ports and reflection relations.

<u>Step 4</u> Click **Save** to finish configuration.

Type "http:// (external network IP address): (external port number)" to access devices in Intranet whose ports correspond to your router.

# 4.2.7 Configuring SNMP

SNMP (Simple Network Management Protocol) is a basic network management framework. You need to install certain software to the Device to obtain the Device's information.

### Preparation

- Install SNMP monitoring and managing tools such as MIB Builder and MG-SOFT MIB Browser.
- You can contact technical support for the MIB file that matches the current version.

### Procedure

#### <u>Step 1</u> Select **Setting > Network > SNMP**.

The **SNMP** interface is displayed. See Figure 4-31 and Figure 4-32.

Figure 4-31 SNMP (1)

SNMP				
Version	✓ v1	🗖 v2		v3 (Recommen
SNMP Port	161	(	1~65535)	
Read Community		N	lust	
Write Community		N	lust	
Trap Address				
Trap Port	162			
Keep Alive				
	Default	Refre	sh	Save
	<b>-</b>		(0)	
01///17	Figure	e 4-32 SNMP	(2)	
SNMP				
Version	v1	V2	V3 (Recom	men
SNMP Port	161	(1~65535)	1	
Read Community				
Write Community				
Trap Address				
Trap Port	162			
Keep Alive				
Read-only Username	public			
Authentication Type	MD5	⊙ SHA		
Authentication Pas		The minim	ium pass phrase le	ength is 8 characters
Encryption Type	CBC-DES			
Encryption Password		The minim	ium pass phrase le	ength is 8 characters
Read&write Userna	private			
Authentication Type	MD5	⊙ SHA		
Authentication Pas		The minim	ium pass phrase le	ength is 8 characters
Encryption Type	CBC-DES			
Encryption Password		The minim	ium pass phrase le	ength is 8 characters
	Default	Refresh	Save	]

- <u>Step 2</u> Select the **Version** check box to enable SNMP.
- <u>Step 3</u> Configure SNMP parameters. See Table 4-17 for details.
  - In the **Trap Address** bar, enter the IP address of the PC that has MIB Builder and MG-SOFT MIB Browser installed, other parameters leave to the default.

Table 4-17 SNMP parameter description

Parameter Description	Parameter
-----------------------	-----------

Parameter	Description			
	Select a version and its information will be displayed in the <b>SNMP</b>			
SNMP Version	<ul> <li>interface.</li> <li>Select v1, and only v1's information is displayed.</li> <li>Select v2, and only v2's information is displayed.</li> <li>Select v3, and you can configure user name, password and authentication type. It requires corresponding user name, password and authentication type from the server to visit your device. V1 and v2 version are now unavailable.</li> <li>Refers to the listening port of the software agent in the device.</li> <li>A character string, acts as a clear text password which can manage</li> </ul>			
Community	network's process and agent process. It defines the relation concerning certification, access, and escrow between agent and administrator. Device and agent must be consistent.			
Read community, write community	Refers to the read and write community string that the software agent supports.			
Тгар	SNMP trap is a SNMP agent which transmits information such as importan event or change of state to the administrator.			
Trap address	A destination address to which agent program sends trap information.			
Trap Port	A destination port to which agent program sends trap information. 162 set by default and range from 1–65535.			
Read-only username	The name is "public" by default.			
Read/Write username You can enter number, letter, underline to form the name.				
Authentication type	You can select from MD5 and SHA, the default type is MD5.			
Authentication password	It should be no less than 8 digits.			
Encryption type	The default is CBC-DES.			
Encryption Password	It should be no less than 8 digits.			

#### <u>Step 4</u> Click **Save** to finish configuration.

- <u>Step 5</u> View device information.
  - 1) Run MIB Builder and MG-SOFT MIB Browser.
  - 2) Compile the two MIB files with MIB Builder.
  - 3) Load the generated modules with MG-SOFT MIB Browser.
  - 4) Enter the IP address of the device you need to manage in the MG-SOFT MIB Browser, and then select version to search.

5) Unfold all the tree lists displayed in the MG-SOFT MIB Browser, and then you can view the configuration information, video channel amount, audio channel amount and software version.

```
\square
```

Use PC with Windows OS and disable SNMP Trap service. The MG-SOFT MIB Browser will display prompt when alarm is triggered.

# 4.2.8 Configuring Bonjour

Bonjour is also called zero-configuration networking. With Bonjour built into devices such as your phone, this thermal camera can be searched and accessed. Bonjour is a protocol of industry standard which allows devices search and find each other. IP address or DNS server is not required during this process.

Enable Bonjour in this thermal camera, and this camera will be automatically detected by your client-side or web with Bonjour function. When this thermal camera is detected by Bonjour, server name you have set will be displayed.

Ш

Bonjour is enabled by default.

#### <u>Step 1</u> Select **Setting > Network > Bonjour**.

The **Bonjour** interface is displayed. See Figure 4-33.

Figure 4-33 Bonjour				
Bonjour				
Enable				
Server Name	4D0184AYAK0BFC8			
	Default Refresh Save			

<u>Step 2</u> Select the **Enable** check box, and then configure server name.

<u>Step 3</u> Click **Save** to finish configuration.

You can use Safari browser, and your client side or web with Bonjour function to access the thermal camera's web.

- Step 1 Click "Show All Bookmarks" in Safari.
- <u>Step 2</u> Enable Bonjour, and then, in your LAN, all the network cameras in which the "Bonjour" is enabled are displayed.
- <u>Step 3</u> Click to visit the corresponding Web interface.

## 4.2.9 Configuring Multicast

The Device has limit towards web visitors. If several people access this Device's web in the meantime, video images may not be represented. To solve the problem, you can set up the Device's multicast IP and adopt multicast protocol.

#### <u>Step 1</u> Select Setting > Network > Multicast.

The **Multicast** interface is displayed. See Figure 4-34.

#### Figure 4-34 Multicast

Main Stream		Sub Stream	
Enable		Enable	
Multicast Address	224 . 1 . 2 . 4 (224.0.0.0-239.255.255.255)	Multicast Address 224 . 1 . 2 . 4 (224.0.0.0~239.255.255.255)	
Port	40000 (1025~65500)	Port 40016 (1025~65500)	

<u>Step 2</u> Select **Enable** and then enter IP address and port number. For detailed description, see Table 4-18.

Parameter	Meaning		
<b>D</b>	The Multicast IP address of Main Stream/Sub Stream is 224.1.2.4 by		
Description	default, and the range is 224.0.0.0–239.255.255.255.		
	See the multicast port of corresponding stream: Main Stream: 40000;		
Port	Sub Stream1: 40016; Sub Stream2: 40032, all the range is 1025–65500.		

#### Table 4-18 Multicast

<u>Step 3</u> Click **Save**, and the login interface is displayed. The configuration finishes. In the Live interface, set **Protocol** to **Multicast**, and then you can view the video image with Multicast protocol.

# 4.2.10 Configuring Auto Registration

In the **Auto Register** interface, you can set up an IP address to which the camera will report its location.

#### <u>Step 1</u> Select Setting > Network > Auto Register.

The Auto Register interface is displayed. See Figure 4-35.

Figure 4-35 Auto registration

Auto Register			
_			
Enable			
IP Address	0.0.0		
Port	7000		
Sub-Device ID	none		
	Default	Refresh	Save

Step 2 Select the Enable check box.

Step 3 Set up auto registration parameters. See Table 4-19.

Table 4-19 Auto registration parameter description

Parameter	Description	
IP Address	IP address or domain name to which the camera transmits its location.	
Port	The port for auto registration.	
Sub-device ID	Your device ID given by the server.	

<u>Step 4</u> Click **Save** to finish configuration.

## 4.2.11 Configuring 802.1X

802.1X can control the Device's access to LAN. <u>Step 1</u> Select **Setting > Network > 802.1x**.

#### The 802.1x interface is displayed. See Figure 4-36.

Figure 4-36 802.1x

802.1x	
Enable	
Authentication	PEAP 💌
Username	none
Password	••••
	Default Refresh Save

<u>Step 2</u> Select the **Enable** check box.

Step 3 Set up 802.1x parameters. See Table 4-20.

Parameter	Description
Authentication	PEAP (protected EAP protocol).
Username	The user name that was authenticated on the server.
Password	Password of your username.

<u>Step 4</u> Click **Save** to finish configuration.

# 4.2.12 Configuring QoS

QoS can solve problems including network delay and congestion. It helps to assure bandwidth, reduce transmission delay, packet loss rate and delay jitter to improve service quality.

For DSCP (Differentiated Services Code Point), there are 64 priority degrees (0-63) of data packets. 0 represents the lowest and 63 the highest. Based on those differences, the 64 priority degrees will be classified as different groups. Each group occupies different bandwidth and will be abandoned accordingly. The entire configuration is to improve video quality.

#### <u>Step 1</u> Select Setting > Network > QoS.

The **QoS** interface is displayed. See Figure 4-37.

Figure	4-37	QoS
--------	------	-----

QoS			
Realtime Monitor	0	(0~63)	
Command	0	(0~63)	
	Default	Refresh	Save

Step 2 Set up QoS parameters. See Table 4-21 for details.

Parameters	Description
Real-time Monitor	Priority of the data packets that are used for network surveillance.
Command	Priority degree used for the Device's configuration and check which
Command	do not concern those surveillance data bags.

<u>Step 3</u> Click **Save** to finish configuration.

# 4.3 Peripheral


Manage the Camera's components.

# 4.3.1 Configuring IR Light

#### <u>Step 1</u> Select Setting > Peripheral > IR Light.

The IR Light interface is displayed. See Figure 4-38.

Figure 4-38 IR light

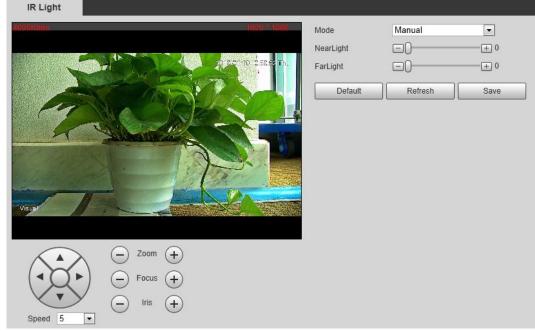

<u>Step 2</u> Configure IR light's running mode.

- **Zoom Prio**: When the camera zooms in or out the visible surveillance image, the IR light's brightness will be adjusted automatically.
- **Manual**: Adjust the IR light's brightness manually to realize the best image display effect under night vision condition.

<u>Step 3</u> Click **Save** to finish configuration.

## 4.3.2 Configuring Wiper

#### <u>Step 1</u> Select **Setting > Peripheral > Wiper**.

The **Wiper** interface is displayed. See Figure 4-39.

	Figure 4-39 Wiper
Wiper	
Mode	Timing
Interval Time	10 Sec. (0~255)
Period	00 : 00 : 00 ~ 23 : 59 : 59
	Default Refresh Save

<u>Step 2</u> Configure IR light's running mode.

- **Timing**: You can configure the **Interval Time** and **Period**.
  - 1. **Interval Time**: Interval from the point when the wiper starts to the point when the wiper stops.
  - 2. **Period**: Time when the wiper works.
  - 3. Click **Save** to finish configuration.
- Manual: Turn on and off the wiper manually.
  - 1. **Interval Time**: Interval from the point when the wiper starts to the point when the wiper stops.
  - 2. Click **Start** to get the wiper work in the interval time you have just set, and if you think the wiper has done enough work, click **Stop** to end it; Click **Once** to get the wiper work for one round.

# 4.3.3 Configuring Fan

#### <u>Step 1</u> Select **Setting > Peripheral > Fan**.

The **Fan** interface is displayed. See Figure 4-40.

Figure 4-40 Fan

Fan		
Mode	Manual 💌	
Enable		
	Default Refresh Save	

<u>Step 2</u> Configure fan's running mode:

- Auto: Fan works automatically. Click Save to finish configuration.
- **Manual**: Start your fan manually. Select the **Enable** check box and click **Save** to finish configuration.

## 4.3.4 Configuring Heater

#### <u>Step 1</u> Select **Setting > Peripheral > Heater**.

The **Heater** interface is displayed. See Figure 4-41.

Figure 4-41	Heater
-------------	--------

Heater		
Mode	Auto 💌	
Start Tem	-30 (-34~-26)	
Stop Tem	-20 (-24~-16)	
Sensor Temperature	Sensor1 : 32°C	
	Default Refresh Save	

<u>Step 2</u> Configure heater's running mode:

- Auto: Select Start Tem and Stop Tem as the temperature range for heater to start, and click Save. When the sensor temperature is in the range, heater works automatically.
- Manual: When you think it's cold enough and you want to let the camera work in a warm condition, you can select Manual as the Mode. Select the On check box, and click Save to finish configuration.

# 4.4 Smart Thermal

Configure the Device's common behavior analysis, fire alarm and hot trace.


- Functions of different devices might vary, and the final interface shall prevail.
- You cannot enable common behavior analysis and fire alarm in the meanwhile.

# 4.4.1 Configuring Smart Plan

You need to enable smart plan before intelligent rules function.

<u>Step 1</u> Select **Setting > Event > Smart Plan**.

The Smart Plan interface is displayed. See Figure 4-42.

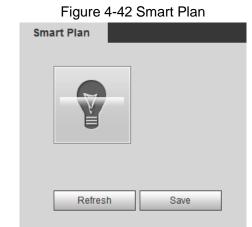

Step 2 Select a preset in Add Plan.

A solution corresponding to presets is displayed.

 $\square$ 

You need this step only when presets are supported in your Device.

- $\underline{Step \ 3}$  Click the icon in the Smart Plan interface.
  - $\square$ 
    - The icon you have selected will be lighted.
  - Click the icon again to cancel the smart plan.

<u>Step 4</u> Click **Save** to finish configuration.

# 4.4.2 Configuring IVS

### 4.4.2.1 Basic Scene-Selecting Requirements

• The target should occupy no more than 10% of the whole image.

- The pixel of the target should be no less than 10×10; the pixel of abandoned object should be no less than 15×15(CIF image); the width and height of the target should be no more than 1/3 that of the image; it is recommended that the height of the target should be set to 10% of the image height.
- The brightness difference of the target and the background should be no less than 10 gray levels.
- The target should be continuously present in the image for no less than 2 seconds, and the moving distance should be larger its width and no less than 15 pixels (CIF image) at the same time.
- Try to reduce the scene complexity as much as condition allowed; it is not recommended to use Intelligence Behavior Analysis in scenes with intensive targets, changing lighting conditions or small difference between target temperature and scene temperature.
- Try to avoid the following scenes: scenes with reflective surfaces such as glass, bright ground or water; scenes that disturbed by tree branches, shadows or winged insects; scenes that against light or under direct light exposure. Control image proportion of objects that are with high relative ambient temperature.

### 4.4.2.2 Configuring Intelligent Rules

After enabling smart plan, you can set IVS (intelligent rules) covering tripwire, intrusion, abandoned object and missing object.

 $\square$ 

Preset spots that have been endowed with smart plan represent green.

#### 4.4.2.2.1 Configuring Tripwire

When the target crosses the warning line toward the direction, an alarm is triggered.

### Preparation

You have set smart plan of presets or channels. See "4.4.1 Configuring Smart Plan" for detailed operations.

### Procedure

### <u>Step 1</u> Select Setting > Smart Thermal > IVS > IVS.

The **IVS** interface is displayed.

<u>Step 2</u> Select a preset spot.

The camera turns to the spot.

 $\square$ 

#### This step is required only when preset spot function is carried on this interface.

- Step 3 Set up tripwire rules.
  - Click and then double-click the rule you have just added to set up its name. Select **Tripwire** as the type. See Figure 4-43.

IVS	Global Setup			
5340Kbps		-1920 = 1080 Channel 1	•	
	R L	Preset Preset1		
		No. Name Rule Type		÷
		I Rule1 Tripwire	<b>•</b> 🛍	*
	a hall had			
	A PROVIDE A			
				-
		Parameter Setup		
Visual		Period Setting		
		Direction A<->B		
Draw Rule		Clear Record 1 2		
Target Filter	Max Size 8191 *	8191 Draw Target Record Delay 10 Sec. (10~300	)	
		0 Clear Relay-out 1 2		
		Alarm Delay 10 Sec. (10~300	)	
		Send Email		
		T PTZ		
		Snapshot 1 2		
		Default Refresh Save	]	

Figure 4-43 Tripwire

2) Click **Draw Rule** to draw a rule on surveillance image. Right-click to end drawing.

Click Clear to delete all the tripwires.

- Select Maximum Size or Minimum Size and click Draw Target. Then you can drag the filter box's corner to make the box larger or smaller.
  - •An alarm is triggered only when size of the target that is crossing tripwire lies between the two filter boxes.
  - When drawing a rule, you can select **Maximum Size** or **Minimum Size** and click **Clear** to delete a relevant filter box.
- 4) Set up tripwire parameters. See Table 4-22 for details.

Table 4-22 Tripwire	parameter	description
---------------------	-----------	-------------

Parameters	Description				
	Define a period during which the alarm settings are active.				
	1. Click <b>Setting</b> , and the period setting interface is displayed.				
	2. Configure period.				
	• Method 1: Hold down and drag the left mouse button to select a				
	period you need.				
Working	• Method 2: Select Setting > Event > Video Detection and click				
Period	Setting on the right side of Period. An interface is displayed. In				
	this interface, there are seven Settings altogether each of				
	which corresponds to a day in a week. Select a Setting you				
	want and there are six periods (period1-period6) below for you				
	to pick up.				
	1. Click <b>Save</b> to finish configuration of period.				

Parameters	Description				
Direction	Configure the target moving direction for tripwire alarm, you can select				
Direction	A->B, B->A and A<->B.				
	Enable this function and alarm recording will be triggered when there is				
	an alarm.				
	<ul> <li>To check and reset recorded videos' storage path, see "4.1.2.5 Configuring Storage Path".</li> </ul>				
Record	<ul> <li>Two more conditions must be satisfied before alarm recording</li> </ul>				
	function works:				
	♦ You have enabled motion detection recording. See "4.7.1.1				
	Configuring Video Recording" for detailed operations.				
	♦ You have enabled auto recording. See "4.7.3 Configuring				
	Record Control Parameters" for detailed operations.				
Record Delay	The record keeps running for the set time after alarm is ended.				
	You can connect this relay-out port to such alarm devices as flashlights				
Relay-out	and alarm whistles. When an alarm is triggered, alarm devices				
Ttolay out	connected to the relay-out port will work. Select the check box to enable				
	this function.				
Alarm Delay	The Alarm linkage keeps running for the set time after alarm is ended.				
	Enable this function. An e-mail will be delivered to the device user once				
	the alarm is triggered.				
Send email					
	Set your e-mail first before enabling this function. See "4.2.5 Configuring				
	SMTP" for detailed operations.				
	Select the check box of <b>PTZ</b> and select an item from <b>None</b> , <b>Preset</b> ,				
	Tour, and Pattern in the Activation bar. Once an alarm is triggered, your				
PTZ	PTZ will execute the item you have selected in the <b>Activation</b> bar.				
	للعلية Set up PTZ first before enabling this function. See "3.2 PTZ" for detailed				
	operations.				
	Enable this function and Snapshot will be triggered once there is an				
	alarm.				
Snapshot	<ul> <li>To check and set snapshots' storage path, see "4.1.2.5 Configuring</li> </ul>				
	Storage Path".				
	<ul> <li>Enable motion-detecting snapshots first before enabling this</li> </ul>				
	function. See "4.7.1.2 Configuring Snapshot" for detailed operations.				
Step 1 Click	<b>OK</b> to finish configuration.				

<u>Step 4</u> Click **OK** to finish configuration.

### 4.4.2.2.2 Configuring Intrusion

When a target is crossing or appears in the area you have set up, an alarm is triggered.

# Preparation

You have set up preset spots or tunnels' smart plan. See "4.4.1 Configuring Smart Plan" for detailed operations.

### Procedure

- <u>Step 1</u> Select Setting > Smart Thermal > IVS > IVS. The IVS interface is displayed.
- <u>Step 2</u> Select a preset in **Preset** bar.

The camera turns to the position.

Ш

This step is required only when preset dot function is carried on this interface.

- <u>Step 3</u> Set up area invasion rules.
  - Click I and then double-click the rule you have just added to set up its name. Select Area Invasion as the type. See Figure 4-44.

IVS	Global Setup										
40476bbs		1	1820 - 1080	c	hanne	d	1		Ŧ		
intel 🗧		2019 91 87	711.42.20 Mar	Pre	eset P	reset1	•				
		1-0			No.	Name		Rule Type			÷
19	N.C.A	E Here	1		1	Rule1		Tripwire	-	曲	~
	Charles and the				2	Rule2		Intrusion	•	曲	
	Anna war										
		1-	9 E								*
		Te I		Pa	ramete	r Setup					
Visual					Period		Setting				
					Duratio	n	1	Sec	(1~600)		
		ĵ	01		Rule T		Cross/Insi		<ul> <li>(1 000)</li> <li>▼</li> </ul>		
Draw Rule		l	Clear		Directi		Enter&Exi	25.12	_		
Target Filter	Max Size 8191 *	8191	Draw Target		Max T	arget N	15				
	○ Min Size 0 *	0	Clear		Min Ta	arget Nu	1				
					Report	t Interval	5	S (0~600)			
					Record	d	1 2				
					Record	d Delay	10	Sec. (10~	300)		
					Relay-	out	12				
					Alarm	Delay	10	Sec. (10~	300)		
					Send I	Email					
					PTZ						
					Snaps	hot	1 2				
					Defaul	t	Refresh	Save			

- 2) Click **Draw Rule** to draw a monitoring area on surveillance image. Right-click to end drawing.
  - $\square$
  - It requires certain residence time and moving space for the target to be confirmed, so leave some space around warning area during configuration and do not set it near obstacles.
  - In Rule Type bar, when you select Cross/Inside, you need to modify your rule box to leave some detecting area around the box.

Figure 4-44 Intrusion

- Click Clear to delete monitoring area you have set up.
- Select Maximum Size or Minimum Size and click Draw Target. Then you can drag the filter box's corner to make the box larger or smaller.
  - An alarm is triggered only when size of target that is crossing your monitoring area lies between the two filter boxes.
  - When drawing a rule, you can select **Maximum Size** or **Minimum Size** and click **Clear** to delete a relevant filter box.
- 4) Set up intrusion parameters. See Table 4-23 for details.

#### Table 4-23 Intrusion parameters

Parameters	Description			
	Define a period during which the alarm settings are active.			
	1. Click <b>Setting</b> , and the period setting interface is displayed.			
	2. Configure period.			
	• Method 1: Hold down and drag the left mouse button to select a			
	period you need.			
Period	• Method 2: Select Setting > Event > Video Detection and click			
Fellou	Setting on the right side of Period. An interface is displayed. In			
	this interface, there are seven Settings altogether each of			
	which corresponds to a day in a week. Select a Setting you			
	want and there are six periods (period1-period6) below for you			
	to pick up.			
	3. Click <b>Save</b> to finish configuration of period.			
Duration	The shortest time from placing an object in the detection area to an alarm			
	is triggered.			
	Set area intrusion rules.			
	Cross: An alarm is triggered when an object is entering or leaving     the area			
Rule Type	the area.			
	<ul> <li>Inside: An alarm is triggered when an object appears in the area.</li> <li>Cross/Inside: An alarm is triggered when an object is optering</li> </ul>			
	<ul> <li>Cross/Inside: An alarm is triggered when an object is entering, leaving or appears in the area.</li> </ul>			
	Set this parameter when you select <b>Cross</b> or <b>Cross/Inside</b> as your <b>Rule</b>			
Direction	Type.			
Direction	You can select from Enters, Exits and Enters & Exits.			
	Set this parameter when you select <b>Inside</b> or <b>Cross/Inside</b> as your <b>Rule</b>			
	Type.			
Max Target Number	Set a maximum target number and when targets' number in your area is			
	larger than the number you have set, an alarm is frozen and does Not			
	function.			
	Set this parameter when you select Inside or Cross/Inside as your Rule			
Min Target	Туре.			
Number	Set a minimum target number and when targets' number in your area is			
NUMDEL	smaller than the number you have set, an alarm is frozen and does Not			
	function.			

Parameters	Description			
Poport	Set this parameter when you select Inside or Cross/Inside as your Rule			
Report Interval	Туре.			
Interval	Set the shortest time between a target appears and an alarm is triggered.			
	Enable this function and alarm recording will be triggered when there is			
	an alarm.			
	• To view and set storage path of recorded videos, see "4.1.2.5			
	Configuring Storage Path".			
Record	• The following two conditions must be satisfied before alarm			
	recording function works:			
	♦ You have enabled motion detection recording. See "4.7.1.1			
	Configuring Video Recording" for detailed operations.			
	♦ You have enabled auto recording. See "4.7.3 Configuring			
	Record Control Parameters" for detailed operations.			
Record Delay	Set a length of time for the Device to delay turning off recording after an			
Record Delay	alarm is ended.			
	You can connect this relay-out port to such alarm devices as light and			
Relay-out	siren. When an alarm is triggered, those alarm devices will work. Select			
	the check box to enable this function.			
Alarm Delay	The Alarm linkage keeps running for the set time after alarm is ended.			
	Select the Send Email check box and an e-mail will be delivered to the			
	device user once an alarm is triggered.			
Send Email				
	Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5			
	Configuring SMTP" for detailed operations.			
	Select the check box of <b>PTZ</b> and select an item from <b>None</b> , <b>Preset</b> ,			
	Tour, and Pattern in the Activation bar. Once an alarm is triggered, your			
PTZ	PTZ will execute the item you have selected in the <b>Activation</b> bar.			
1 12				
	Set up PTZ first before enabling this function. See "3.2 PTZ" for detailed			
	operations.			
	Select the <b>Snapshot</b> check box to take a snapshot when there is an			
	alarm.			
Chanabat	• To view and set storage path of snapshots, see "4.1.2.5 Configuring			
Snapshot	Storage Path."			
	• To make the snapshot function take effect, you need to firstly enable			
	motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for			
	detailed operations.			
Ctor 4 Oliale	<b>OK</b> to finish configuration.			

<u>Step 4</u> Click **OK** to finish configuration.

#### 4.4.2.2.3 Configuring Abandoned Object

When the object is placed in the detection area longer than the defined period, the system activates alarms and links the configured actions.

### Preparation

You have enabled detection to general behaviors. For detailed operations, see "4.4.1 Configuring Smart Plan."

### Procedure

#### <u>Step 1</u> Select Setting > Smart Thermal > IVS > IVS. The IVS interface is displayed.

Step 2Select a preset in **Preset** bar.The camera turns to the position.

#### This step is required only when preset is supported by the Device.

#### Step 3 Configure rules.

 Click and then double-click the rule you have just added to set up its name. In the Rule Type list, select Abandoned Object. See Figure 4-45.
 Figure 4-45 Abandoned object

IVS	Global Setup	J. I				,					
400416555			1820 * 1080	C	hanne	I	1		•		
-			57-14.42.42.Hz	Pre	eset P	reset1	•				
		21/10			No.	Name		Rule Type			÷
	New?		CAUSE D.	V	1	Rule1		Tripwire		曲	~
	K K			V	2	Rule2		Intrusion	-	曲	
<u> </u>	Allasta				3	Rule3		Abandoned (	⊃b▼	莭	
TAN		1	aly-								+
Draw Rule			Clear		Period Duratio Record		Setting 30 1 2 10	Sec. (10~3	(6~3600	))	
Target Filter	Max Size 819     Min Size 0	1 * 8191	Draw Target Clear		Relay- Alarm I Send E	out Delay	1 2 10	Sec. (10~3			
					PTZ Snapsi		12				
					Default		Refresh	Save			

- Click Draw Rule to draw a monitoring area on surveillance image. Right-click to end drawing.

  - Pedestrians or cars might stay in your area and trigger an alarm. To filter this kind of alarm, you can set your targets' maximum size and ensure the size is smaller than people and vehicle.
  - Click **Clear** to delete monitoring area you have set.
- 3) Select **Max Size** or **Min Size**, then click **Draw Target**, and then drag the filter box's corner to adjust the box's size to your requirement.

### 

- An alarm is triggered only when size of abandoned objects lies between the two filter boxes.
- When drawing a rule, you can select **Max Size** or **Min Size** and click **Clear** to delete a relevant filter box.
- 4) Configure abandoned object parameters. See Table 4-24 for details.

Table 4-24 Abandoned	obiect	parameters
	00,000	paramotoro

Parameter	Description
Tarameter	Define a period during which the alarm settings are active.
	1. Click <b>Setting</b> , and the period setting interface is displayed.
	2. Configure period.
	<ul> <li>Method 1: Hold down and drag the left mouse button to select working period you need.</li> </ul>
D. I.I.	• Method 2: Select Setting > Event > Video Detection and click
Period	Setting on the right side of Period. An interface is displayed. In
	this interface, there are seven <b>Setting</b> s altogether each of
	which corresponds to a day in a week. Select a Setting you
	want and there are six periods (period1-period6) below for you
	to pick up.
	3. Click <b>Save</b> to finish configuration of working period.
Duration	The shortest time from placing an object in the detection area to an alarm
	is triggered.
	Enable this function and alarm recording will be triggered when there is
	an alarm.
	• To view and set storage path of recorded videos, see "4.1.2.5
	Configuring Storage Path".
Record	• The following two conditions must be satisfied before alarm
	recording function works:
	You have enabled motion detection recording. See "4.7.1.1
	Configuring Video Recording" for detailed operations.
	You have enabled auto recording. See "4.7.3 Configuring"
	Record Control Parameters" for detailed operations.
Record Delay	Set a length of time for the Device to delay turning off recording after an
	alarm is ended.
	You can connect this relay-out port to such alarm devices as light and
Relay-out	siren. When an alarm is triggered, those alarm devices will work. Select
	the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an
	event is actually ended.
	Select the <b>Send Email</b> check box and an e-mail will be delivered to the
Sand Email	device user once an alarm is triggered.
Send Email	
	Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5
	Configuring SMTP" for detailed operations.

Parameter	Description
	Select the check box of <b>PTZ</b> and select an item from <b>None</b> , <b>Preset</b> ,
	Tour, and Pattern in the Activation bar. Once an alarm is triggered, your
<b></b>	PTZ will execute the item you have selected in the <b>Activation</b> bar.
PTZ	
	Set up PTZ first before enabling this function. See "3.2 PTZ" for detailed
	operations.
	Select the <b>Snapshot</b> check box to take a snapshot when there is an
	alarm.
Spanshot	• To view and set storage path of snapshots, see "4.1.2.5 Configuring
Shapshot	Storage Path".
	• To make the snapshot function take effect, you need to firstly enable
	motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for
	detailed operations.
Snapshot	<ul> <li>Storage Path".</li> <li>To make the snapshot function take effect, you need to firstly enable motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for the snapshot of the</li></ul>

<u>Step 4</u> Click **Save** to finish configuration.

#### 4.4.2.2.4 Configuring Missing Object

When an object is taken away from the detection area and the absent time of the object is longer than the defined one, an alarm will be triggered and linked activities will be executed.

### Preparation

You have set smart plans of presets or channels. See "4.4.1 Configuring Smart Plan" for detailed operations.

### Procedure

- <u>Step 1</u> Select Setting > Smart Thermal > IVS > IVS. The IVS interface is displayed.
- Step 2 Select a preset in **Preset** bar.

The camera turns to the position.

#### $\square$

#### This step is required only when preset is supported by the Device.

- Step 3 Set up rules about those missing objects
  - Click and then double-click the rule you have just added to set its name. In the Rule Type list, select Missing Object. See Figure 4-46.

IVS	Global Setup								
400884005		1920 - 1980	С	hannel	I	1	•		
Relat		Renerations	Pre	set Pr	reset1	•			
	- Andrew Al			No.	Name		Rule Type		÷
	A CAL			1	Rule1		Tripwire 💌	曲	*
	The Aller			2	Rule2		Intrusion 💌	曲	
1 7	ANDIOTES		<b>V</b>	3	Rule3		Abandoned Ob 💌	È	
				4	Rule4		Missing Object 💌	â	*
viewa Rule		Clear		Period Duratio	n	Setting 30	Sec. (6~360)	))	
				Record	i I Delay	1 2	Sec. (10~300)		
Target Filter	Max Size 8191 * 8191	Draw Target		Relay-0		1 2	000. (10-300)		
	O Min Size	Clear		Alarm I		10	Sec. (10~300)		
				Send E					
				PTZ					
				Snapsh	not	12			
				Default		Refresh	Save		

#### Figure 4-46 Missing object

- 2) Click **Draw Rule** to draw a monitoring area on surveillance image. Right-click to end drawing.

Click Clear to delete monitoring area you have set.

- Select Max Size or Min Size, then click Draw Target, and then drag the filter box's corner to adjust the box's size to your requirement.
  - An alarm is triggered only when size of the missing object lies between the two filter boxes.
  - When drawing a rule, you can select **Max Size** or **Min Size** and click **Clear** to delete a relevant filter box.
- 4) Configure missing object parameters. See Table 4-25 for details.

Table 4-25 Missing	object parameters
--------------------	-------------------

Parameter	Description			
	Define a period during which the alarm settings are active.			
	1. Click <b>Setting</b> , and the period setting interface is displayed.			
	2. Configure period.			
	• Method 1: Hold down and drag the left mouse button to select			
	working period you need.			
Period	• Method 2: Select Setting > Event > Video Detection and click			
	Setting on the right side of Period. An interface is displayed. In			
	this interface, there are seven Settings altogether each of			
	which corresponds to a day in a week. Select a Setting you			
	want and there are six periods (period1-period6) below for you			
	to pick.			
	3. Click <b>Save</b> to finish configuration of working period.			

Parameter	Description
Duration	The shortest time from placing an object in the detection area to an alarm
	is triggered.
	Enable this function and alarm recording will be triggered when there is
	an alarm.
	• To view and set storage path of recorded videos, see "4.1.2.5 Configuring Storage Path".
Record	<ul> <li>The following two conditions must be satisfied before alarm</li> </ul>
	recording function works:
	You have enabled motion detection recording. See "4.7.1.1
	Configuring Video Recording" for detailed operations.
	♦ You have enabled auto recording. See "4.7.3 Configuring"
	Record Control Parameters" for detailed operations.
	Set a length of time for the Device to delay turning off recording after an
Record Delay	alarm is ended.
	You can connect this relay-out port to such alarm devices as light and
Relay-out	siren. When an alarm is triggered, those alarm devices will work. Select
	the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an
Alaliii Delay	event is actually ended.
	Select the Send Email check box and an e-mail will be delivered to the
	device user once an alarm is triggered.
Send Email	
	Set your e-mail first before enabling the Send Email function. See "4.2.5
	Configuring SMTP" for detailed operations.
	Select the check box of <b>PTZ</b> and select an item from <b>None</b> , <b>Preset</b> ,
	Tour, and Pattern in the Activation bar. Once an alarm is triggered, your
PTZ	PTZ will execute the item you have selected in the <b>Activation</b> bar.
PIZ	
	Set PTZ first before enabling this function. See "3.2 PTZ" for detailed
	operations.
	Select the <b>Snapshot</b> check box to take a snapshot when there is an
	alarm.
Spanchat	• To view and set storage path of snapshots, see "4.1.2.5 Configuring
Snapshot	Storage Path".
	• To make the snapshot function take effect, you need to firstly enable
	motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for
	detailed operations.
Stop 1 Click	<b>OK</b> to finish configuration.

<u>Step 4</u> Click **OK** to finish configuration.

# 4.4.2.3 Configuring Global Setup

Preparation

You have set smart plans of presets or channels. See "4.4.1 Configuring Smart Plan" for detailed operations.

### Procedure

# Step 1Select Setting > Smart Thermal > IVS > Global Setup.The Global Setup interface is displayed. See Figure 4-47.

Figure 4-47 Global setup

IVS	Global Setup					
3996Kbns		1920 - 1090 C	Channel	1	•	
D •	2012	Contraction Provide Contraction	arameter	•		
		Anti	-Disturb Enable	● On ◯ Off		*
R			dow Scene Enable sitivity	○ On	<del>(+)</del> 5	
			dvanced Parameter	r		*
n Visual			Default Re	efresh Save		
	Exclude. Delete Exclud					
Please add the exclusion invalid!	n region in detection region,otherwise th	ne exclusion region is				

Step 2 Select a preset in Preset bar.

The camera turns to the position.

 $\square$ 

You need this step only when presets are supported in this Device.

- <u>Step 3</u> Add detected area and excluded area.
  - Click Add Detect Region to draw a detected area on surveillance image. Right-click to end drawing.

Ш

Click Add Detect again to redraw.

2) Click **Add Excluded Area** to draw an excluded area on surveillance image. Right-click to end drawing.

 $\square$ 

- Click Delete Excluded Area to delete the excluded area.
- An excluded area takes effect only when it has been drawn in the detected area.
- Multiple excluded areas can be drawn in the detected area.

<u>Step 4</u> Configure global setup parameters. See Table 4-26 for details.

Parameter	Description
Anti-Disturb Enable	Select the <b>On</b> check box to enable this function. This function is aimed at eliminating disturbance caused by shaking
	leaves or waving water.

Table 4-26 Global setup parameters

Parameter	Description
	Select the <b>On</b> check box to enable this function.
	This function is aimed at eliminating an object's shadow and
Shadow Screen	representing only the object itself in the object box; several objects
Enable	with their shadows partly overlaid can be told separately. So this
Enable	function can give user a precise clue of where the object really
	locates. However, if an object's part looks like the object's shadow,
	it's likely that this part will be identified as a shadow and eliminated.
Consitivity	The larger this value is, the easier an alarm will be to be triggered by
Sensitivity	low-contrast or tiny objects.
	Select the On check box and set Upper Limit Threshold and
Isotherm Filter	Lower Limit Threshold on your own needs.
ISOUTETTT FILLET	This function is aimed at diminishing false alarms caused by waving
	water.
Tracking Overlap	When overlap rate of an object at this moment and at earlier time is
Tracking Overlap Rate	smaller than the rate you have set, this object can be detected and
Rale	an alarm is triggered.
	Only when an object's moving distance is larger than valid tracking
Valid Tracking Distance	distance you have set, this object can be detected and an alarm is
Distance	triggered.
Valid Tracking	Only when an object's moving time is larger than valid tracking time
Time	you have set, this object can be detected and an alarm is triggered.

<u>Step 5</u> Click **Save** to finish configuration.


# 4.4.3 Configuring Fire Warning

The system will give out an alarm once a fire is detected.

<u>Step 1</u> Select Setting > Smart Thermal > Fire Warning.

The Fire Warning interface is displayed. See Figure 4-48.

Figure 4-48 Fire warning

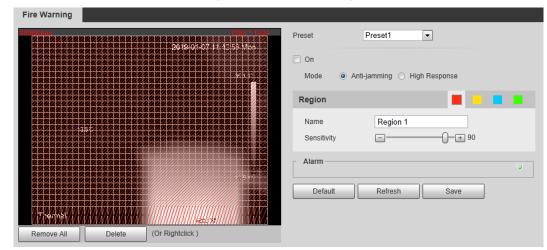

Step 2 Select a preset.

The camera turns to the position.

This step is required only when preset is supported by your Device.

Step 3 Select the **On** check box.

- <u>Step 4</u> Set rules of fire warning.
  - 1) Select fire warning mode on your own needs.

 $\square$ 

High response mode is your only option when you want your camera to detect any a hidden fire danger.

- Anti-jamming: Your camera will only detect those objects that are newly with high temperature and send off alarms. That means under Anti-jamming mode, a constantly high-temperature object (a boiler, for example) is excluded.
- **High Response**: Your camera will detect any a hidden fire danger and send off alarms.
- 2) Select a color in **E** . Each color represents a certain area which

you can draw with your left mouse button. You can also give a name to the area you have drawn and set its sensitivity.

-		
	r I	n –
_	_	

The larger the sensitivity is, the easier a fire will be triggered.

3) Set up fire warning parameters. See Table 4-27 for details.

#### Table 4-27 Fire warning parameters

Parameter	Description	
Period	<ul> <li>Define a period during which the alarm settings are active.</li> <li>1. Click Setting, and the period setting interface is displayed.</li> <li>2. Configure period. <ul> <li>Method 1: Hold down and drag the left mouse button to select working period you need.</li> </ul> </li> <li>Method 2: Select Setting &gt; Event &gt; Video Detection and click Setting on the right side of Period. An interface is displayed. In this interface, there are seven Settings altogether each of which corresponds to a day in a week. Select a Setting you want and there are six periods (period1-period6) below for you to pick up.</li> </ul> <li>3. Click Save to finish configuration of working period.</li>	
Duration	The shortest time from placing an object in the detection area to an alarm is triggered.	
Record	<ul> <li>is triggered.</li> <li>Enable this function and alarm recording will be triggered when there is an alarm.</li> <li> Image: To view and set storage path of recorded videos, see "4.1.2.5 Configuring Storage Path". </li> <li>The following two conditions must be satisfied before alarm recording function works: <ul> <li>You have enabled motion detection recording. See "4.7.1.1 Configuring Video Recording" for detailed operations.</li> <li>You have enabled auto recording. See "4.7.3 Configuring Record Control Parameters" for detailed operations.</li> </ul> </li> </ul>	

Parameter	Description			
Record Dolov	Set a length of time for the Device to delay turning off recording after an			
Record Delay	alarm is ended.			
	You can connect this relay-out port to such alarm devices as light and			
Relay-out	siren. When an alarm is triggered, those alarm devices will work. Select			
	the check box to enable this function.			
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an			
Alanni Delay	event is actually ended.			
	Select the Send Email check box and an e-mail will be delivered to the			
	device user once an alarm is triggered.			
Send Email				
	Set your e-mail first before enabling the Send Email function. See "4.2.5			
	Configuring SMTP" for detailed operations.			
	Select the check box of PTZ and select an item from None, Preset,			
	Tour, and Pattern in the Activation bar. Once an alarm is triggered, your			
<b>DTT</b>	PTZ will execute the item you have selected in the Activation bar.			
PTZ				
	Set up PTZ first before enabling this function. See "3.2 PTZ" for detailed			
	operations.			
	Select the <b>Snapshot</b> check box to take a snapshot when there is an			
Snapshot	alarm.			
	• To view and set storage path of snapshots, see "4.1.2.5 Configuring			
	Storage Path."			
	• To make the snapshot function take effect, you need to firstly enable			
	motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for			
	detailed operations.			
Shapshot	• To make the snapshot function take effect, you need to firstly enable motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for			

<u>Step 5</u> Click **Save** to finish configuration.

# 4.4.4 Configuring Hot Trace

You can enable **Hot Trace** to track spot with the highest temperature and spot with the lowest temperature.

<u>Step 1</u> Select Setting > Smart Thermal > Hot Trace.

The Hot Trace interface is displayed. See Figure 4-49.

### Figure 4-49 Hot trace

49Khns	1280 * 1024	☑ On			
	2019-01-07 11:43:35 Mon	Color Mode	<ul><li>Auto</li></ul>	Manual	
	34.7 C	High CTMaker Color	<u>A</u>	•	
	5170	Low CTMaker Color	<u>A</u>	•	
		Alarm Condition	Single O	Combination	
10.1 °C		Hot Spot temperatu	. 0	°C	
10.1 C		Cold Spot temperat	. 0	°C	
		Alarm			
	19.1 (2	Default	Refresh	Save	

Step 2 Select the **On** check box.

<u>Step 3</u> Configure parameters of cold/hot spot tracking. See Table 4-28 for details.

Parameters	Description				
	Select a color for cold and hot spots.				
Color Mode	Auto: Select colors for the highest/lowest temperature automatically				
	according to surveillance images.				
	Manual: Define colors for the highest/lowest temperature.				
	Conditions under which an alarm is triggered.				
	Single				
	<ul> <li>Select the Hot Spot temperature more than check box and</li> </ul>				
	when the highest temperature is larger than the temperature				
	you have set, an alarm is triggered.				
	<ul> <li>Select the Cold Spot temperature less than check box and</li> </ul>				
Alarm	when the lowest temperature is smaller than the temperature				
Condition	you have set, an alarm is triggered.				
	$\diamond$ If you select both conditions above at one time, an alarm is				
	triggered once any one condition is satisfied.				
	Combination				
	Only when the highest temperature is larger and the lowest				
	temperature is smaller than the temperature you have set, an alarm				
	is triggered.				
	Define a period during which the alarm settings are active.				
	1. Click <b>Setting</b> , and the period setting interface is displayed.				
	2. Configure period.				
	• Method 1: Hold down and drag the left mouse button to select				
	working period you need.				
Period	• Method 2: Select Setting > Event > Video Detection and click				
Felloa	Setting on the right side of Period. An interface is displayed. In				
	this interface, there are seven Settings altogether each of				
	which corresponds to a day in a week. Select a Setting you				
	want and there are six periods (period1-period6) below for you				
	to pick up.				
	3. Click <b>Save</b> to finish configuration of working period.				

#### Table 4-28 Parameters of hot trace

Parameters	Description
Anti-Dither	Only one motion detection event is recorded within the time you have
Anti-Ditter	set.
	Enable this function and alarm recording will be triggered when there is
	an alarm.
	• To view and set storage path of recorded videos, see "4.1.2.5
	Configuring Storage Path".
Record	• The following two conditions must be satisfied before alarm
	recording function works:
	♦ You have enabled motion detection recording. See "4.7.1.1
	Configuring Video Recording" for detailed operations.
	♦ You have enabled auto recording. See "4.7.3 Configuring
	Record Control Parameters" for detailed operations.
Record Delay	Set a length of time for the Device to delay turning off recording after an
Record Delay	alarm is ended.
	You can connect this relay-out port to such alarm devices as light and
Relay-out	siren. When an alarm is triggered, those alarm devices will work. Select
	the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an
Alarm Delay	event is actually ended.
	Select the Send Email check box and an e-mail will be delivered to the
	device user once an alarm is triggered.
Send Email	
	Set your e-mail first before enabling the Send Email function. See "4.2.5
	Configuring SMTP" for detailed operations.
	Select the check box of <b>PTZ</b> and select an item from <b>None</b> , <b>Preset</b> ,
	Tour, and Pattern in the Activation bar. Once an alarm is triggered, your
PTZ	PTZ will execute the item you have selected in the <b>Activation</b> bar.
FIZ	
	Set PTZ first before enabling this function. See "3.2 PTZ" for detailed
	operations.
	Select the Snapshot check box to take a snapshot when there is an
	alarm.
Spanshat	• To view and set storage path of snapshots, see "4.1.2.5 Configuring
Snapshot	Storage Path".
	• To make the snapshot function take effect, you need to firstly enable
	motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for
	detailed operations.
Step 4 Click	Save to finish configuration.

<u>Step 4</u> Click **Save** to finish configuration.

Effect of hot trace is as shown in Figure 4-50.

 $\square$ 

The thermal camera can be classified as temperature-measuring model and observation model according to whether it carries temperature-measuring function. Cold/Hot spot's temperature is not displayed on the Device of observing model.

Figure 4-50 Effect of hot trace




# 4.4.5 Configuring Pic in Pic

Put the thermal image that has shrunk on the visible image.

<u>Step 1</u> Select Setting > Smart Thermal > Pic in Pic.

The **Pic in Pic** interface is displayed. See Figure 4-51.

Figure 4-51 Pic in pic

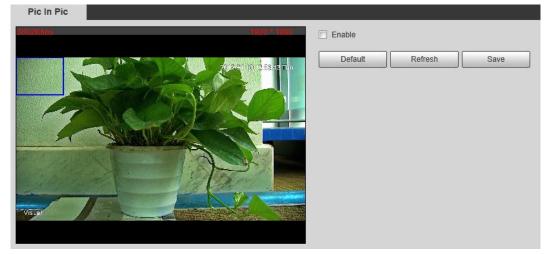

<u>Step 2</u> Select the **Enable** check box.


- <u>Step 3</u> Drag the blue box's angle to enlarge the box. Click in the box and drag your mouse to adjust the box's location.
- <u>Step 4</u> Click **Save** to finish configuration.

## 4.4.6 Configuring Link Schedule

### <u>Step 1</u> Select Setting > Smart Thermal > Link Schedule.

The Link Schedule interface is displayed. See Figure 4-52.

Figure 4-52 Link schedule

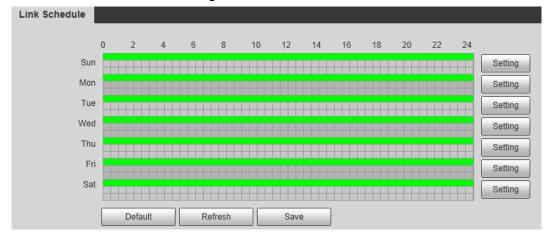

#### Step 2 Configure periods for each weekday.

In Figure 4-52, you can hold your mouse's left button to directly drag a period bar for each weekday.

1) In Figure 4-52, click **Setting** next to the green bar and the dialogue box of **Setting** is displayed. See Figure 4-53.

					0		0		
Setti	ng								×
	🗖 All	🗸 Sun	Mon	Tue	Wed	🔲 Thu	📃 Fri	Sat	
	Period1	00 :	00 : 00	- 23 :	59 : 59	]			
	Period2	00 :	00 : 00	- 23 :	59 : 59	]			
	Period3	00 :	00 : 00	- 23 :	59 : 59	]			
	Period4	00 :	00 : 00	- 23 :	59 : 59	]			
	Period5	00 :	00 : 00	- 23 :	59 : 59	]			
	Period6	00 :	00 : 00	- 23 :	59 : 59	]			
					Save	Ca	incel		

Figure 4-53 Setting

2) Select a weekday and a period. Then you can define the period.

When you select the check box of **All**, you're doing period settings towards all weekdays.

3) Click **Save**. You return to the **Link Schedule** interface.

<u>Step 3</u> Click **Save** to finish configuration.

# 4.5 Event

## **4.5.1 Configuring Video Detection**

### **4.5.1.1 Configuring Motion Detection**


When an object appears and moves fast enough to reach the sensitivity value you have set, the object will be detected and an alarm will be triggered.

<u>Step 1</u> Select Setting > Event > Video Detection > Motion Detection.

The Motion Detection interface is displayed. See Figure 4-54.

	Figure 4-54 Motion detection setting	
Motion Detection	Video Tamper	
Channel	1	
Enable		
Period	Setting	
Anti-Dither	0 Sec. (0~100)	
Area	Setting	
Record	1 2	
Record Delay	10 Sec. (10~300)	
Relay-out	1 2	
Alarm Delay	10 Sec. (10~300)	
Send Email		
PTZ		
Snapshot	1 2	
	Default Refresh Save	

- <u>Step 2</u> Select the **Enable** check box.
- <u>Step 3</u> Configure a motion detection area.
  - 1) Next to Area, click Setting.



### Figure 4-55 Area configuration

118.00/8		1820 * 108	Region	
			Name Regi	on1
			Sensitivity 🖃 —	+ 7
			Threshold 🖃 🕧	÷ 5
	7			
Viaual				
Destant All	Dalata /Or Bish	tellist: \		
Remove All	Delete (Or Right	ICHICK )		

2) Set area name and select motion detection areas as needed. You can configure the sensitivity and mutation threshold. The threshold defines the allowed moving area for certain objects. The motion detection will not be triggered as long as those objects stay within the area.

 $\square$ 

- The higher the sensitivity value is, the easier the motion detection will be triggered; the lower the mutation threshold is, the smaller the allowed moving area for certain objects is, hence the easier the motion detection will be triggered.
- Different colors represent different area. For each area, you can set different sensitivity and mutation threshold.
- In the wave diagram, red line represents motion detection is triggered, and green line represents not.
- 3) Click **Save** to finish configuration.

<u>Step 4</u> Configure motion detection parameters. See Table 4-29 for details.

Parameter	Description	
Period	<ul> <li>Define a period during which the alarm settings are active.</li> <li>1. Click Setting, and the period setting interface is displayed.</li> <li>2. Configure period. <ul> <li>Method 1: Hold down and drag the left mouse button to select working period you need.</li> <li>Method 2: Select Setting &gt; Event &gt; Video Detection and click Setting on the right side of Period. An interface is displayed. In this interface, there are seven Settings altogether each of which corresponds to a day in a week. Select a Setting you want and there are six periods (period1-period6) below for you to pick up.</li> </ul> </li> <li>3. Click Save to finish configuration of working period.</li> </ul>	
Anti-Dither	The system records only one motion detection event within the set time.	
Record	<ul> <li>Enable this function and alarm recording will be triggered when there is an alarm.</li> <li>To view and set storage path of recorded videos, see "4.1.2.5 Configuring Storage Path".</li> <li>The following two conditions must be satisfied before alarm recording function works:</li> <li>You have enabled motion detection recording. See "4.7.1.1 Configuring Video Recording" for detailed operations.</li> <li>You have enabled auto recording. See "4.7.3 Configuring Record Control Parameters" for detailed operations.</li> </ul>	
Record Delay	Set a length of time for the Device to delay turning off recording after an alarm is ended.	
Relay-out	You can connect this relay-out port to such alarm devices as light and siren. When an alarm is triggered, those alarm devices will work. Select the check box to enable this function.	

Table 4-29 Motion detection para	meters
----------------------------------	--------

Parameter	Description			
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an			
	event is actually ended.			
	Select the Send Email check box and an e-mail will be delivered to the			
	device user once an alarm is triggered.			
Send Email				
	Set your e-mail first before enabling the Send Email function. See "4.2.5			
	Configuring SMTP" for detailed operations.			
	Select the check box of PTZ and select an item from None, Preset,			
	Tour, and Pattern in the Activation bar. Once an alarm is triggered, your			
	PTZ will execute the item you have selected in the <b>Activation</b> bar.			
PTZ				
	Set PTZ first before enabling this function. See "3.2 PTZ" for detailed			
	operations.			
	Select the <b>Snapshot</b> check box to take a snapshot when there is an			
	alarm.			
Snapshot				
	• To view and set storage path of snapshots, see "4.1.2.5 Configuring			
	Storage Path."			
	• To make the snapshot function take effect, you need to firstly enable			
	motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for			
	detailed operations.			

<u>Step 5</u> Click **Save** to finish configuration.

## 4.5.1.2 Configuring Video Temper

When your camera lenses are masked, an alarm will be triggered.

<u>Step 1</u> Select Setting > Event > Video Detection > Video Temper.

The Video Temper interface is displayed. See Figure 4-54.

Motion Detection	Video Tamper		
Enable			
Period	Setting		
Record	1 2		
Record Delay	10	Sec. (10~300)	
Relay-out	1 2		
Alarm Delay	10	Sec. (10~300)	
Send Email			
PTZ			
Snapshot	1 2		
	Default	Refresh	Save

Figure 4-56 Video temper

<u>Step 2</u> Select the **Enable** check box.

<u>Step 3</u> Configure video temper parameters. See Table 4-29 for details.

Table 4-30 Parameters description

Parameter	Description		
	Define a period during which the alarm settings are active.		
	1. Click <b>Setting</b> , and the period setting interface is displayed.		
	2. Configure period.		
	• Method 1: Hold down and drag the left mouse button to select		
	working period you need.		
Period	<ul> <li>Method 2: Select Setting &gt; Event &gt; Video Detection and click</li> </ul>		
	Setting on the right side of Period. An interface is displayed. In		
	this interface, there are seven Settings altogether each of		
	which corresponds to a day in a week. Select a Setting you		
	want and there are six periods (period1-period6) below for you		
	to pick up.		
	3. Click <b>Save</b> to finish configuration of working period.		

Parameter	Description
	Enable this function and alarm recording will be triggered when there is an alarm.
Record	<ul> <li>To view and set storage path of recorded videos, see "4.1.2.5 Configuring Storage Path".</li> <li>The following two conditions must be satisfied before alarm recording function works:</li> <li>You have enabled motion detection recording. See "4.7.1.1 Configuring Video Recording" for detailed operations.</li> <li>You have enabled auto recording. See "4.7.3 Configuring Record Control Parameters" for detailed operations.</li> </ul>
Record Delay	Set a length of time for the Device to delay turning off recording after an alarm is ended.
Relay-out	You can connect this relay-out port to such alarm devices as light and siren. When an alarm is triggered, those alarm devices will work. Select the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an event is actually ended.
Send Email	Select the <b>Send Email</b> check box and an e-mail will be delivered to the device user once an alarm is triggered.
	Configuring SMTP" for detailed operations.
PTZ	Select the check box of <b>PTZ</b> and select an item from <b>None</b> , <b>Preset</b> , <b>Tour</b> , and <b>Pattern</b> in the <b>Activation</b> bar. Once an alarm is triggered, your PTZ will execute the item you have selected in the <b>Activation</b> bar. Set PTZ first before enabling this function. See "3.2 PTZ" for detailed
	operations.
	Select the <b>Snapshot</b> check box to take a snapshot when there is an alarm.
Snapshot	<ul> <li>To view and set storage path of snapshots, see "4.1.2.5 Configuring Storage Path."</li> <li>To make the snapshot function take effect, you need to firstly enable motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for detailed operations.</li> </ul>

<u>Step 4</u> Click **Save** to finish configuration.


# 4.5.2 Configuring Audio Detection

### <u>Step 1</u> Select Setting > Event > Audio detection.

The Audio Detection interface is displayed. See Figure 4-57.

Audio	Detection		
	Input Abnormal		
	Intensity Change		
	Sensitivity	(	+ 50
	Threshold	(	+ 50
	Period	Setting	
	Anti-Dither	5	Sec. (0~100)
<b>V</b>	Record	1 2	
		10	0
	Record Delay	10	Sec. (10~300)
<b>V</b>	Relay-out	1 2	
	Alarm Delay	10	Sec. (10~300)
	Send Email		
	PTZ		
	Snapshot	1 2	
	Default	Refresh	Save

Figure 4-57 Audio detection settings



Parameters	Description
Input	Enable this function and an alarm will be triggered when there is
Abnormal	abnormal audio input.
Intensity	Enable this function and an alarm will be triggered when the change of
Change	sound intensity exceeds the threshold you have set.
	Volume change of input audio can be identified as audio abnormality only
Sensitivity	when volume change of input audio is larger than the lasting environment
Sensitivity	volume. You need to set the lasting environment volume on your own
	needs.
	Set the ambient sound intensity you need to filter. The louder the ambient
Threshold	noise is, the bigger this value should be, you can Adjust and test this
	option as needed.

Parameters	Description
	Define a period during which the alarm settings are active.
	1. Click <b>Setting</b> , and the period setting interface is displayed.
	2. Configure period.
	• Method 1: Hold down and drag the left mouse button to select
	working period you need.
Period	• Method 2: Select Setting > Event > Video Detection and click
	Setting on the right side of Period. An interface is displayed. In
	this interface, there are seven <b>Setting</b> s altogether each of which
	corresponds to a day in a week. Select a <b>Setting</b> you want and
	there are six periods (period1-period6) below for you to pick up.
	3. Click <b>Save</b> to finish configuration of working period.
Anti-Dither	The system records only one audio detection event within the set time.
	Enable this function and alarm recording will be triggered when there is
	an alarm.
	• To view and set storage path of recorded videos, see "4.1.2.5
	Configuring Storage Path".
Record	• The following two conditions must be satisfied before alarm
	recording function works:
	♦ You have enabled motion detection recording. See "4.7.1.1
	Configuring Video Recording" for detailed operations.
	You have enabled auto recording. See "4.7.3 Configuring
	Record Control Parameters" for detailed operations.
Record Delay	Set a length of time for the Device to delay turning off recording after an
	alarm is ended.
Dolov out	You can connect this relay-out port to such alarm devices as light and
Relay-out	siren. When an alarm is triggered, those alarm devices will work. Select the check box to enable this function.
	Set a length of time for the Device to delay turning off alarm after an
Alarm Delay	event is actually ended.
	Select the <b>Send Email</b> check box and an e-mail will be delivered to the
	device user once an alarm is triggered.
Send Email	
	Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5 Configuring SMTP" for detailed operations.
	Select the check box of <b>PTZ</b> and select an item from <b>None</b> , <b>Preset</b> , <b>Tour</b> ,
PTZ	and <b>Pattern</b> in the <b>Activation</b> bar. Once an alarm is triggered, your PTZ
	will execute the item you have selected in the <b>Activation</b> bar.
	Set PTZ first before enabling this function. See "3.2 PTZ" for detailed
	operations.

Parameters	Description		
	Select the Snapshot check box to take a snapshot when there is an		
	alarm.		
Snapshot	<ul> <li>To view and set storage path of snapshots, see "4.1.2.5 Configuring</li> </ul>		
Chaponot	Storage Path".		
	• To make the snapshot function take effect, you need to firstly enable		
	motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for		
	detailed operations.		

<u>Step 3</u> Click **OK** to finish configuration.

# 4.5.3 Configuring Temperature Alarm

You can set an alarm condition. When the temperature meets the defined alarm condition, an alarm is triggered and the linked activity is executed.

 $\square$ 

This function is available on select models, and the actual interface shall prevail.


### Preparation

You have set the temperature measuring rules. See "4.6.1 Configuring Rules" for detailed operation.

### Procedure

### <u>Step 1</u> Select Setting > Event > Temperature Alarm.

The **Temperature Alarm** interface is displayed. See Figure 4-58. Figure 4-58 Temperature alarm settings

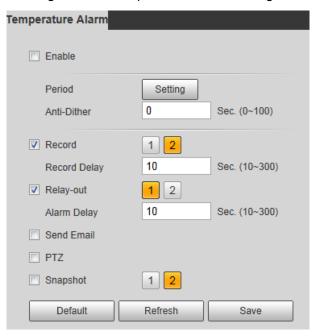

Step 2 Select the Enable check box.

Step 3 Configure parameters of temperature alarm. See Table 4-32 for details.

Parameter	Description
	Define a period during which the alarm settings are active.
	1. Click <b>Setting</b> , and the period setting interface is displayed.
	2. Configure period.
	• Method 1: Hold down and drag the left mouse button to select
	working period you need.
Period	• Method 2: Select Setting > Event > Video Detection and click
Fenou	Setting on the right side of Period. An interface is displayed. In
	this interface, there are seven <b>Setting</b> s altogether each of
	which corresponds to a day in a week. Select a Setting you
	want and there are six periods (period1-period6) below for you
	to pick up.
	3. Click <b>Save</b> to finish configuration of working period.
Anti-dither	Only one temperature alarm event is recorded within the time you have
	set.
	Enable this function and alarm recording will be triggered when there is
	an alarm.
Record	• To view and set storage path of recorded videos, see "4.1.2.5
	Configuring Storage Path".
	• The following two conditions must be satisfied before alarm
	recording function works:
	♦ You have enabled motion detection recording. See "4.7.1.1
	Configuring Video Recording" for detailed operations.
	You have enabled auto recording. See "4.7.3 Configuring"
	Record Control Parameters" for detailed operations.
Record Delay	Set a length of time for the Device to delay turning off recording after an
	alarm is ended.
	You can connect this relay-out port to such alarm devices as light and
Relay-out	siren. When an alarm is triggered, those alarm devices will work. Select
	the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an event is actually ended.
	Select the <b>Send Email</b> check box and an e-mail will be delivered to the
Send Email	device user once an alarm is triggered.
	Set your e-mail first before enabling the <b>Send Email</b> function. See "4.2.5
	Configuring SMTP" for detailed operations.
	Select the check box of <b>PTZ</b> and select an item from <b>None</b> , <b>Preset</b> , <b>Tour</b> , and <b>Pattern</b> in the <b>Activation</b> bar. Once an alarm is triggered, your
PTZ	PTZ will execute the item you have selected in the Activation bar.
	Set PTZ first before enabling this function. See "3.2 PTZ" for detailed
	operations.

Shapshot Storage Path".	Parameter	Description		
motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" fo detailed operations.		<ul> <li>Select the Snapshot check box to take a snapshot when there is an alarm.</li> <li>To view and set storage path of snapshots, see "4.1.2.5 Configuring Storage Path".</li> <li>To make the snapshot function take effect, you need to firstly enable motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for</li> </ul>		

<u>Step 4</u> Click **Save** to finish configuration.

# 4.5.4 Configuring Alarm

When there is an alarm from external devices, an alarm will be released and linked activities will be executed.

#### <u>Step 1</u> Select **Setting > Event > Alarm**.

The Alarm interface is displayed. See Figure 4-59.

Fig	gure 4-59 A	Alarm se	ttings		
Alarm					
Enable					
Relay-in	Alarm1	•			
Period	Setting				
Anti-Dither	0	Sec. (0~100)	Sensor Type	NO	
Record	1 2				
Record Delay	10	Sec. (10~300)			
Relay-out	1 2				
Alarm Delay	10	Sec. (10~300)			
Send Email					
PTZ					
Snapshot	1 2				
	Default	Refres	sh	Save	

<u>Step 2</u> Select the **Enable** check box.

Step 3 Configure Relay activation parameters. For detailed description, see Table 4-33.

Table 4-33 Alarm parameters

Parameters	Description		
Relay-in	Select an external alarm device.		
	Define a period during which the alarm settings are active.		
	1. Click <b>Setting</b> , and the period setting interface is displayed.		
	2. Configure period.		
	• Method 1: Hold down and drag the left mouse button to select		
	working period you need.		
Period	• Method 2: Select Setting > Event > Video Detection and click		
	Setting on the right side of Period. An interface is displayed. In		
	this interface, there are seven Settings altogether each of which		
	corresponds to a day in a week. Select a Setting you want and		
	there are six periods (period1-period6) below for you to pick up.		
	3. Click <b>Save</b> to finish configuration of working period.		

Parameters	Description
Anti-dither	Only one temperature alarm event is recorded within the time you have set.
Sensor type	You can select from normally open (NO) and normally closed (NC).
Record	<ul> <li>Enable this function and alarm recording will be triggered when there is an alarm.</li> <li>To view and set storage path of recorded videos, see "4.1.2.5 Configuring Storage Path."</li> <li>The following two conditions must be satisfied before alarm recording function works: <ul> <li>You have enabled motion detection recording. See "4.7.1.1 Configuring Video Recording" for detailed operations.</li> <li>You have enabled auto recording. See "4.7.3 Configuring Record Control Parameters" for detailed operations.</li> </ul> </li> </ul>
Record Delay	Set a length of time for the Device to delay turning off recording after an alarm is ended.
Relay-out	You can connect this relay-out port to such alarm devices as light and siren. When an alarm is triggered, those alarm devices will work. Select the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an event is actually ended.
Send Email	Select the <b>Send Email</b> check box and an e-mail will be delivered to the device user once an alarm is triggered.
	Configuring SMTP" for detailed operations.
PTZ	Select the <b>PTZ</b> check box and select an item from <b>None</b> , <b>Preset</b> , <b>Tour</b> , and <b>Pattern</b> in the <b>Activation</b> bar. Once an alarm is triggered, your PTZ will execute the item you have selected in the <b>Activation</b> bar.
Snapshot	<ul> <li>Select the Snapshot check box to take a snapshot when there is an alarm.</li> <li>To view and set storage path of snapshots, see "4.1.2.5 Configuring Storage Path".</li> <li>To make the snapshot function take effect, you need to firstly enable motion-detection snapshots. See "4.7.1.2 Configuring Snapshot" for detailed operations.</li> <li>Save to finish configuration.</li> </ul>

<u>Step 4</u> Click **Save** to finish configuration.

# 4.5.5 Configuring Abnormality

Abnormality covers events of SD card, network and illegal access and burning warning.

 $\square$ 

The "No SD Card", "SD Card Error" and "Capacity Warning" events are available only on models that support SD card.

## 4.5.5.1 Configuring SD Card Abnormality Parameters

When any abnormality happens to the SD card, an alarm will be triggered and linked activities will be executed. SD card abnormality includes "No SD card", "SD Card Error" and "Capacity Warning."

#### <u>Step 1</u> Select Setting > Event > Abnormality > SD Card.

The **SD Card** interface is displayed. See Figure 4-60.

Figure 4-60 SD card

SD Card	Network	Illegal Access	Burning Warning
Event Type	No SD Card	•	
Enable			
Relay-out	1 2		
Alarm Delay	10	Sec. (10~300)	
Send Email			
	Default	Refresh	Save

<u>Step 2</u> Select an event type.

Step 3 Select the Enable check box.

Step 4 Configure SD card abnormality parameters. For detailed description, see Table 4-34.

Parameters	Description
	This parameter can be configured only when the event type is
Minimum storage	"capacity warning."
space in SD card	Configure the free space percentage, and if the free space in the SD
	card is lower than the set percentage, the alarm is triggered.
	You can connect this relay-out port to alarm devices such as light
Relay-out	and siren. When an alarm is triggered, those alarm devices will work.
	Select the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an
Alaliii Delay	event is actually ended.
	Select the Send Email check box and an e-mail will be delivered to
	the device user once an alarm is triggered.
Send Email	
	Set your e-mail first before enabling the Send Email function. See
	"4.2.5 Configuring SMTP" for detailed operations.

Table 4-34 SD card parameter description

<u>Step 5</u> Click **Save** to finish configuration.

### 4.5.5.2 Configuring Network Abnormality Parameters

When any abnormality happens to network, an alarm will be triggered and linked activities will be executed. Network abnormality includes "Disconnection" and "IP conflict."

#### <u>Step 1</u> Select Setting > Event > Abnormality > Network.

The Network interface is displayed. See Figure 4-61.

Figure 4-61 Network

SD Card	Network	Illegal Access	Burning Warning
	D'		
Event Type	Disconnect	tion	
Enable			
Record	1 2		
Record Delay	10	Sec. (10~300)	
Relay-out	1 2		
Alarm Delay	10	Sec. (10~300)	
	Defau	lt Refresh	Save

- Step 2 Select an event type.
- Step 3 Select the Enable check box.
- <u>Step 4</u> Configure network abnormality parameters. See Table 4-35 for details.

Table 4-35 Network parameter	description
------------------------------	-------------

Parameter	Description
Record	<ul> <li>Enable this function and alarm recording will be triggered when there is an alarm.</li> <li>To view and set storage path of recorded videos, see "4.1.2.5 Configuring Storage Path".</li> <li>The following two conditions must be satisfied before alarm recording function works: <ul> <li>You have enabled motion detection recording. See "4.7.1.1 Configuring Video Recording" for detailed operations.</li> <li>You have enabled auto recording. See "4.7.3 Configuring Record Control Parameters" for detailed operations.</li> </ul> </li> </ul>
Record	Set a length of time for the Device to delay turning off recording after an
Delay	alarm is ended.
Relay-out	You can connect this relay-out port to such alarm devices as light and siren. When an alarm is triggered, those alarm devices will work. Select the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an event is actually ended.

<u>Step 5</u> Click **Save** to finish configuration.

### 4.5.5.3 Configuring Illegal Access Parameters

If the password is continuously wrongly typed and the mistakes have reached the maximum you have set, an alarm will be triggered and linked activities will be executed.

#### <u>Step 1</u> Select Setting > Event > Abnormality > Illegal Access.

The **Illegal Access** interface is displayed. See Figure 4-62.

	Figure 4-6	2 Illegal access	
SD Card	Network	Illegal Access	Burning Warning
Enable		_	
Login Error	5	time (3~10)	
Relay-out	1 2	_	
Alarm Delay	10	Sec. (10~300)	
Send Email			
	Default	Refresh	Save

Step 2 Select the Enable check box.

Step 3 Configure illegal access parameters. See Table 4-36 for details.

Parameters	Description
	The number of times that the login password is allowed to be
	wrongly entered for.
Login error	When the login password has been wrongly entered for more than
	the set times, the account is locked. You need to wait 30 minutes
	before your account is unlocked.
	You can connect this relay-out port to such alarm devices as light
Relay-out	and siren. When an alarm is triggered, those alarm devices will work.
	Select the check box to enable this function.
Alarm Delay	Set a length of time for the Device to delay turning off alarm after an
Alaini Delay	event is actually ended.
	Select the Send Email check box and an e-mail will be delivered to
	the device user once an alarm is triggered.
Send Email	
	Set your e-mail first before enabling the Send Email function. See
	"4.2.5 Configuring SMTP" for detailed operations.

<u>Step 4</u> Click **Save** to finish configuration.

## 4.5.5.4 Configuring Lenses Anti-Burning

Configure the lenses' anti-burning parameters and when the lenses are watching directly towards the sun and face the potential burning, the camera will automatically turn to other positions to avoid.

 $\square$ 

This function is supported on select models and the actual interface shall prevail.

<u>Step 1</u> Select Setting > Event > Abnormality > Burning Warning.

The **Burning Warning** interface is displayed. See Figure 4-63.

Figure 4-63 Burning warning

SD Card	Network	Illegal Access	Burning Warning
Enable			
Sensitivity	<b>—</b> ——	)	
Energy Thresh	old 📃	0-+ 90	
	Default	Refresh	Save

- Step 2 Select the Enable check box.
- Step 3 Configure Sensitivity and Energy Threshold:

**Sensitivity**: Sensitivity for the camera to recognize whether the lenses are watching towards the sun. The larger the value is, the easier the camera will be to recognize the sun.

**Energy Threshold**: The minimum energy value of the object watched by the lenses. Select the energy threshold to filter the low-temperature objects and improve the identification accuracy.

<u>Step 4</u> Click **Save** to finish configuration.

# 4.6 Temperature Measuring Settings

1		$\sim$	Þ.
L			11
Т			
k	5	-	5

Temperature measuring is available on select models and the actual interface shall prevail.

## 4.6.1 Configuring Rules


Configure temperature measuring rules and when alarm conditions are met, an alarm will be triggered.

### 4.6.1.1 Configuring Temperature Measuring Rules

<u>Step 1</u> Select **Setting > Temperature > Rule > Parameter**.

The **Parameter** interface is displayed. See Figure 4-64.

#### Figure 4-64 Parameter

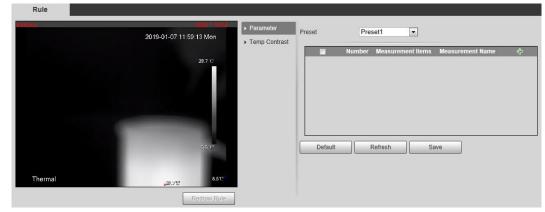

Step 2 Configure temperature measuring rules and then parameters.

1) Click 🔂 to add a rule. See Figure 4-65.

2019-01-07 12:01 07 Mon       > Temp Contrast         211:       > Temp Contrast         (c: 1)       (c: 1)         (c: 1)       (c: 1)

Figure 4-65 Rule adding

- 2) Double-click the rule you have just added to select measurement items and modify the measurement name.
- 3) Draw your rules.
  - Select **Measurement Items** as **Spot**, and you can click a position on the surveillance image and a spot is formed.
  - Select **Measurement Items** as **Line**, **Rectangle** or **Ellipse**, and you can hold the left mouse button to draw rules you need on the surveillance image.
  - Select Measurement Items as Polygon, and you can hold the left mouse button to draw rules you need on the surveillance image. Right-click to end your drawing.

 $\square$ 

Select a rule you have drawn and click **Redraw Rule**. Then you can delete the rule and draw a new one.

 Select the Open Local Config check box and configure parameters. See Table 4-37 for details.

Table 4-37 Parameter description of local configuration

Parameters	Description
Target Radiation	Radiation coefficient of targets that are shot by this Device.
Coefficient	Ranges from 0.5 – 1.
Target Distance	Distance from the camera to targets that are shot. Ranges from
	0m – 10000m.
Target Reflection	Temperature of targets that are shot by this Device. Ranges from
Temperature	-50 °C to 327.7 °C.

5) Enable the **Relay-out** check box and configure its parameters. See Table 4-38 for details.

Parameter	Description
	Temperature's display items.
	• Select Measurement Items as Spot, and average temperature
	and temperature slope will be displayed.
	• Select Measurement Items as Line, Rectangle, Ellipse or
	Polygon, and maximum/minimum/average temperature,
Alarm Results	temperature slope and temperature difference are displayed.
	By temperature difference, we mean the difference between
	maximum and minimum temperatures under rules you have set. By
	temperature slope, we mean temperature's varying rate under rules
	you have set.
Alarm Condition	Set alarm conditions, covering Below, Match and Above.
Alarm Threshold	You can set this value when you select Alarm Results as Max, Min,
Temperature	Aver, or Temperature Difference.
Temperature	Ranges from -40 °C to 550 °C.
Temperature	You can set this value when you select Alarm Results as Slope.
Slope	By temperature slope, we mean the temperature difference in each
Siope	minute. Ranges from -600 °C/min – 600 °C/min.
Temperature	Set a temperature error value and if the alarm threshold temperature
Error	or temperature slope is within the value you have set, linked alarms
	will still be triggered. Ranges from -10 °C to 10 °C.
Duration of	You can set a lasting time of abnormal temperature after which alarms
Temperature	will be triggered. Ranges from 0 – 1000s.

Table 4-38	Parameter	description	of relay-out
	i arameter	ucounption	or relay out

<u>Step 3</u> Click **Save** to finish configuration.

You can watch temperature change under the rules you have set on surveillance images.

## 4.6.1.2 Configuring Temperature Contrast

You can compare temperature of spots, lines or area you have selected and display comparison results on surveillance images.


### Preparation

You have set at least two temperature testing rules. See "4.6.1.1Configuring Temperature Measuring Rules" for detailed operations.

### Procedure

<u>Step 1</u> Select Setting > Temperature > Rule > Temp Contrast. The Temp Contrast interface is displayed. See Figure 4-66.


Figure 4-66 Temperature contrast

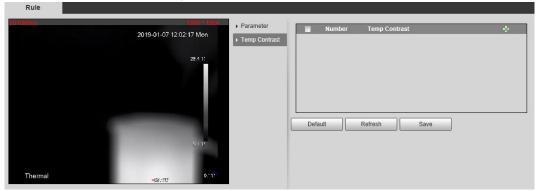

Step 2 Set temperature contrast rules

 Click To add a temperature contrast rule. See Figure 4-67.

Figure 4-67 Temperature contrast rules adding

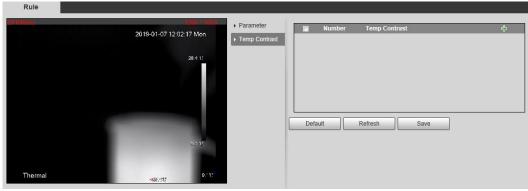

- 2) Double-click to add a temperature contrast rule.
- 3) Set alarm parameters. See Table 4-39.

#### Table 4-39 Parameters

Parameters	Description
Alarm Results	<ul> <li>You can select from the following three options to determine a standard of triggering an alarm.</li> <li>Average temperature: Compare average temperatures of two rules.</li> <li>Maximum temperature: Compare maximum temperatures of two rules.</li> <li>Minimum temperature: Compare minimum temperatures of two rules.</li> <li>Minimum temperature: Compare minimum temperatures of two rules.</li> <li>When one of the two rules refers to a spot, both maximum temperature and minimum temperature are actually average temperature.</li> </ul>

Parameters	Description
Alarm Condition	Contains "lower", "matched" and "higher."
Alarm Threshold	Tomporature of triggering on alorm Ranges from 0 550 °C
Temperature	Temperature of triggering an alarm. Ranges from 0 – 550 °C.

<u>Step 3</u> Click **Save** to finish configuration.

On the left-side live image, you can view temperature contrast results of the object you have selected.

# 4.6.2 Configuring Global Setup

You can enable Temperature Switch, Isotherm and Color Code.

- Temperature Switch: A switch with which you can enable or disable temperature testing rules. Enable the **Temperature Switch** and the temperature testing rules you have set will be displayed on surveillance images.
- Isotherm: Used to highlight an object in images of high brightness. Isotherm is based on median temperature, with highest temperature and lowest temperature as its range. The part of an object whose temperature is higher than floor temperature will be represented in a bright color and the part of an object whose temperature is lower than floor temperature will be represented in a black/white color.
- Color Code: Enable this function, and a color code is displayed on the right side of surveillance images to show change of color between minimum temperature and maximum temperature.

The Global Setup interface is displayed. See Figure 4-68.

### <u>Step 1</u> Select Setting > Temperature > Global Setup.

ther	1280 * 1024 2019-01-07 12:03:11 Mon	Temperature Switch	
		Temperature Unit C	
	28.3 C	Relative Humidity = 0	
		Atmospheric Tempe + 25	
		Target Radiation Co 0-+ 0.97	
		Target Distance - + 4	
	And in case of the local division of the loc	Target Reflection T 0 + 25	
		Advanced	*
	20 U	Isotherm 🔘 On 💿 Off	~
		Min Limit Temperat  100	
	9.00°	Medium Temperature	
		Max Limit Temperat 0 + 140	
		Saturation Tempera	
		Color Code   On  Off	

Figure 4-68 Global setup

<u>Step 2</u> Configure the global setup parameters. See Table 4-40 for details.

Parameter	Description						
Temperature	Salast the sheek boy to enable this function						
Switch	Select the check box to enable this function.						
Temperature Unit	Includes °C and °F.						
Relative Humidity	Relative humidity of environment. Ranges from 0RH – 100 %RH.						

 Table 4-40 Parameter description of global setup

Description
Temperature of our environment. Ranges from -50 °C to 327.7 °C.
Set Radiation coefficient of targets that are shot by this Device.
Ranges from 0.5 – 1.
Distance from the camera to targets that are shot. Ranges from 0m – 10000m.
Temperature of targets that are shot by this Device. Ranges from
-50 °C to 327.7 °C.
Select the <b>On</b> check box.
You have to make sure that floor temperature <= median
temperature <= ceiling temperature <= saturation temperature.
• When gain mode is under low-temperature mode, value ranges
from -40 °C to 150 °C.
When gain mode is under high-temperature mode, value
ranges from -40 °C to 600 °C.
• When gain mode is under low-temperature mode, value ranges
from -40 °C to 160 °C.
• When gain mode is under low-temperature mode, value ranges
from -40 °C to 600 °C.
• When gain mode is under low-temperature mode, value ranges
from -40 °C to 160 °C.
• When gain mode is under low-temperature mode, value ranges
from -40 °C to 600 °C.
• When gain mode is under low-temperature mode, value ranges
from -40°C to 160℃.
• When gain mode is under low-temperature mode, value ranges
from -40 °C to 600 °C.
Select <b>On</b> to enable color code.
A color code will be represented on the right side of surveillance
images.

<u>Step 3</u> Click **Save** to finish configuration.

Effect images are as shown in Figure 4-69, Figure 4-70, and Figure 4-71.

Figure 4-69 Temperature switch



Figure 4-70 Isotherm

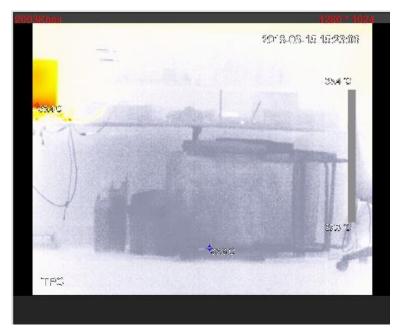


Figure 4-71 Color code



## 4.6.3 Exporting Heat Map

By exporting heat map, you can grasp temperature of every pixel on thermal images.

<u>Step 1</u> Select **Setting > Temperature > Heat Map**.

The Heat Map interface is displayed. See Figure 4-72.

Figure 4-72 Heat map setting



#### Step 2 Click Export Heat Map.

Heat map files will be saved under the path you have set. For detailed operation of resetting the storage path, see "4.1.2.5 Configuring Storage Path."

# 4.7 Storage Management

## 4.7.1 Configuring Schedule

You can set schedule of recording, snapshotting, holidays.

If the record mode is **Off** in **Storage > Record Control > Record Control** interface, the system would not record video or snapshot as scheduled.


### 4.7.1.1 Configuring Video Recording

Set video recording, covering General, Motion and Alarm.

#### <u>Step 1</u> Select Setting > Storage > Schedule > Record.

The **Record** interface is displayed. See Figure 4-73.

Figure 4-73 Record

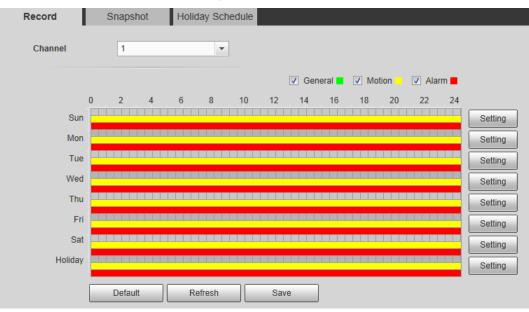

<u>Step 2</u> Select recording type and configure time period.

Ш

Select recording type, and then you can also press and hold the left mouse button to select the time period as needed in the chart.

1) Click the **Setting** for the day that you want to configure time period.

The Setting interface is displayed. See Figure 4-74.

): 00 - 2		Thu Fri General Motion	Sat Holiday	
): 00 - 2	3 : 59 : 59			
	3. 33. 33	🗌 General 📄 Motion	Alarm	
0 : 00 - 2	3 : 59 : 59	🗌 General 📄 Motion	Alarm	
): 00 - 2	3 : 59 : 59	General 🔲 Motion	Alarm	
): 00 - 2	3 : 59 : 59	General 🔲 Motion	Alarm	
): 00 - 2	3 : 59 : 59	General 🔲 Motion	Alarm	
)	: 00 - 2 : 00 - 2	: 00 - 23 : 59 : 59 [ : 00 - 23 : 59 : 59 [	: 00 - 23 : 59 : 59 General Motion : 00 - 23 : 59 : 59 General Motion	: 00 - 23 : 59 : 59 General Motion Alarm : 00 - 23 : 59 : 59 General Motion Alarm

- Select a day in a week and configure its period.
  - There are 6 periods for each day.
  - Select the All check box, and the entered time period will apply to the whole week. Sunday is selected by default, and you can select other days as needed.
- 3) Select the record type for the corresponding time period.
- 4) Click Save.

The system returns to the **Record** interface. Each color represents a video type. Green represents general video recording schedule, yellow represents video recording schedule under motion detection and red represents video recording schedule under alarm conditions.

Figure 4-74 Setting

## 4.7.1.2 Configuring Snapshot

Set video snapshot schedule, covering General, Motion and Alarm.

- <u>Step 1</u> Select Setting > Storage > Schedule > Snapshot.
  - The **Snapshot** interface is displayed. See Figure 4-75.

Figure 4-75 Snapshot



Step 2 Select snapshot type and configure time period.

 $\square$ 

Select snapshot type, and then you can also hold down the left mouse button to select the time period in the chart as needed.

- 1) Click the **Setting** for the day that you need to configure time period.
  - The **Setting** interface is displayed. See Figure 4-76.

Figure 4-76 Settings

🗖 All	Sun Mon Tue Wed Thu Fri Sat Holiday	
Period1	00 : 00 : 00 - 23 : 59 : 59 General 🗸 Motion 🖓 Alarm	
Period2	00 : 00 : 00 - 23 : 59 : 59 General Motion Alarm	
Period3	00 : 00 : 00 - 23 : 59 : 59 General Motion Alarm	
Period4	00 : 00 : 00 - 23 : 59 : 59 General Motion Alarm	
Period5	00 : 00 : 00 - 23 : 59 : 59 General Motion Alarm	
Period6	00 : 00 : 00 - 23 : 59 : 59 General Motion Alarm	

- Select a day in a week and configure its time period.
  - There are 6 time periods for each day.
  - Select **All**, and the entered time period would apply to the whole week. Sunday is selected by default, and you can select other days as needed.
- 3) Select the snapshot type for the corresponding time period.
- 4) Click Save.

The system returns to the **Snapshot** interface. Each color matches with a certain Snapshot type. Green means General Snapshot, yellow means motion detection Snapshot and red means alarm Snapshot schedule.

<u>Step 3</u> Click **Save** to finish configuration.

### 4.7.1.3 Configuring Holiday Schedule

Select a day as your "holiday" and video recording/snapshots will be enabled at your "holiday."

- To use holiday recording function, you need to configure holiday recording schedule. For detailed operation, see "4.7.1.1 Configuring Video Recording."
- To use holiday snapshot function, you need to configure holiday record/snapshot schedule. For detailed operation, see "4.7.1.2 Configuring Snapshot."

<u>Step 1</u> Select Setting > Storage > Schedule > Holiday Schedule.

The Holiday Schedule interface is displayed. See Figure 4-77.

Calenda	r				Jun	•
Sun	Mon	Tue	Wen	Thu	Fri	Sat
					1	2
3	4	5	6	7	8	9
10	11	12	13	14	15	16
17	18	19	20	21	22	23
24	25	26	27	28	29	30

Figure 4-77 Holiday schedule

- <u>Step 2</u> Select from record and snapshot.
- <u>Step 3</u> Select days you need to set as your "holiday."

Those days with yellow color indicates they were set as holidays.

<u>Step 4</u> Click **Save** to finish configuration.

## 4.7.2 Device Storage

### 4.7.2.1 Configuring Storage Path

You can set video recording and snapshot's storage methods according to event types. You can save them in SD card, FTP or NAS.

 $\square$ 

Local storage is available only on models that support SD card.

<u>Step 1</u> Select Setting > Storage > Destination > Path. The Path interface is displayed. See Figure 4-78.

Figure 4-78 Path

Path	Local FTP	NAS					
Record				Snapshot			
Event Type	Scheduled	Motion Detection	Alarm	Event Type	Scheduled	Motion Detection	Alarm
Local		V	<b>V</b>	Local	<b>V</b>	V	<b>V</b>
FTP				FTP			
NAS				NAS			

<u>Step 2</u> Select different storage paths for the recorded videos and snapshots which belong to different event types.

Parameter	Description
Event type	Select from Scheduled, Motion Detection and Alarm.
Local	Save in the internal SD card.
FTP	Save in the FTP server.
NAS	Save in the NAS (network attached storage).

#### Table 4-41 Path parameters

<u>Step 3</u> Click **Save** to finish configuration.

### 4.7.2.2 Configuring Local Storage

The system will display the internal SD card information. You can set it as **Read Only** or **Read & Write**; you can also **Hot Swap** or **Refresh** it.

Select **Setting > Storage > Destination > Local**, and the **Local** interface is displayed. See Figure 4-79.

- Select SD card you need to set and click **Read Only**. Then the SD card is set to read only.
- Select SD card you need to set and click Read & Write. Then the SD card is set to read& write.
- Select SD card you need to set and click **Hot Swap**. Then you can pull out the SD card.
- Select SD card you need to set and click **Refresh**. Then the SD card will be formatted. Figure 4-79 Local storage setting



### 4.7.2.3 Configuring FTP Server

You can set FTP server only when FTP is selected as the storage method in **Path**. When the network doesn't work, you can save all the files to the local SD card for emergency.

#### <u>Step 1</u> Select Setting > Storage > Destination > FTP.

The **FTP** interface is displayed. See Figure 4-80.

	<b>3</b> • • • •	3-	
Path	Local	FTP	NAS
Enable	SFTP(Recommended)	•	
Server Address	0.0.0.0		
Port	22	(0~65535)	
Username	anonymity		
Password			
Remote Directory	share		
Emergency (Local)			
	test		
	Default	Refresh	Save

Figure 4-80 FTP settings

- Step 2 Select the **Enable** check box, and then select the service type.
  - SFTP service is recommended.
- <u>Step 3</u> Configure FTP parameters. See Table 4-42.

Table 4-42 FTP	parameter description	

Parameters	Description
Server Address	The IP address of the SFTP or FTP server.
Port	The port of the SFTP or FTP server.
User name	The user name to log in the server.
Password	The password to log in the server.
Remote Directory	The destination path in the server.
Emergency (Local)	Select the Emergency (Local) check box, and when the FTP
	server does not work, all the files are saved to the internal SD card.

<u>Step 4</u> Click **Save** to finish configuration.

Click Test to check whether the server has been properly connected.

## 4.7.2.4 Configuring NAS Server

This function can be enabled only when NAS has been selected as destination path. Select **NAS** interface and you can save files in NAS server.

<u>Step 1</u> Select Setting > Storage > Destination > NAS.

The **NAS** interface is displayed. See Figure 4-81.

Figure 4-81 NAS settings

Path	Local	FTP		NAS
Enable				
Server Address	0.0.0.0			
Remote Directory				
	Default	Refresh	Save	]

Step 2 Select the Enable check box.

Step 3 Configure NAS parameters. See Table 4-43 for details.

Parameter	Description	
Server Address	The IP address of the NAS server.	
Remote Directory	The destination path in the NAS server.	

Table 4-43 NAS parameters

<u>Step 4</u> Click **Save** to finish configuration.

# **4.7.3 Configuring Record Control Parameters**

This chapter introduces configurations including pack duration, pre-event record, disk full, record mode and record stream.

#### <u>Step 1</u> Select Setting > Storage > Record Control.

The **Record Control** interface is displayed. See Figure 4-82.

Figure 4-82 Record control settings

Record Control	
Pack Duration	2 Min. (1~120)
Pre-event Record	5 Sec. (0~5)
Disk Full	Overwrite
Record Mode	● Auto ○ Manual ○ Off
Record Stream	Main Stream 💌
	Default Refresh Save

<u>Step 2</u> Configure record control parameters. See Table 4-44 for details.

Parameters	Description
Pack Duration	The duration of each file pack.
	The time period for which the system records video before alarm, if
	the value is 5, then the system records video for 5 seconds before
Due event	alarm starts and save it.
Pre-event	
Record	If the Record Mode is Off and the record activity has been linked with
	alarm or motion detection, the system will still save the pre-event
	video.
	The recording strategy when the disk is full.
Disk Full	• <b>Stop</b> : The system stops recording when the disk is full.
	• <b>Overwrite</b> : The system overwrites the oldest files and keep
	recording when the disk is full.
	At the record mode, if you select Manual, the system starts video
Record Mode	recording; if you select Auto, the system records video as time period
	scheduled; if you select Off, video recording will not start.
Record Stream	Includes main stream and sub stream.

<u>Step 3</u> Click **Save** to finish configuration.

# 4.8 System Management

# 4.8.1 General Settings

### 4.8.1.1 Configuring General Information

Configure device name, language and video standard.

#### <u>Step 1</u> Select Setting > System > General > General.

The General interface is displayed. See Figure 4-83.

Figure 4-83 General			
General	Date&Time	GPS	
Name	20_18_101	6_07	
Language	English	•	
Video Standard	PAL	•	
	Default	Refresh	Save

<u>Step 2</u> Configure general parameters. See Table 4-45.

Table 4-45 General parameter description

Parameter	Description
Device name	The name of the device.
	Each device has different name.
Language	Select system language.
Video Standard	Select video standard from PAL and NTSC.

<u>Step 3</u> Click **Save** to finish configuration.

### 4.8.1.2 Configuring Date & Time

You can set up Date and Time format, Time zone, Current Time, DST (Daylight Saving Time) or NTP server.

#### <u>Step 1</u> Select Setting > System > General > Date & Time.

The Date & Time interface is displayed. See Figure 4-84.

General	Date&Time GPS
Date Format	YYYY-MM-DD
Time Format	24-Hour
Time Zone	GMT+08:00
Current Time	2019-01-07 14 : 25 : 31 Sync PC
DST	
DST Type	Date      Week     Veek     Vee
Start Time	Jan 💌 1 💌 00 : 00 : 00
End Time	Jan 💌 2 💌 00 : 00 : 00
NTP	
Server	clock.isc.org
Port	123
Interval	10 Min. (0~30)
	Default Refresh Save

Figure 4-84 Date & Time

<u>Step 2</u> Configure Date & Time parameters. See Table 4-46 for details.

Parameter	Description
Date Format	Date format.
Time Format	Configure the Time format, you can select from 24-Hour or 12-Hour.
Time zone	Configure the Time zone that the device is at.
Current Time	Configure system time.
	Click "Sync PC", and the system time changes to the time on PC.
DST	Enable DST as needed.
	Select the check box to enable daylight saving time. Select "DST", and
	then configure start time and end time of DST with dates or days of the
	week.
NTP	When you need the Device to transmit its time to NTP server, you can
	select the NTP check box to enable it.
Server	IP address or domain name of the NTP server.
Port	Port number of the FTP server.
Interval	Time gap of device's transmission of its current time to NTP server.

Table 4-46 Date & Time parameters

<u>Step 3</u> Click **Save** to finish configuration.

### 4.8.1.3 Configuring GPS

Fill in the camera's GPS information in the web to remind you where your camera locates.

Also, automatically sent to the management platform, the GPS information can be viewed on the platform to help the platform operator track your camera.

 $\square$ 

This function is supported on select models and the actual interface shall prevail. <u>Step 1</u> Select **Setting > System > General > GPS**. The GPS interface is displayed. See Figure 4-85.

Figure 4-85 GPS

General	Date&Time	GPS	
LON	120.200000	E	•
LAT	30.266670	N	
Altitude	150.0		
	Default	Refresh	Save

<u>Step 2</u> Fill in your camera's LON, LAT and Altitude information.

Step 3 Click **Save** to finish configuration.

# 4.8.2 User Management

Managing users and groups are only available for administrator users.

- The max length of the user or group name is 15 characters which can only be consisted of letters, numbers and underlines.
- The password must have 8 to 32 digits and at the same time have at least two forms (There are four password forms altogether: capital letter, lowercase letter, number and special characters. "!", "!", ":", and "&" are not covered in special characters.) Administrator users can modify all the uses' password.
- You can have 19 users and 8 groups at most.
- You can manage users through single user or group, duplicate user names or group names are not allowed. A user can be in one group at a time and the group users can own authorities within group authority range.
- Online users cannot modify their own authority.
- There is one admin by default which has highest authority.
- Select "Anonymous login", and then log in with only IP address instead of user name and password. Anonymous users only have preview authorities. During Anonymous login, Click logout, and then you can log in with other username.

# 4.8.2.1 Adding a Group

You have two groups named admin and user by default, you can add new group, delete added group or modify group authority and memo.

<u>Step 1</u> Select Setting > System > Account > Account > Group Name.

The Group Name interface is displayed. See Figure 4-86.

Figure 4-86 User group

Account	VIF User								
Anonymous Login									
	Group Name								
No.	Group Name				Merno			Modify	Delete
1	admin			a	dministrator group			2	•
2	user				user group			2	•
Authority User	Live Playback	System	System Info	Manual Control	File Backup	Storage	Event	Network	
Peripheral	AV Parameter PTZ	Safety	Maintenance						
Add Group									

# Step 2 Click Add Group.

The Add Group interface is displayed. See Figure 4-87.

Figure 4-87 Add Group

Add Group		×
Group Name Memo Authority	Must	
	<ul> <li>Live</li> <li>Playback</li> <li>System</li> </ul>	* III
	Save Cancel	*

Step 3 Enter Group name and memo. Then select Group authorities.

<u>Step 4</u> Click **Save** to finish configuration.

The newly added group displays in the group name list. See Figure 4-88.

- After adding group, click is to modify group memo or authorities; click is to delete the added group, admin group and user group cannot be deleted.
- Click in the row of admin group or user group to modify group memo.

Figure 4-88 User group added.



# 4.8.2.2 Adding a User

You are admin user by default, and you can add user, delete added users or modify their password.

# <u>Step 1</u> Select Setting > System > Account > Account.

The Account interface is displayed. See Figure 4-89.

Figure 4-89 User settings

Account Of	WIF User									
Anonymous Login										
Username	Group Name									
No.										
1		admin	admin			admin 's a	ccount		2	•
Authority										
User	Live	Playback	System	System Info	Manual Control	File Backup	Storage	Event	Network	
Peripheral	AV Parameter	PTZ	Safety	Maintenance						
Add User										

#### Step 2 Click Add User.

The Add User interface is displayed. See Figure 4-90.

Add User		X
Username	Must	
Password		
	The minimum pass phrase length is 8	
	characters	
	Weak Middle Strong	
Confirm Password		
Group Name	admin	
Memo		
Authority	I All	
	User	
	V Live	
	Playback	
	System 👻	
	Save Cancel	

Step 3 Configure parameters. See Table 4-47.

Table 4-47 User p	parameter	description
-------------------	-----------	-------------

Parameter	Description			
Username	User's unique identification You cannot use existing user name.			
Password	Enter password and confirm it.			
Confirm Password	The two items must be the same.			
Group name	The group that users belong to. Each group has different authorities.			
Memo	Describes the user.			
Authority	Select authorities as needed.			
	premium users.			

<u>Step 4</u> Click **Save** to finish configuration.

Figure 4-90 Add user

The newly added users are displayed in the user list.

• After adding user, click 🗾 to modify password, group, memo or authorities;

click 😑 to delete the added user, admin user cannot be deleted.

Click in the admin row to modify user name and email address.

# 4.8.2.3 Modifying User Password

For data security, it's strongly recommended that you change the default password of the Device and modify it regularly. Also, it's recommended that you adopt a complicated and strong password.

<u>Step 1</u> Select Setting > System > Account > Account > Username.

The Username interface is displayed. See Figure 4-91.

 Account
 OM/F User

 Adoptimum Logi

 Manual

 <t

Figure 4-91 Username

Step 2 Click

The Modify User interface is displayed. See Figure 4-92.

Figure 4-92 Modify user (1)

Modify User		×
Username	admin	
Modify Password		
Cell Phone No.		
Group Name	<b>v</b>	
Memo	admin 's account	
Authority	II All	
	✓ User	Â.
	✓ Live	_
	Playback	
	✓ System	Ŧ
	Save Cancel	

<u>Step 3</u> Select the **Modify Password** check box. More settings are displayed. See Figure 4-93.

Modify User		X
Username	admin	
Modify Password		
Old Password		
New Password		
	The minimum pass phrase length is 8	
	characters	
	Weak Middle Strong	
Confirm Password		
Cell Phone No.		
Group Name		
Memo	admin 's account	
Authority	III III	
	User	
	✓ Live	
	Playback	
	📝 System 👻	
	Save Cancel	

Figure 4-93 Modify user (2)

<u>Step 4</u> Type old password. Type new password and confirm it.

The password must have 8 to 32 digits and at the same time have at least two of the four types: capital letter, lowercase letter, number and special characters. <u>Step 5</u> Click **Save** to finish password modification.


# 4.8.3 Adding ONVIF User

<u>Step 1</u> Select Setting > System > Account > ONVIF User.

The **ONVIF User** interface is displayed. See Figure 4-94.

Figure 4-94 ONVIF user

Account ONVIF User				
No.	Username	Group Name	Modify	Delete
1	admin	admin	2	0
Add User				



The Add User interface is displayed. See Figure 4-95.

Figure 4-95 Add user

Add User	×
Username	Must
Password	The minimum page phases length is 0
	The minimum pass phrase length is 8 characters
	Weak Middle Strong
Confirm Password	
Group Name	admin
	Save Cancel

<u>Step 3</u> Enter username, password and confirm the password. Then, select group name. <u>Step 4</u> Click **Save** to finish configuration.

# 4.8.4 Safety Management

Set RTSP authentication, IP filter, system service and HTTPS to secure data transmission and prevent data leakage.

# 4.8.4.1 Configuring RTSP Authentication

RTSP (Real Time Streaming Protocol) is to secure transmission of streaming media.

<u>Step 1</u> Select Setting > System > Security > RTSP Authentication.

The RTSP Authentication interface is displayed. See Figure 4-96.

Figure 4-96 RTSP authentication

<b>RTSP</b> Authentication	IP Filter	System Service	HTTPS
Authorize Mode	Digest	•	
Default	Refresh	Save	

<u>Step 2</u> Select an authentication mode. Step 3 Click **Save**.

# 4.8.4.2 Configuring IP Filter

To secure the network environment and protect your data, you can use IP filter to set who can and who cannot access your device.

- White list: Only users whose IP/MAC are on the white list can access your device.
- Black list: Only users whose IP/MAC are on the black list cannot access your device.
- Only when IP addresses of both your device and your PC are located in the same LAN, can MAC verification takes effect.



- When accessing through WAN, you can only use MAC of your router to limit MAC verification.
- You cannot enable white list and black list at the same time.
- You cannot add your device IP/MAC to the white list.

#### <u>Step 1</u> Select Setting > System > Safety > IP Filter.

The **IP Filter** interface is displayed. See Figure 4-97.

Figure 4-97 IP filter

RTSP	Authentication IP Filter System Service HTTPS		C C C C C C C C C C C C C C C C C C C
_	Enable		
	Trusted Sites BannedList		
	IP address /MAC address	Modify	Delete
	Add IPMAC		Remove All
	Default Refresh Save		

<u>Step 2</u> Select the check box of **Enable**.

- Add an IP/Mac address to the white list.
- Click the Trusted Sites tab. The Trusted Sites interface is displayed.
- 2) Click Add IP/MAC.
  - The dialogue box of Add IP/MAC is displayed.
- 3) Set IP/MAC address. See Table 4-48.

#### Table 4-48 IP/MAC address parameters description (trusted sites)

Parameter	Description
IP address	IP address you are going to authorize.
IP segment	Start address and end address of the IP segment.
MAC address	MAC address you are going to authorize.

- 4) Click Save.
- Add an IP/Mac address to the black list.
- Click the Banned List tab. The Banned List interface is displayed.
- Click Add IP/MAC.
   The dialogue box of Add IP/MAC is displayed.
- 3) Set IP/MAC address. See Table 4-49.

#### Table 4-49 IP/MAC address parameters description (banned list)

Parameter	Description
IP address	IP address you are going to prohibit.
IP segment	Start address and end address of the IP segment.
MAC address	MAC address you are going to prohibit.

4) Click Save.

Step 3 Click Save to finish configuration.

# 4.8.4.3 Configuring System Service

You can set functions such as SSH, password reset, CGI service, Onvif service, genetec service, audio and video transmission encryption and mobile push.

# <u>Step 1</u> Select Setting > System > Safety > System Service.

The **System Service** interface is displayed. See Figure 4-98.

Figure 4-98 System service

RTSP Authentication	IP Filter	System Service	HTTPS		
SSH Multicast/Broadcast	Enable				
Password Reset	Enable				
CGI Service	Enable				
Onvif Service Genetec Service	<ul><li>Enable</li><li>Enable</li></ul>				
Audio and Video Tr	Enable	*Please make sur	e matched device or so	ftware supports video	decryption function.
Mobile Push	Enable				
Default	Refresh	Save			

Parameter	Description	
	Disabled by default.	
SSH	SSH (Secure Shell) can encode your data for its transmission. By this	
3311	way, data leakage can be prevented when you manage your device	
	remotely.	
	Enabled by default.	
Password Reset		
	If you choose to disable this function, then you can only restore hardware	
	to reset password.	
	Enabled by default.	
CGI Service	Enable CGI (Common Gateway Interface) and then you can use your	
browser to get data from the server.		
	Enabled by default.	
Onvif Service	Enable Onvif service to connect your device to network video products	
Onvir Gervice	(front ends of both vidicons and video recorders, and video recorders	
	included) by other manufacturers.	
Genetec Service	Enabled by default.	
	Disabled by default.	
Audio and Video	• If you enable this function, ensure the matching devices or software	
Transmission	can decode audio and video you have encoded.	
Encryption	• Transmission of audio and video between your device and the	
	third-party platform cannot be encoded. So, for data security, we	
	recommend you to disable CGI service and Onvif service.	

Table 4-50 System service parameters description

Parameter	Description
Mobile Push	Enabled by default. Snapshots under alarm condition can be delivered to
	your phone.

Step 3 Click Save.

# 4.8.4.4 Configuring HTTPS

With HTTPS, you can install customized certificates or signed certificates. You can also obtain and install a root certificate.

After installing customized certificates or signed certificates to your device, you need to install a root certificate to your PC. By this, your PC will log in the Device normally through HTTPS and guarantee your data security.

# 4.8.4.4.1 Creating and Installing Customized Certificates

#### <u>Step 1</u> Select **Setup > Network > HTTPS**.

The HTTPS interface is displayed. See Figure 4-99.

Figure 4-99 HTTPS

RTSP Authentication	IP Filter	System Service	HTTPS			
Enable HTTPS						
Create Certificate						
Create						
Request Created						
Request Created				Delete	install	Download
Install Signed Certific	ate					
Certificate Path				Browse		
Certificate Key Path				Browse	Upload	
Certificate Installed						
Certificate Installed				Delete		
Attribute						
	Refresh	Save				

Step 2 Create a certificate.

1) Click **Create**.

The dialog box of HTTPS is displayed. See Figure 4-100.

HTTPS		×
Country		*e.g. CN
		*
IP or Domain name		]
Validity Period	365	Day*Range :1-5000
Province	none	
Location	none	
Organization	none	
Organization Unit	none	
Email		
_		
	Create Car	ncel

Figure 4-100 Certificate creating

2) Configure HTTPS parameters. See Table 4-51.

Parameter	Description
Country	Abbreviation of a country. Limited to 2 capital letters.
IP or Domain Name	IP address or domain name of your device
Validity period	Validity period of the certificate.
Province	Province where you use this certificate.
Location	Location where you use this certificate.
Organization	Organization that uses this certificate.
Organization Unit	Name of organization unit that uses this certificate.
Email	Email of a person or a company who uses this certificate.

3) Click Create.

Requests created will be displayed.

- <u>Step 3</u> Click **Install** to start installation. After that, certificate property will be displayed in the **Certificate Installed** bar of the **HTTPS** interface.
  - $\square$

Click **Delete** near the **Certificate Installed** bar of the **HTTPS** interface to delete an installed certificate.

- <u>Step 4</u> Click **Save** to store the root certificate.
- <u>Step 5</u> Install the root certificate.
  - 1) Double-click RootCert. cer you have saved.

The dialog box of **Certificate** is displayed. See Figure 4-101.

Figure 4-101 Certificate

8	Certificate Information
inst	s CA Root certificate is not trusted. To enable trust, tall this certificate in the Trusted Root Certification thorities store.
	Issued to: test
	Issued by: test
	Valid from 2016/ 7/ 8 to 2020/ 7/ 7
	Install Certificate Issuer Statemer

#### 2) Click Install Certificate.

The **Certificate Import Wizard** interface is displayed. See Figure 4-102. Figure 4-102 Certificate import wizard



3) Click Next.

The certificate store selection interface is displayed.

Figure 4-103 Certificate store

	te Store
Cer	ificate stores are system areas where certificates are kept.
	dows can automatically select a certificate store, or you can specify a location fo certificate.
(	Automatically select the certificate store based on the type of certificate
(	Place all certificates in the following store
	Certificate store:
	Trusted Root Certification Authorities Browse
Learn mo	re about <u>certificate stores</u>

- 4) Select "Place all certificates in the following store." Click **Browse** and set the "Trusted Root Certification Authorities" as certificate store.
- 5) Click Next.

The certificate import completing wizard is displayed. See Figure 4-104.

Figure 4-104 Certificate import wizard completing

	Completing the Certi Wizard The certificate will be imported af	ter you dick Finish.
*	You have specified the following s Certificate Store Selected by Us Content	
	۲ (III)	4
	< Back	Finish Cancel

6) Click Finish.

The security warning interface is displayed. See Figure 4-105.

#### Figure 4-105 Security warning

<u>î</u>	You are about to install a certificate from a certification authority (CA) claiming to represent:
	test
	Windows cannot validate that the certificate is actually from "test". Yo should confirm its origin by contacting "test". The following number will assist you in this process:
	Thumbprint (sha1): 6D811FD2 E82313A8 663514ED 2CA36E6B 7D425FA
	Warning: If you install this root certificate, Windows will automatically trust any certificate issued by this CA. Installing a certificate with an unconfirme thumbprint is a security risk. If you click "Yes" you acknowledge this risk.
	Do you want to install this certificate?

7) Click Yes.

The system pops up a messaged that indicates the import was successful. See Click **OK** to finish certificate importing.

Figure 4-106 Successful import prompt

Certificate In	port Wizard	
1	he import was succe	ssful.
		ОК

- 8) Click **OK** to finish installation of root certificate.
- <u>Step 6</u> Enable HTTPS and a prompt that the Device needs to be rebooted is displayed. After your device reboots, type IP address of the Device in your browser and access the Device through HTTPS protocol.

#### 4.8.4.4.2 Installing Signed Certificate

Get a signed certificate and its password from the digital signature institute. And import the certificate and its password to the Device.

#### <u>Step 1</u> Select **Setting > Network > HTTPS**.

The **HTTPS** interface is displayed. See Figure 4-107.

# Figure 4-107 HTTPS

RTSP Authentication	IP Filter	System Service	HTTPS			
Enable HTTPS						
Create Certificate						
Create						
Request Created						
Request Created				Delete	Install	Download
Install Signed Certific	ate					
Certificate Path				Browse		
Certificate Key Path				Browse	Upload	
Certificate Installed						
Certificate Installed				Delete		
Attribute						
	Refresh	Save				

- <u>Step 2</u> Install a certificate that has been signed.
  - 1) Click **Browse** on the right side of **Certificate Path** bar to select a certificate you are to upload.
  - 2) Click **Browse** on the right side of **Certificate Key Path** bar to select the certificate password you are to upload.
- Step 3 Click Upload.

Installation begins. After that, certificate property will be displayed in the **Certificate Installed** bar of the **HTTPS** interface.

 $\square$ 

Click **Delete** near the **Certificate Installed** bar of the **HTTPS** interface to delete a certificate installed.

- Step 4 Click Save to store the root certificate.
- <u>Step 5</u> Install the root certificate.
  - 1) Click RootCert. cer you have saved.

The dialog box of **Certificate** is displayed. See Figure 4-108.

Figure 4-108 Certificate

3	Certificate Information
ins	is CA Root certificate is not trusted. To enable trust, tall this certificate in the Trusted Root Certification thorities store.
	Issued to: test
	Issued by: test
	Valid from 2016/ 7/ 8 to 2020/ 7/ 7
	Install Certificate Issuer Statemer

# 2) Click Install Certificate.

The **Certificate Import Wizard** interface is displayed. See Figure 4-109. Figure 4-109 Certificate import wizard

Welcome to the Certificate Import Wizard
This wizard helps you copy certificates, certificate trust lists, and certificate revocation lists from your disk to a certificate store. A certificate, which is issued by a certification authority, is a confirmation of your identity and contains information used to protect data or to establish secure network connections. A certificate store is the system area where certificates are kept. To continue, click Next.

3) Click Next.

The certificate store selection interface is displayed. See Figure 4-110.

Figure 4-110 Certificate store

	te Store
Cer	tificate stores are system areas where certificates are kept.
	dows can automatically select a certificate store, or you can specify a location for certificate.
	Automatically select the certificate store based on the type of certificate
	Place all certificates in the following store
	Certificate store:
	Trusted Root Certification Authorities Browse
earn m	pre about <u>certificate stores</u>

- 4) Select "Place all certificates in the following store." Click **Browse** and set the trusted root certificate authority as certificate store.
- 5) Click Next.

The certificate import completing wizard is displayed. See Figure 4-111.

Figure 4-111 Certificate import wizard completing

Completing the Cert Wizard The certificate will be imported a	
You have specified the following Certificate Store Selected by U Content	
4 III	

6) Click Finish.

The security warning interface is displayed. See Figure 4-112.

#### Figure 4-112 Security warning



7) Click Yes.

The system pops up a messaged that indicates the import was successful. See Figure 4-113. Click **OK** to finish certificate importing.

Figure 4-113 Successful import prompt

izard X
ort was successful.
ОК

- 8) Click **OK** to finish installation of root certificate.
- <u>Step 6</u> Enable HTTPS and a prompt that the Device needs to be rebooted is displayed. After your device reboots, type IP address of the Device in your browser and access the Device through HTTPS protocol.

# System Maintenance

# **5.1 Maintenance Requirements**

For the system's good and safe running, it's recommended to manage and maintain the system, backup files with the following methods.

- Check surveillance images regularly.
- Clear regularly user and user group information that are not frequently used.
- Modify your password every 3 months.
- Check your system logbook regularly. Handle problems as soon as possible.
- Backup your configuration of system regularly.
- Regularly check your files and delete the old ones.
- Upgrade firmware regularly.

# 5.2 Auto Maintenance


You can configure settings such as "time of when to self-reboot" "rebooting device manually" and "deleting files automatically."

# 5.2.1 Rebooting Device

#### <u>Step 1</u> Select Setting > System > Auto Maintain.

The Auto Maintain interface is displayed. See Figure 5-1.

Figure 5-1 Auto maintain

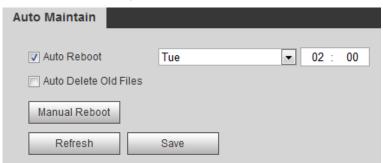

#### Step 2 Reboot this Device.

- Auto reboot: Select **Auto Reboot** and set a reboot time you need. Then click **Save**.
- Manual reboot: Click **Manual Reboot** and a dialogue box is displayed. Click **OK** in this dialogue box and your Device is rebooted at once.

# 5.2.2 Deleting Old Files

You can enable this function to delete recorded videos or images saved in SD card, FTP or NAS server regularly according to the time gap you have set.

<u>Step 1</u> Select Setting > System > Auto Maintain.

The Auto Maintain interface is displayed. See Figure 5-2.

# Figure 5-2 Auto maintain Auto Maintain Image: Auto Reboot Image: Auto Delete Old Files Manual Reboot Refresh Save

- <u>Step 2</u> Enable **Auto Delete Old Files** and select on your own the time gap of deleting the old files. Ranges from 1 to 31 day(s).
- <u>Step 3</u> Click **OK** to finish configuration.

# 5.3 Backing Up and Restoring

# 5.3.1 Importing and Exporting



Files that are exported do not contain presets. To import and export presets, see "3.2.1.4 Configuring Preset Backup" and "3.2.2.4 Configuring Preset Backup."

<u>Step 1</u> Select Setting > System > Import/Export.

The Import/Export interface is displayed. See Figure 5-3.

Figure 5-3	3 Import/Export
Import/Export	
Backup Path	
Immed	- Event
Import	Export

Step 2 Import/Export files.

- Click Export and paths of backing up files are displayed.
- Click **Import** to import files that you have exported and backed up.

# 5.3.2 Default Settings



Be careful when implementing operations such as "restored to default" and "restored to factory default". The operations will result in data loss.

<u>Step 1</u> Select **Setting > System > Default**.

The **Default** interface is displayed. See Figure 5-4.

Figure 5-4 Default setting

Default	
Default	Other configurations will be recovered to default except network IP address, user management and so on.
Factory Default	Completely recover device parameters to factory default.

Step 2 Restore the Device to default setting.

- Click Default, and all the configurations except IP Address and Account are reset.
- Click Factory Default, and all the configurations are reset.

# 5.4 Upgrading Firmware



- If a wrong upgrade file has been used, please reboot the device, otherwise some functions
  might not work properly.
- When upgrading, do not cut off power/network, reboot or turn off the Device.

<u>Step 1</u> Select Setting > System > Upgrade.

The **Upgrade** interface is displayed. See Figure 5-5.

pgrade			
File Upgrade			
Select Firmware File		Browse	Upgrade
Online Henry de			
Online Upgrade			
Auto-check for updates	Save		
System Version	2.622.0000000.0.R, Build Date: 2018-05-02		Manual Check

<u>Step 2</u> Select an upgrading method you need and upgrade the system.

- File Upgrade
- Click **Browse**, and upload upgrade file. The upgrade file should be a .bin file.
- 2) Click **Upgrade** to start the process.
- Online Upgrade

# $\square$

Only when this thermal camera and your computer are both connected to network, can online upgrading be implemented.

Detect your system version.

- ♦ Auto detection: Select Auto-check for updates and click Save. The version is detected automatically.
- ♦ Manual detection: Select Manual Check and the system begins to check the version information.

# **5.5 Version Information**

View device hardware information, system version and web version.

Ш

Versions of different devices might vary, and the actual product shall prevail.

Select **Setting > Information > Version**, and the **Version** interface is displayed. See Figure 5-6.

Figure 5-6 Version							
Version							
_							
Device Type	TPC-BF5400						
System Version	2.622.000000.0.R, Build Date: 2018-05-02						
WEB Version	3.2.1.574049						
ONVIF Version	16.12(V2.4.2.549803)						
S/N	4D0184AYAK0BFC8						
ThermalCamera	2018.4.18						
Version							
Copyright 2018, all	rights reserved.						

# 5.6 System Log

# 5.6.1 Searching System Logs

The log type includes "all, system, setting, data, event, record, account and safety." <u>Step 1</u> Select **Setting > Information > Log**.

The **Log** interface is displayed. See Figure 5-7.

Figure 5-7 Log

Log	Remote Log										
Start Time	2018-06-14	16 :	03 : 04	End Time	2018-06-15	16 :	03 : 04				
Туре	All		Search								
No.				Log Time				Usemame		Log Type	
atailad Informat	ion								 		
	ion								 		
ime:	ion								 		
ime: isemame:	ion								 		
etailed Informat ime: isername: ype: ontent:	ion								 		
ime: isername: ype:	ion								 		
ime: isername: ype:	ion								 		N 4 1/1 > M

Step 2 Set start time and end time, and then select log type.

Parameters	Description
Start Time	Select a time period which you want to search. The earliest start time is January 1, 2000, and the latest end time is
End Time	December 31, 2037.

#### Step 3 Click Search.

The needed logs are displayed. See Figure 5-8.

- Click a log, and then you can view the detailed information in **Detailed Information** area.
- Click **Backup**, and then you can back up all the found logs to your PC. Figure 5-8 Log information

Log	Remote Log			0
	-			
Start Time	2018-06-14		16 : 03 : 04	
Туре	Al	<ul> <li>Search</li> <li>Find 29 log Time 2018-06-14 16:38:34 2018-06</li> </ul>	-15 15:50:49	
No.				Log Type
1		2018-06-15 15:50:49	admin	Login
2		2018-06-15 15:47:44	admin	Logout
3		2018-06-15 15:47:03	admin	Add User E
4		2018-06-15 15:42:36	admin	Login
5		2018-06-15 15:42:21	admin	Logout
6		2018-06-15 15:39:43	admin	Add Group
7		2018-06-15 15:23:49	admin	Save Configuration
8		2018-06-15 15:22:09	admin	Save Configuration
9		2018-06-15 14:54:05	System	Event End
10		2018-06-15 14:54:02	System	Event Begin +
Detailed Informa	ation			
Time:				
Username:				
Type:				
Content				
				K ≤ 1/1 ► H 1 😥
	-			
Backup				

# 5.6.2 Remote View

Enable this function to remotely check logs in your device.

#### <u>Step 1</u> Select **Setting > Information > Log**.

The Remote Log interface is displayed. See Figure 5-9.

Figure 5-9 Remote Log

Log Rem	note Log
Enable	
IP Address	192 . 168 . 0 . 108
Port	514 (1~65534)
Device Number	22 (0~23)
	Default Refresh Save

Step 2 Select the Enable check box.

Step 3 Set IP Address, Port and Device Number. Then click Save.

You need to type remote computer's IP address here.

# 5.7 Online User

View all the current Web users.

Select **Setting > Information > Online User**, and the **Online User** interface is displayed. See Figure 5-10.

Figure 5-10 Online user

Online U	ser				0
	No.	Usemame	User Local Group	IP Address	User Login Time
	1	admin	admin	10.33.12.177	2018-06-15 15:50:49
Refres	h				

# 6.1 Accessing through NVR

Connect this camera to NVR (Network Video Recorder) through Wi-Fi or Ethernet. Then you can set and manage this camera through the NVR's web client.

# Preparation

- Your PC, NVR and your thermal camera are all connected to network.
- You have enabled platform accessing function.
- You have logged in the NVR's web client.

# Procedure

# <u>Step 1</u> Select Setting > Camera > Registration.

The Remote Log interface is displayed. See Figure 6-1.

Figure 6-1 Registration

Regis	tration	Upgrade		_									
Device	e Search	IP Address	•			Sea	irch					Uninitialized Initialize	-
		Status Previe	w	IP Addre	ess	Port De	vice Name	e Ma	anufacture		Туре	MAC Address	
	Add	Manual Add		Modify	IP							Filter None 🔻	)
•		Camera Name	Modify	Delete	Status	IP Address	Port	Device Name		Manufacturer	WEB Browse		
	D19	&conf_img	2	•		192.168.102.122	37777	2F0424BPAN00 074	1	Private	e		
	D20	CAM 20	2	•	-	192.168.102.122	37777	NVD	1	Private	e		
	D21	CAM 21	2	•	-	192.168.102.122	37777	ITC102-IR	1	Private	e		
	D22	CAM 22	2	•		192.168.102.122	40007	1K024B5YAZ00 004	1	Private	e		
	D23	CAM 23	2	•		192.168.102.122	37777	EVS	1	Private	e	EVS5000	
	D24	IPC	2	•		192.168.102.122	37777	2A018CFFAZ00 040	1	Private	e	P2s	
De	elete	Import		Export		Refresh							

# Step 2 Click Search.

After the search, the system displays devices that have been searched.

<u>Step 3</u> Select devices whose IP address needs to be modified and click **Add**. The following list will display information of tunnel with devices. When you log in the

device successfully, the connection condition displays

 $\square$ 

Web client of NVR recognizes by default that username and password for logging in the Device are both "admin." If you have modified your password, add your device manually.

# 6.2 Accessing through SmartPSS

You can set up and manage this thermal camera through SmartPSS client.

# Preparation

- You PC (with SmartPSS installed) and your thermal camera have been both connected to network.
- You have installed and opened SmartPSS.

# Procedure

<u>Step 1</u> Click **Devices** in the homepage.

The **Devices** interface is displayed. See Figure 6-2.

Figure 6-2 Device list

SMAR	T PSS	Devices	+				◆ 0 •	✿ 🕫 — 🗆 × 16:51:54
Q Auto Se	arch $+$ Add	🗊 Delete	🗞 Import	ŷ Export			All Devices: 2	Online Devices: 0
All Devic	ce							
No.								Operation
1	192.168.102.120	192.168.102.120				Offli		🖉 🌣 [🗢 🗓
2	192.168.102.121	192.168.102.121				Offline		🖉 ं [🗢 🗓

<u>Step 2</u> Type the network segment the Device is in, and then click **Search**.

After the search, the system displays devices that have been searched.

<u>Step 3</u> Select devices whose IP address needs to be modified and click **Add**.

The following list will display devices that have been added. When you log in the device successfully, the connection condition displays **Online**.

 $\square$ 

It's set by default that username and password for logging in the client side of SmartPSS are both "admin." If you have modified the password or device port, please add device manually.