



/ DEVICE RESET PROCEDURE

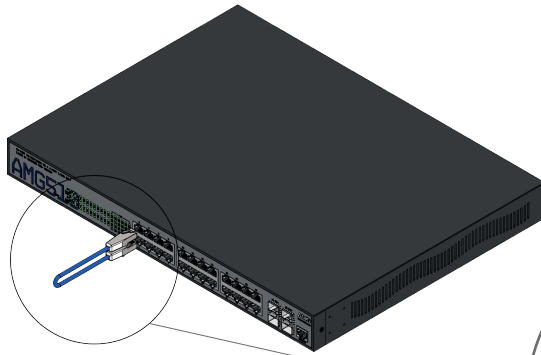

① Remove all connections from the RJ45 & SFP ports.

② Insert an Ethernet patch cable between ports 1 & 2 on the switch.

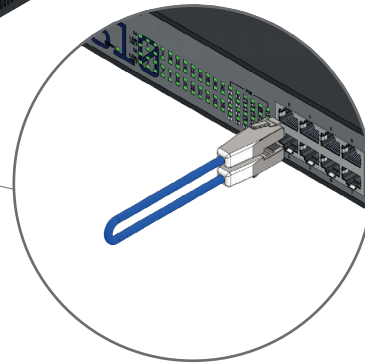

③ Power cycle the switch with the loop-back cable in place and the switch will reboot and apply the factory default configuration settings.

④ Remove the loop-back cable and re-connect the existing Ethernet and optical patch cables.

/ CONNECTING TO THE SWITCH



Web GUI

Default IP Address:	192.168.1.101
Username:	admin
Password:	admin

Console CLI

RJ45 to DB9 Cable	115200,8,N,1
-------------------	--------------

To access the full software user guide for this product please visit the product page using the QR code opposite or the direct link below:

amg-support.com/AMG510-24G-4XS_Series




AMG510-24G-4XS Series 10Gb Layer 2+ Ethernet Switch

Installation Manual - Hardware


AMG
amgsystems.com

AMG510

/ AMG510-24G-4XS SERIES MODELS




AMG510-24G-4XS




AMG510-24GAT-4XS-P460

Model	Description
AMG510-24G-4XS	24 x 10/100/1000T(x) Ports + 4 x 1/2.5/10Gb SFP+ Ports
AMG510-24GAT-4XS-P460	24 x 10/100/1000T(x) Ports With 30W PoE+ (460W Budget) + 4 x 1/2.5/10Gb SFP+ Ports



/ RACK MOUNT INSTALLATION

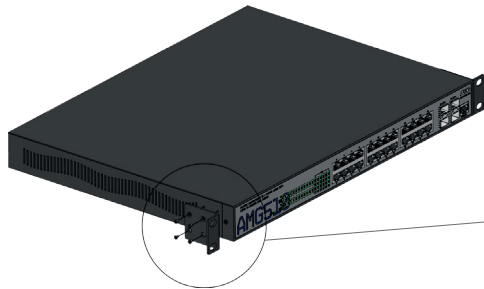


① Attach the rack ears using the screws provided as shown.

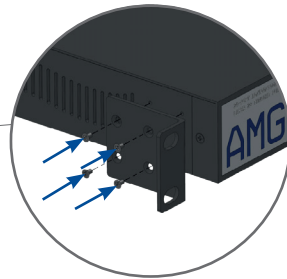

② Secure the unit into the 19inch rack using four cage nuts (not supplied).

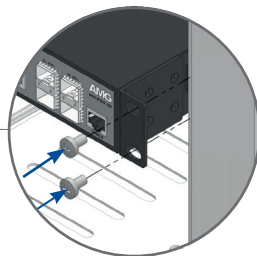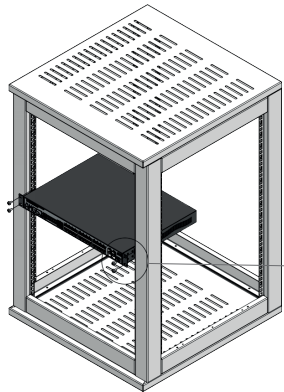


/ DESKTOP INSTALLATION

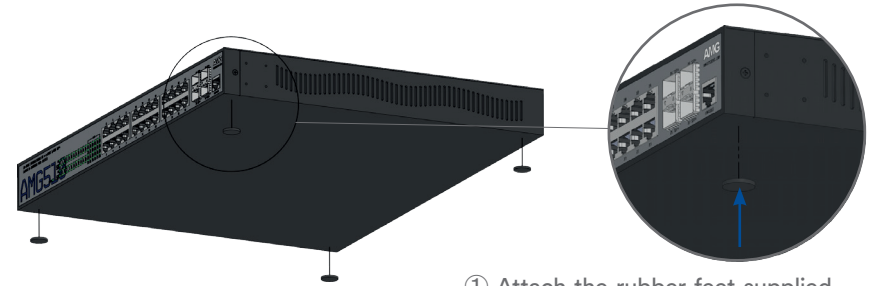

① Attach the rubber feet supplied as shown to prevent scratches.

/ PORTS & LED INDICATORS



LED's

24x 10/100/1000T(x)
Ports

Console
Port

4x 1/2.5/10Gb
SFP+ Ports



Cooling Fan*
*PoE Models Only

Product Label

IEC Mains Input
& Switch

LED	Colour	Description
POWER	Yellow	Power On
LINK/ACT	Green	Link present (flashes with data traffic activity)
1G	Green	Port is connected at 1Gb speed
POE	Yellow	PoE is enabled on the port*

* If a PD is connected and the switch exceeds the maximum PoE budget the PoE LED will start blinking. In this case no power will be provided and the user must allocate power manually.